

**EURO**PROT +

**E2-Line  
configuration description  
(Type: DTVA)**



**Document ID: PP-13-20398  
Budapest, June 2014**

## User's manual version information

Version	Date	Modification	Compiled by
	20. 10. 2011	Preliminary	Petri
1.0	18. 05. 2012	CB1Pol, DisConn, MXU	Kazai, Ferencsik
1.1	15.02.2013	Chapter 1.3.2, 1.3.3 and 1.3.4 added	Kazai
2.0	17.03.2014	The ordering and numbering of chapters re-edited.  Modified: 1.1.3 Hardware configuration Added: 2 External connection	Tóth
2.1	22.06.2014	Minor correction in Chapter 2	Tóth
2.2	17.09.2014	Modified: 2 External connection	Tóth

---

CONTENTS

1	Configuration description.....	4
1.1	Application.....	4
1.1.1	Protection functions .....	4
1.1.2	Measurement functions.....	6
1.1.3	Hardware configuration.....	6
1.1.4	The applied hardware modules .....	8
1.2	Meeting the device .....	9
1.3	Software configuration .....	10
1.3.1	Protection functions .....	10
1.3.1.1	Three-phase instantaneous overcurrent protection function (IOC50) .....	12
1.3.1.2	Three-phase time overcurrent protection function (TOC51) .....	13
1.3.1.3	Three-phase directional overcurrent protection function (TOC67) .....	16
1.3.1.4	Residual instantaneous overcurrent protection function (IOC50N).....	18
1.3.1.5	Residual overcurrent protection function (TOC51N) .....	19
1.3.1.6	Residual directional overcurrent protection function (TOC67N) .....	22
1.3.1.7	Line differential protection function (DIF87L) .....	25
1.3.1.8	Distance protection function (DIS21) .....	27
1.3.1.9	Out of Step (Pole slipping) protection function (PSLIP78) .....	32
1.3.1.10	Switch-onto-fault preparation function (SOTF) .....	34
1.3.1.11	Inrush detection function (INR68).....	36
1.3.1.12	Negative sequence overcurrent protection function (TOC46) .....	38
1.3.1.13	Line thermal protection function (TTR49L) .....	41
1.3.1.14	Definite time overvoltage protection function (TOV59) .....	44
1.3.1.15	Definite time undervoltage protection function (TUV27) .....	45
1.3.1.16	Residual definite time overvoltage protection function (TOV59N) .....	46
1.3.1.17	Over-frequency protection function (TOF81).....	47
1.3.1.18	Underfrequency protection function (TUF81) .....	48
1.3.1.19	Rate of change of frequency protection function (FRC81).....	49
1.3.1.20	Synchrocheck function (SYN25).....	51
1.3.1.21	Auto-reclose protection function (REC79HV) .....	54
1.3.1.22	Voltage transformer supervision function (VTS60) .....	59
1.3.1.23	Current unbalance function (VCB60).....	61
1.3.1.24	Breaker failure protection function (BRF50).....	63
1.3.1.25	Directional over-power protection function (DOP32) .....	65
1.3.1.26	Directional under-power protection function (DUP32) .....	66
1.3.1.27	Phase-selective trip logic (TRC94_PhS) .....	67
1.3.1.28	Dead line detection function (DLD) .....	69
1.3.2	Control functions .....	70
1.3.2.1	Circuit breaker control function block (CB1Pol).....	70
1.3.2.2	Disconnecter control function (DisConn).....	73
1.3.3	Measuring functions.....	75
1.3.3.1	Current input function (CT4).....	77
1.3.3.2	Voltage input function (VT4) .....	80
1.3.3.3	Line measurement function (MXU).....	83
1.3.4	Disturbance recorder .....	89
1.3.5	Event recorder .....	92
1.3.6	TRIP contact assignment.....	97
1.4	LED assignment.....	99
2	External connection.....	100

# 1 Configuration description

The E2-Line protection device is a member of the **EuroProt+** product line, made by Protecta Co. Ltd. The **EuroProt+** type complex protection in respect of hardware and software is a modular device. The modules are assembled and configured according to the requirements, and then the software determines the functions. This manual describes the specific application of the E2-Line factory configuration.

## 1.1 Application

The members of the DTVA product line are configured to protect and control the elements of the high voltage networks. These networks are typically solidly grounded. In these networks the single phase-to-ground faults result high current, so these types of faults need fast protection functions similar to line-to-line faults.

### 1.1.1 Protection functions

The E2-Line configuration measures three phase currents, the zero sequence current component of the parallel line and additionally three phase voltages and the busbar voltage. These measurements allow, in addition to the current- and voltage-based functions, directionality extension of the configured phase overcurrent and residual overcurrent function and also directional overpower or underpower functions.

There are two main protection functions in this application: they are the distance protection function and also the line differential protection function.

The distance protection function can generate three-phase or single phase trip commands, depending on the fault types and the requirements.

The communication hardware module sends and receives phase current vectors to realize the line differential protection function. The choice of the functions is extended with the automatic reclosing function, synchro-check and switch-onto-fault logic.

Based on the voltage measurement also the frequency is evaluated to realize frequency-based protection functions.


The configured protection functions are listed in the Table below.

Protection functions	IEC	ANSI	E2-Line
Three-phase instantaneous overcurrent protection	$I >>>$	50	X
Three-phase time overcurrent protection	$I >, I >>$	51	X
Three-phase directional overcurrent protection	$I \text{ Dir} >, I \text{ Dir} >>$	67	X
Residual instantaneous overcurrent protection	$I_0 >>>$	50N	X
Residual time overcurrent protection	$I_0 >, I_0 >>$	51N	X
Residual directional overcurrent protection	$I_0 \text{ Dir} >, I_0 \text{ Dir} >>$	67N	X
Line differential	$3I_0 L >$	87L	X
Distance protection	$Z <$	21	X
Out-of-step	$\Delta Z / \Delta t$	78	X
Power swing block		68	X
Inrush detection and blocking	$I_{2h} >$	68	X
Negative sequence overcurrent protection	$I_2 >$	46	X
Thermal protection	$T >$	49	X
Definite time overvoltage protection	$U >, U >>$	59	X
Definite time undervoltage protection	$U <, U <<$	27	X
Residual overvoltage protection	$U_0 >, U_0 >>$	59N	X
Negative sequence overvoltage protection	$U_2 >$	47	X
Overfrequency protection	$f >, f >>$	81O	X
Underfrequency protection	$f <, f <<$	81U	X
Rate of change of frequency protection	$df/dt$	81R	X

Synchrocheck	SYNC	25	X
Auto-reclose	0 - > 1	79	X
Fuse failure (VTS)		60	X
Current unbalance protection		60	X
Switch onto fault logic			X
Breaker failure protection	CBFP	50BF	X
Directional overpower	P >	32	X
Directional underpower	P <	32	X

*Table 1 The protection functions of the E2-Line configuration*

The configured functions are drawn symbolically in the Figure below.

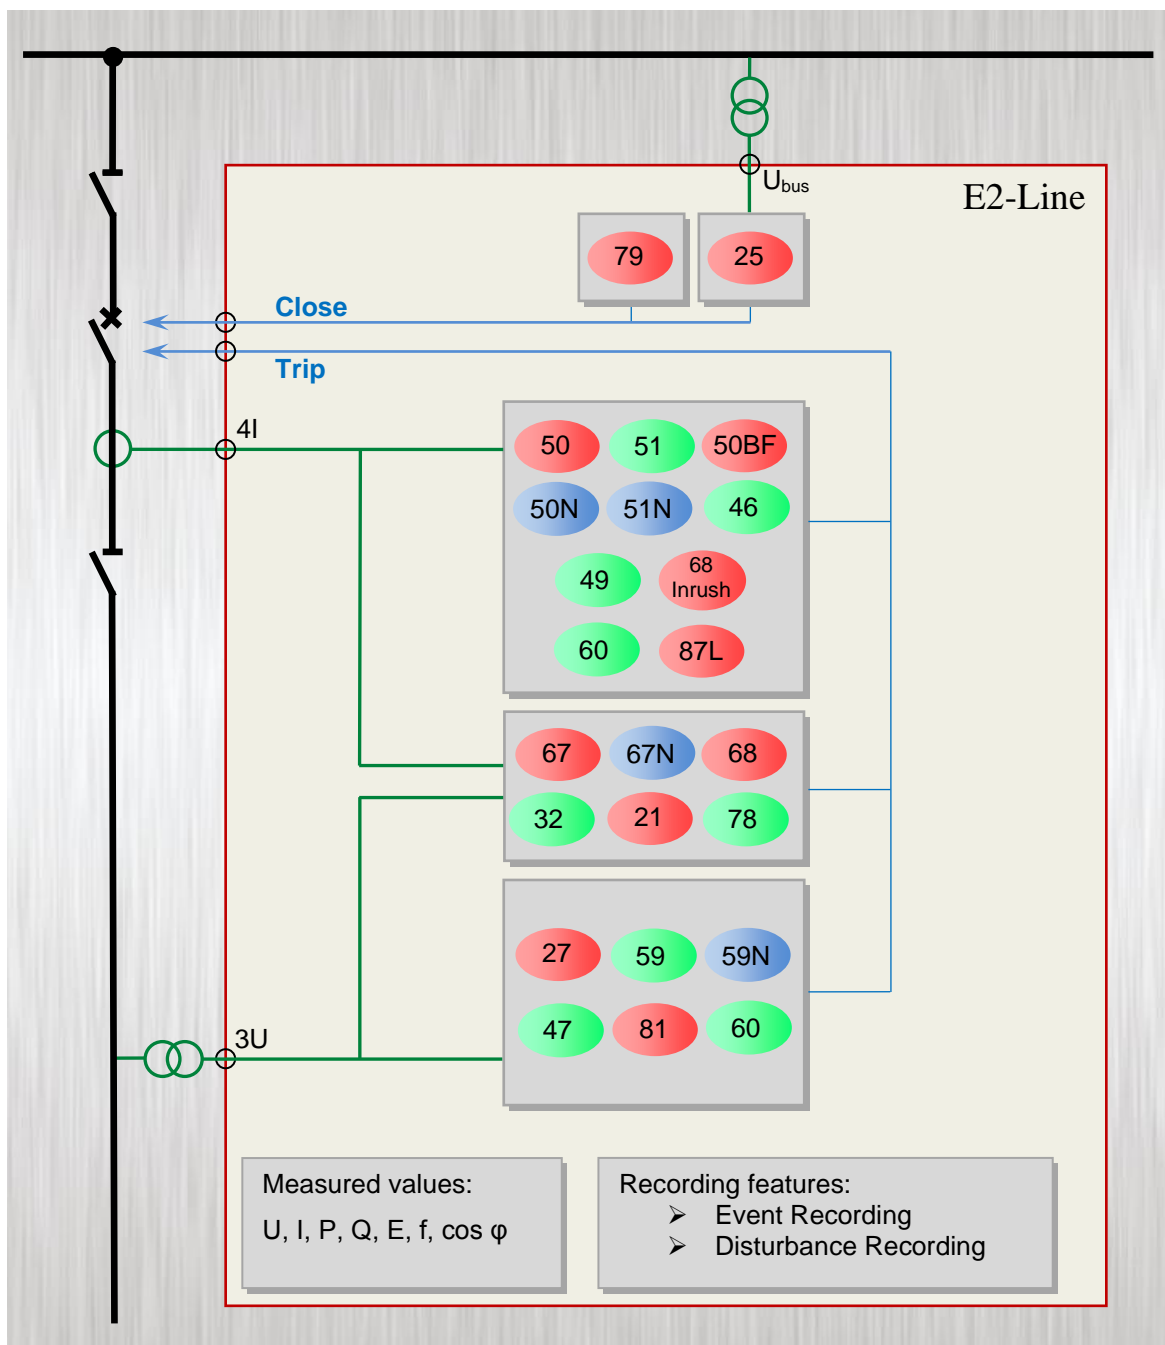

*Figure 1 Implemented protection functions*

### 1.1.2 Measurement functions

Based on the hardware inputs the measurements listed in Table below are available.

Measurement functions	E2-Line
Current (I1, I2, I3, Io)	X
Voltage (U1, U2, U3, U12, U23, U31, Uo, Useq) and frequency	X
Power (P, Q, S, pf) and Energy (E+, E-, Eq+, Eq-)	X
Circuit breaker wear	X
Supervised trip contacts (TCS)	X

Table 2 The measurement functions of the E2-Line configuration

### 1.1.3 Hardware configuration

The minimum number of inputs and outputs are listed in the Table below.

Hardware configuration	ANSI	E2-Line
Mounting		Op.
Panel instrument case		
Current inputs (4th channel can be sensitive)		4
Voltage inputs		4
Digital inputs		12
Digital outputs		8
Fast trip outputs		4
Temperature monitoring (RTDs) *	38 / 49T	Op.

Table 3 The basic hardware configuration of the E2-Line configuration

The basic module arrangement of the E2-Line configuration is shown below.

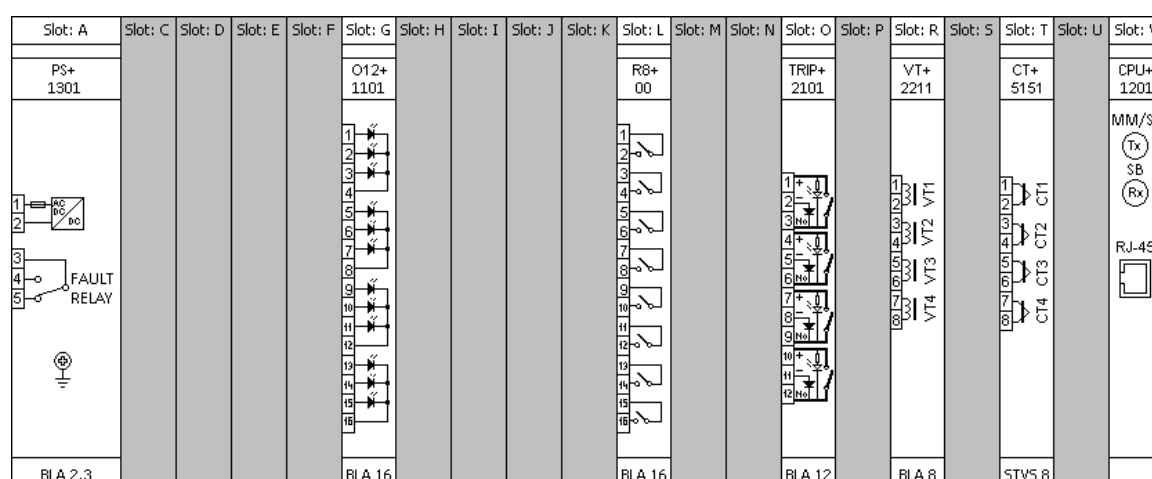


Figure 2 Basic module arrangement of the E2-Line configuration (84TE, rear view)

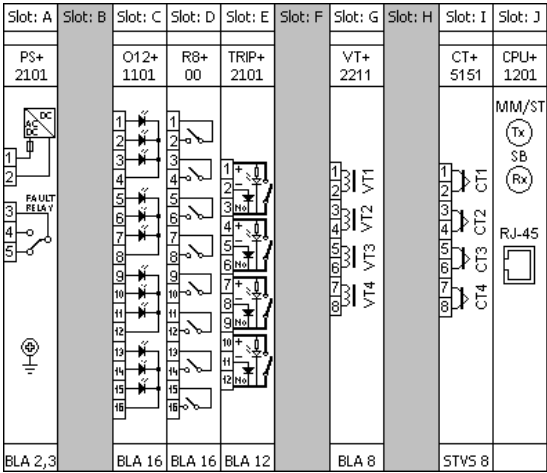


Figure 3 Basic module arrangement of the E2-Line configuration (42TE, rear view)

#### 1.1.4 The applied hardware modules

The applied modules are listed in Table 4.

The technical specification of the device and that of the modules are described in the document “**Hardware description**”.

Module identifier	Explanation
PS+ 1301	Power supply unit (in 84TE )
PS+ 2101	Power supply unit (in 42TE )
PS+ 1301	Power supply unit
O12+ 1101	Binary input module
R8+ 00	Signal relay output module
TRIP+ 2101	Trip relay output module
VT+ 2211	Analog voltage input module
CT + 5151	Analog current input module
CPU+ 1281	Processing and communication module

*Table 4 The applied modules of the E2-Line configuration*



## 1.2 Meeting the device

The basic information for working with the **EuroProt+** devices are described in the document “**Quick start guide to the devices of the EuroProt+ product line**”.



*Figure 4 The 84 inch rack of **EuroProt+** family*



*Figure 5 The 42 inch rack of **EuroProt+** family*

## 1.3 Software configuration

### 1.3.1 Protection functions

The implemented protection functions are listed in Table 5. The function blocks are described in details in separate documents. These are referred to also in this table.

Name	Title	Document
IOC50	3ph Instant.OC	<b><i>Three-phase instantaneous overcurrent protection function block description</i></b>
TOC51_low TOC51_high	3ph Overcurr	<b><i>Three-phase overcurrent protection function block description</i></b>
TOC67_low TOC67_high	3ph Dir.Overcurr	<b><i>Directional three-phase overcurrent protection function block description</i></b>
IOC50N	Residual Instant.OC	<b><i>Residual instantaneous overcurrent protection function block description</i></b>
TOC51N_low TOC51N_high	Residual TOC	<b><i>Residual overcurrent protection function block description</i></b>
TOC67N_low TOC67N_high	Dir.Residual TOC	<b><i>Directional residual overcurrent protection function block description</i></b>
DIF87L	Line differential	<b><i>Line differential protection function block description</i></b>
DIS21_HV	5 zone HV distance	<b><i>Distance protection function block description</i></b>
INR68	Inrush	<b><i>Inrush detection and blocking</i></b>
TOC46	Neg. Seq. OC	<b><i>Negative sequence overcurrent protection function block description</i></b>
TTR49L	Thermal overload	<b><i>Line thermal protection function block description</i></b>
TOV59_high TOV59_low	Overvoltage	<b><i>Definite time overvoltage protection function block description</i></b>
TUV27_high TUV27_low	Undervoltage	<b><i>Definite time undervoltage protection function block description</i></b>
TOV59N_high TOV59N_low	Overvoltage	<b><i>Definite time zero sequence overvoltage protection function block description</i></b>
TOF81_high TOF81_low	Overfrequency	<b><i>Overfrequency protection function block description</i></b>
TUF81_high TUF81_low	Underfrequency	<b><i>Underfrequency protection function block description</i></b>
FRC81	ROC of frequency	<b><i>Rate of change of frequency protection function block description</i></b>
SYN25	Synchrocheck	<b><i>Synchro-check, synchro switch function block description</i></b>
REC79HV	HV Autoreclosing	<b><i>Automatic reclosing function for high voltage networks, function block description</i></b>
VCB60	Current Unbalance	<b><i>Current unbalance function block description</i></b>
VTS60	Voltage transformer supervision	<b><i>Voltage transformer supervision function block description</i></b>
SOTFCond	SOTF Condition	<b><i>Switch-onto-fault preparation function block description</i></b>
BRF50	Breaker failure	<b><i>Breaker failure protection function block description</i></b>
TRC94_PhS	PhSel. Trip Logic	<b><i>Phase-selective trip logic function block description</i></b>
DLD	Dead line detection	<b><i>Dead line detection protection function block description</i></b>
CT4		<b><i>Current input function block description</i></b>
VT4		<b><i>Voltage input function block description</i></b>
CB1Pol		<b><i>Circuit breaker control function block</i></b>

---

		<b><i>descrption</i></b>
DisConn		<b><i>Disconnector control function block descrption</i></b>
MXU		<b><i>Line measurement function block descrption</i></b>

*Table 5 Implemented protection functions*

### 1.3.1.1 Three-phase instantaneous overcurrent protection function (IOC50)

The three-phase instantaneous overcurrent protection function (IOC50) operates immediately if the phase currents are higher than the setting value.

The setting value is a parameter, and it can be doubled by graphic programming of the dedicated input binary signal defined by the user.

The function is based on peak value selection or on the RMS values of the Fourier basic harmonic calculation, according to the parameter setting. The fundamental Fourier components are results of an external function block.

Parameter for type selection has selection range of Off, Peak value and Fundamental value. When Fourier calculation is selected then the accuracy of the operation is high, the operation time however is above one period of the network frequency. If the operation is based on peak values then fast sub-cycle operation can be expected, but the transient overreach can be high.

The function generates trip commands without additional time delay if the detected values are above the current setting value.

The function generates trip commands for the three phases individually and a general trip command as well.

The instantaneous overcurrent protection function has a binary input signal, which serves the purpose of disabling the function. The conditions of disabling are defined by the user, applying the graphic equation editor.

#### Technical data

##### Function

##### Accuracy

##### Using peak value calculation

Operating characteristic	Instantaneous	<6%
Reset ratio	0.85	
Operate time at $2 \cdot I_s$	<15 ms	
Reset time *	< 40 ms	
Transient overreach	90 %	

##### Using Fourier basic harmonic calculation

Operating characteristic	Instantaneous	<2%
Reset ratio	0.85	
Operate time at $2 \cdot I_s$	<25 ms	
Reset time *	< 60 ms	
Transient overreach	15 %	

\*Measured with signal contacts

Table 6 Technical data of the instantaneous overcurrent protection function

#### Parameters

##### Enumerated parameter

Parameter name	Title	Selection range	Default
Parameter for type selection			
IOC50_Oper_EPar_	Operation	Off, Peak value, Fundamental value	Peak value

Table 7 The enumerated parameter of the instantaneous overcurrent protection function

##### Integer parameter

Parameter name	Title	Unit	Min	Max	Step	Default
Starting current parameter:						
IOC50_StCurr_IPar_	Start Current	%	20	3000	1	200

Table 8 The integer parameter of the instantaneous overcurrent protection function

### 1.3.1.2 Three-phase time overcurrent protection function (TOC51)

The overcurrent protection function realizes definite time or inverse time characteristics according to IEC or IEEE standards, based on three phase currents. The characteristics are harmonized with IEC 60255-151, Edition 1.0, 2009-08. This function can be applied as main protection for medium-voltage applications or backup or overload protection for high-voltage network elements.

The definite (independent) time characteristic has a fixed time delay when the current is above the starting current  $I_s$  previously set as a parameter.

The standard operating characteristics of the inverse time overcurrent protection function are defined by the following formula:

$$t(G) = TMS \left[ \frac{k}{\left( \frac{G}{G_s} \right)^\alpha - 1} + c \right] \text{ when } G > G_s$$

where

$t(G)$ (seconds)

$k, c$

$\alpha$

$G$

$G_s$

$TMS$

theoretical operate time with constant value of  $G$ ,  
constants characterizing the selected curve (in seconds),  
constants characterizing the selected curve (no dimension),  
measured value of the characteristic quantity, Fourier base harmonic  
of the phase currents (IL1Four, IL2Four, IL3Four),  
preset value of the characteristic quantity (Start current),  
preset time multiplier (no dimension).

	IEC ref	Title	$k_r$	$c$	$\alpha$
1	A	IEC Inv	0,14	0	0,02
2	B	IEC VeryInv	13,5	0	1
3	C	IEC ExtInv	80	0	2
4		IEC LongInv	120	0	1
5		ANSI Inv	0,0086	0,0185	0,02
6	D	ANSI ModInv	0,0515	0,1140	0,02
7	E	ANSI VeryInv	19,61	0,491	2
8	F	ANSI ExtInv	28,2	0,1217	2
9		ANSI LongInv	0,086	0,185	0,02
10		ANSI LongVeryInv	28,55	0,712	2
11		ANSI LongExtInv	64,07	0,250	2

The end of the effective range of the dependent time characteristics ( $G_D$ ) is:

$$G_D = 20 * G_s$$

Above this value the theoretical operating time is definite:

$$t(G) = TMS \left[ \frac{k}{\left( \frac{G_D}{G_s} \right)^\alpha - 1} + c \right] \text{ when } G > G_D = 20 * G_s$$

Additionally a minimum time delay can be defined by a dedicated parameter. This delay is valid if it is longer than  $t(G)$ , defined by the formula above.

Resetting characteristics:

- for IEC type characteristics the resetting is after a fix time delay defined by TOC51\_Reset\_TPar\_ (Reset delay),
- for ANSI types however according to the formula below:

$$t_r(G) = TMS \left[ \frac{k_r}{1 - \left( \frac{G}{G_s} \right)^\alpha} \right] \text{ when } G < G_s$$

where

$t_r(G)$ (seconds)

$k_r$

$\alpha$

$G$

$G_s$

$TMS$

theoretical reset time with constant value of  $G$ ,  
 constants characterizing the selected curve (in seconds),  
 constants characterizing the selected curve (no dimension),  
 measured value of the characteristic quantity, Fourier base harmonic  
 of the phase currents,  
 preset value of the characteristic quantity (Start current),  
 preset time multiplier (no dimension).

	IEC ref	Title	$k_r$	$\alpha$
1	A	IEC Inv	Resetting after fix time delay, according to preset parameter TOC51_Reset_TPar_ "Reset delay"	
2	B	IEC VeryInv		
3	C	IEC ExtInv		
4		IEC LongInv		
5		ANSI Inv	0,46	2
6	D	ANSI ModInv	4,85	2
7	E	ANSI VeryInv	21,6	2
8	F	ANSI ExtInv	29,1	2
9		ANSI LongInv	4,6	2
10		ANSI LongVeryInv	13,46	2
11		ANSI LongExtInv	30	2

The binary output status signals of the three-phase overcurrent protection function are starting signals of the three phases individually, a general starting signal and a general trip command.

The overcurrent protection function has a binary input signal, which serves the purpose of disabling the function. The conditions of disabling are defined by the user, applying the graphic equation editor.

**Technical data**

Function	Value	Accuracy
Operating accuracy	$20 \leq G_s \leq 1000$	< 2 %
Operate time accuracy		$\pm 5\%$ or $\pm 15$ ms, whichever is greater
Reset ratio	0,95	
Reset time * Dependent time char. Definite time char.	Approx 60 ms	< 2% or $\pm 35$ ms, whichever is greater
Transient overreach		< 2 %
Pickup time *	< 40 ms	
Overshot time Dependent time char. Definite time char.	30 ms 50 ms	
Influence of time varying value of the input current (IEC 60255-151)		< 4 %

\* Measured with signal relay contact

Table 9 Technical data of of the instantaneous overcurrent protection function

**Parameters****Enumerated parameters**

Parameter name	Title	Selection range	Default
Parameter for type selection			
TOC51_Oper_EPar_	Operation	Off, DefinitTime, IEC Inv, IEC VeryInv, IEC ExtInv, IEC LongInv, ANSI Inv, ANSI ModInv, ANSI VeryInv, ANSI ExtInv, ANSI LongInv, ANSI LongVeryInv, ANSI LongExtInv	Definit Time

Table 10 The enumerated parameters of the time overcurrent protection function

**Integer parameter**

Parameter name	Title	Unit	Min	Max	Step	Default
Starting current parameter:						
TOC51_StCurr_IPar_	Start Current	%	20	1000	1	200

Table 11 The integer parameter of the time overcurrent protection function

**Float point parameter**

Parameter name	Title	Unit	Min	Max	Step	Default
Time multiplier of the inverse characteristics (OC module)						
TOC51_Multip_FPar_	Time Multiplier	sec	0.05	999	0.01	1.0

Table 12 The float point parameter of the time overcurrent protection function

**Timer parameters**

Parameter name	Title	Unit	Min	Max	Step	Default
Minimal time delay for the inverse characteristics:						
TOC51_MinDel_TPar_	Min Time Delay *	msec	0	60000	1	100
Definite time delay:						
TOC51_DefDel_TPar_	Definite Time Delay **	msec	0	60000	1	100
Reset time delay for the inverse characteristics:						
TOC51_Reset_TPar_	Reset Time*	msec	0	60000	1	100

\*Valid for inverse type characteristics

\*\*Valid for definite type characteristics only


Table 13 The timer parameters of the time overcurrent protection function

### 1.3.1.3 Three-phase directional overcurrent protection function (TOC67)

The directional three-phase delayed overcurrent protection function can be applied on solidly grounded networks, where the overcurrent protection must be supplemented with a directional decision.

The inputs of the function are the Fourier basic harmonic components of the three phase currents and those of the three phase voltages and the three line-to-line voltages.

Based on the measured voltages and currents from among the six loops (L1L2, L2L3, L3L1, L1N, L2N, L3N), the function selects the one with the smallest calculated loop impedance. Based on the loop voltage and loop current of the selected loop, the directional decision generates a signal of TRUE value if the voltage and the current is sufficient for directional decision, and the angle difference between the vectors is within the setting range. This decision enables the output start and trip signal of a non-directional three-phase overcurrent protection function block, based on the selected current.

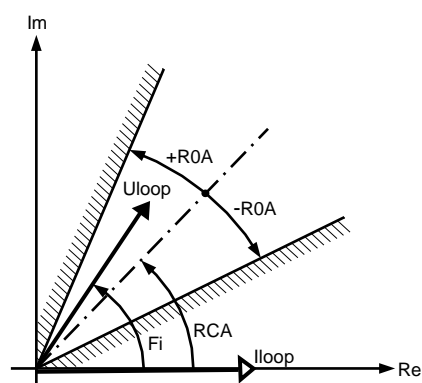

The function can be enabled or disabled by a parameter. The status signal of the VTS (voltage transformer supervision) function can also disable the directional operation.

The voltage must be above 5% of the rated voltage and the current must also be measurable.

If the voltages are below 5% of the rated voltage then the algorithm substitutes the small values with the voltages stored in the memory.

The directional decision module calculates the phase angle between the selected loop voltage and the loop current. The reference signal is the current according to Figure.

The three-phase non-directional delayed overcurrent function block (TOC51) is described in a separate document. The additional input binary signal enables the operation of the OC function if the directional decision module generates a logic TRUE value, indicating that the phase angle is in the range defined by the preset parameters or that non-directional operation is set by a parameter.

#### Technical data

Function	Value	Accuracy
Operating accuracy		< 2 %
Operate time accuracy	If Time multiplier is >0.1	±5% or ±15 ms, whichever is greater
Accuracy in minimum time range		±35 ms
Reset ratio	0.95	
Reset time	Approx 100 ms	
Transient overreach	2 %	
Pickup time	<100 ms	
Memory storage time span		
50 Hz	70 ms	
60 Hz	60 ms	
Angular accuracy		<3°

Table 14 Technical data of the three-phase directional overcurrent protection function



**Parameters****Enumerated parameters**

Parameter name	Title	Selection range	Default
Directionality of the function			
TOC67_Dir_EPar_	Direction	NonDir, Forward, Backward	Forward
Operating characteristic selection of the TOC51 module			
TOC67_Oper_EPar_	Operation	Off, DefiniteTime, IEC Inv, IEC VeryInv, IEC ExtInv, IEC LongInv, ANSI Inv, ANSI ModInv, ANSI VeryInv, ANSI ExtInv, ANSI LongInv, ANSI LongVeryInv, ANSI LongExtInv	DefiniteTime

*Table 15 The enumerated parameters of the three-phase directional overcurrent protection function*

**Integer parameters**

Parameter name	Title	Unit	Min	Max	Step	Default
Operating angle (see <i>Figure</i> )						
TOC67_ROA_IPar_	Operating Angle	deg	30	80	1	60
Characteristic angle (see <i>Figure</i> )						
TOC67_RCA_IPar_	Characteristic Angle	deg	40	90	1	60
Start current (OC module)						
TOC67_StCurr_IPar_	Start Current	%	20	1000	1	50

*Table 16 The integer parameters of the three-phase directional overcurrent protection function*

**Float point parameter**

Parameter name	Title	Unit	Min	Max	Digits	Default
Time multiplier of the inverse characteristics (OC module)						
TOC67_Multip_FPar_	Time Multiplier		0.05	999	0.01	1.0

*Table 17 The float point parameter of the three-phase directional overcurrent protection function*

**Timer parameters**

Parameter name	Title	Unit	Min	Max	Step	Default
Minimal time delay for the inverse characteristics (OC module):						
TOC67_MinDel_TPar_	Min. Time	msec	50	60000	1	100
Definite time delay (OC module):						
TOC67_DefDel_TPar_	Definite Time	msec	0	60000	1	100
Reset time delay for the inverse characteristics (OC module):						
TOC67_Reset_TPar_	Reset Time	msec	0	60000	1	100

*Table 18 The timer parameters of the three-phase directional overcurrent protection function*

### 1.3.1.4 Residual instantaneous overcurrent protection function (IOC50N)

The residual instantaneous overcurrent protection function (IOC50N) block operates immediately if the residual current ( $3I_0$ ) is above the setting value. The setting value is a parameter, and it can be doubled by a dedicated binary input signal defined by the user applying the graphic programming.

The function is based on peak value selection or on the RMS values of the Fourier basic harmonic component of the residual current, according to the parameter setting. The fundamental Fourier component calculation is not part of the IOC50N function.

Parameter for type selection has selection range of Off, Peak value and Fundamental value.

The function generates a trip commands without additional time delay if the detected values are above the current setting value.

The residual instantaneous overcurrent protection function has a binary input signal, which serves the purpose of disabling the function. The conditions of disabling are defined by the user, applying the graphic equation editor.

#### Technical data

Function	Accuracy	
Using peak value calculation		
Operating characteristic ( $I > 0.1 I_n$ )	Instantaneous	<6%
Reset ratio	0.85	
Operate time at $2 \cdot I_s$	<15 ms	
Reset time *	< 35 ms	
Transient overreach	85 %	
Using Fourier basic harmonic calculation		
Operating characteristic ( $I > 0.1 I_n$ )	Instantaneous	<3%
Reset ratio	0.85	
Operate time at $2 \cdot I_s$	<25 ms	
Reset time *	< 60 ms	
Transient overreach	15 %	

\*Measured with signal contacts

Table 19 Technical data of the residual instantaneous overcurrent protection function

#### Parameters

##### Enumerated parameter

Parameter name	Title	Selection range	Default
Parameter for type selection			
IOC50N_Oper_EPar_	Operation	Off, Peak value, Fundamental value	Peak value

Table 20 The enumerated parameter of the residual instantaneous overcurrent protection function

##### Integer parameter

Parameter name	Title	Unit	Min	Max	Step	Default
Starting current parameter:						
IOC50N_StCurr_IPar_	Start Current	%	10	400	1	200

Table 21 The integer parameter of the residual instantaneous overcurrent protection function

### 1.3.1.5 Residual overcurrent protection function (TOC51N)

The residual delayed overcurrent protection function can realize definite time or inverse time characteristics according to IEC or IEEE standards, based on the RMS value of the fundamental Fourier component of a single measured current, which can be the measured residual current at the neutral point (3I<sub>0</sub>) or the calculated zero sequence current component. The characteristics are harmonized with IEC 60255-151, Edition 1.0, 2009-08.

The definite (independent) time characteristic has a fixed time delay when the current is above the starting current I<sub>s</sub> previously set as a parameter.

The standard operating characteristics of the inverse time overcurrent protection function are defined by the following formula:

$$t(G) = TMS \left[ \frac{k}{\left( \frac{G}{G_s} \right)^\alpha - 1} + c \right] \text{ when } G > G_s$$

where

t(G)(seconds)

k, c

α

G

G<sub>s</sub>

TMS

theoretical operate time with constant value of G,  
constants characterizing the selected curve (in seconds),  
constant characterizing the selected curve (no dimension),  
measured value of the characteristic quantity, Fourier base harmonic  
of the residual current (INFour),  
preset value of the characteristic quantity (Start current),  
preset time multiplier (no dimension).

	IEC ref		k <sub>r</sub>	c	α
1	A	IEC Inv	0,14	0	0,02
2	B	IEC VeryInv	13,5	0	1
3	C	IEC ExtInv	80	0	2
4		IEC LongInv	120	0	1
5		ANSI Inv	0,0086	0,0185	0,02
6	D	ANSI ModInv	0,0515	0,1140	0,02
7	E	ANSI VeryInv	19,61	0,491	2
8	F	ANSI ExtInv	28,2	0,1217	2
9		ANSI LongInv	0,086	0,185	0,02
10		ANSI LongVeryInv	28,55	0,712	2
11		ANSI LongExtInv	64,07	0,250	2

The end of the effective range of the dependent time characteristics (G<sub>D</sub>) is:

$$G_D = 20 * G_s$$

Above this value the theoretical operating time is definite:

$$t(G) = TMS \left[ \frac{k}{\left( \frac{G_D}{G_s} \right)^\alpha - 1} + c \right] \text{ when } G > G_D = 20 * G_s$$

Additionally a minimum time delay can be defined by a dedicated parameter (Min. Time Delay). This delay is valid if it is longer than t(G), defined by the formula above.

Resetting characteristics:

- for IEC type characteristics the resetting is after a fix time delay,
- for ANSI types however according to the formula below:

$$t_r(G) = TMS \left[ \frac{k_r}{1 - \left( \frac{G}{G_s} \right)^\alpha} \right] \text{ when } G < G_s$$

where

$t_r(G)$ (seconds)

$k_r$

$\alpha$

$G$

$G_s$

TMS

theoretical reset time with constant value of  $G$ ,  
 constants characterizing the selected curve (in seconds),  
 constant characterizing the selected curve (no dimension),  
 measured value of the characteristic quantity, Fourier base harmonic  
 of the residual current,  
 preset value of the characteristic quantity (Start current),  
 preset time multiplier (no dimension).

	IEC ref		$k_r$	$\alpha$
1	A	IEC Inv	Resetting after fix time delay, according to preset parameter TOC51_Reset_TPar_ "Reset delay"	
2	B	IEC VeryInv		
3	C	IEC ExtInv		
4		IEC LongInv		
5		ANSI Inv	0,46	2
6	D	ANSI ModInv	4,85	2
7	E	ANSI VeryInv	21,6	2
8	F	ANSI ExtInv	29,1	2
9		ANSI LongInv	4,6	2
10		ANSI LongVeryInv	13,46	2
11		ANSI LongExtInv	30	2

The binary output status signals of the residual overcurrent protection function are the general starting signal and the general trip command if the time delay determined by the characteristics expired.

The residual overcurrent protection function has a binary input signal, which serves the purpose of disabling the function. The conditions of disabling are defined by the user, applying the graphic equation editor.

#### Technical data

Function	Value	Accuracy
Operating accuracy *	$20 \leq G_s \leq 1000$	< 3 %
Operate time accuracy		$\pm 5\%$ or $\pm 15$ ms, whichever is greater
Reset ratio	0,95	
Reset time * Dependent time char. Definite time char.	Approx 60 ms	< 2% or $\pm 35$ ms, whichever is greater
Transient overreach		2 %
Pickup time	$\leq 40$ ms	
Overshot time Dependent time char. Definite time char.	30 ms 50 ms	
Influence of time varying value of the input current (IEC 60255-151)		< 4 %

\* Measured in version  $I_n = 200$  mA

Table 22 The technical data of the residual overcurrent protection function

**Parameters****Enumerated parameters**

Parameter name	Title	Selection range	Default
Parameter for type selection			
TOC51N_Oper_EPar_	Operation	Off, DefinitTime, IEC Inv, IEC VeryInv, IEC ExtInv, IEC LongInv, ANSI Inv, ANSI ModInv, ANSI VeryInv, ANSI ExtInv, ANSI LongInv, ANSI LongVeryInv, ANSI LongExtInv	Definite Time

*Table 23 The enumerated parameters of the residual overcurrent protection function***Integer parameter**

Parameter name	Title	Unit	Min	Max	Step	Default
Starting current parameter:						
TOC51N_StCurr_IPar_	Start Current *	%	5	200	1	50
TOC51N_StCurr_IPar_	Start Current **	%	10	1000	1	50

\*  $I_n = 1\text{ A or }5\text{ A}$ \*\*  $I_n = 200\text{ mA or }1\text{ A}$ *Table 24 The integer parameter of the residual overcurrent protection function***Float point parameter**

Parameter name	Title	Unit	Min	Max	Step	Default
Time multiplier of the inverse characteristics (OC module)						
TOC51N_Multip_FPar_	Time Multiplier	sec	0.05	999	0.01	1.0

*Table 25 The float parameter of the residual overcurrent protection function***Timer parameters**

Parameter name	Title	Unit	Min	Max	Step	Default
Minimal time delay for the inverse characteristics:						
TOC51N_MinDel_TPar_	Min Time Delay*	msec	0	60000	1	100
Definite time delay:						
TOC51N_DefDel_TPar_	Definite Time Delay**	msec	0	60000	1	100
Reset time delay for the inverse characteristics:						
TOC51N_Reset_TPar_	Reset Time*	msec	0	60000	1	100

\*Valid for inverse type characteristics

\*\*Valid for definite type characteristics only


*Table 26 The timer parameters of the residual overcurrent protection function*

### 1.3.1.6 Residual directional overcurrent protection function (TOC67N)

The main application area of the directional residual delayed overcurrent protection function is an earth-fault protection.

The inputs of the function are the RMS value of the Fourier basic harmonic components of the zero sequence current ( $I_N=3I_0$ ) and those of the zero sequence voltage ( $U_N=3U_0$ ).

The block of the directional decision generates a signal of TRUE value if the  $U_N=3U_0$  zero sequence voltage and the  $I_N=3I_0$  zero sequence current are above the limits

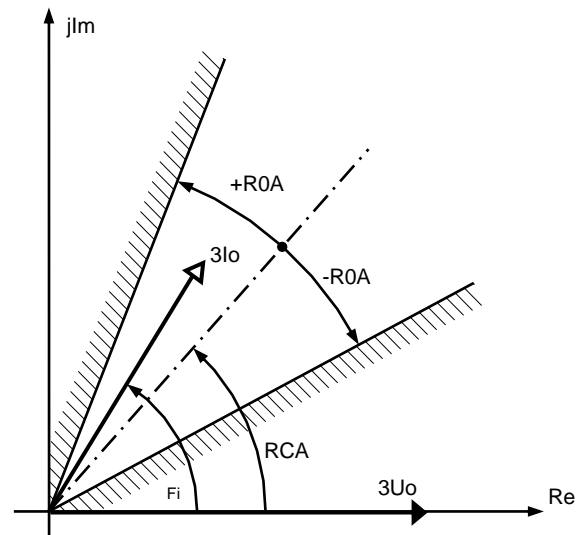

needed for correct directional decision, and the angle difference between the vectors is within the preset range. The decision enables the output start and trip signal of an overcurrent protection function block (TOC51N). This non-directional residual overcurrent protection function block is described in a separate document.

The directional decision module calculates the phase angle between the residual voltage and the residual current. The reference signal is the residual voltage according to the Figure.

The output of the directional decision module is OK, namely it is TRUE if the phase angle between the residual voltage and the residual current is within the limit range defined by the preset parameter OR if non-directional operation is selected by the preset parameter (Direction=NonDir).

#### Technical data

Function	Value	Accuracy
Operating accuracy		$< \pm 2\%$
Operate time accuracy		$\pm 5\%$ or $\pm 15$ ms, whichever is greater
Accuracy in minimum time range		$\pm 35$ ms
Reset ratio	0,95	
Reset time	Approx 50 ms	$\pm 35$ ms
Transient overreach	$< 2\%$	
Pickup time	25 – 30 ms	
Angular accuracy		
$I_0 \leq 0.1 I_n$		$< \pm 10^\circ$
$0.1 I_n < I_0 \leq 0.4 I_n$		$< \pm 5^\circ$
$0.4 I_n < I_0$		$< \pm 2^\circ$
Angular reset ratio		
Forward and backward	$10^\circ$	
All other selection	$5^\circ$	

Table 27 The technical data of the residual directional overcurrent protection function

**Parameters****Enumerated parameters**

Parameter name	Title	Selection range	Default
Directionality of the function			
TOC67N_Dir_EPar_	Direction	NonDir,Forward-Angle,Backward-Angle,Forward-I*cos(fi),Backward-I*cos(fi),Forward-I*sin(fi),Backward-I*sin(fi),Forward-I*sin(fi+45),Backward-I*sin(fi+45)	Forward-Angle
Operating characteristic selection of the TOC51N module			
TOC67N_Oper_EPar_	Operation	Off,DefiniteTime,IEC Inv,IEC VeryInv,IEC ExtInv,IEC LongInv,ANSI Inv,ANSI ModInv,ANSI VeryInv,ANSI ExtInv,ANSI LongInv,ANSI LongVeryInv,ANSI LongExtInv	DefiniteTime

*Table 28 The enumerated parameters of the residual directional overcurrent protection function*

**Short explanation of the enumerated parameter “Direction”**

Selected value	Explanation
NonDir,	Operation according to non-directional TOC51N
Forward-Angle	See <i>Figure</i> , set RCA (Characteristic Angle) and ROA (Operating Angle) as required
Backward-Angle	RCAactual=RCAset+180°, set RCA (Characteristic Angle) and ROA (Operating Angle) as required
Forward-I*cos(fi)	RCA=0°fix, ROA=85°fix, the setting values RCA and ROA are not applied
Backward-I*cos(fi)	RCA=180°fix, ROA=85°fix, the setting values RCA and ROA are not applied
Forward-I*sin(fi)	RCA=90°fix, ROA=85°fix, the setting values RCA and ROA are not applied
Backward-I*sin(fi)	RCA=-90°fix, ROA=85°fix, the setting values RCA and ROA are not applied
Forward-I*sin(fi+45)	RCA=45°fix, ROA=85°fix, the setting values RCA and ROA are not applied
Backward-I*sin(fi+45)	RCA=-135°fix, ROA=85°fix, the setting values RCA and ROA are not applied

*Table 29 The short explanation of the enumerated parameters of the residual directional overcurrent protection function*

**Integer parameters**

Parameter name	Title	Unit	Min	Max	Step	Default
The threshold value for the 3Uo zero sequence voltage, below which no directionality is possible. % of the rated voltage of the voltage transformer input						
TOC67N_UoMin_IPar_	URes Min	%	1	10	1	2
The threshold value for the 3Io zero sequence current, below which no operation is possible. % of the rated current of the current transformer input						
TOC67N_IoMin_IPar_	IRes Min	%	1	50	1	5
Operating angle (See <i>Figure</i> )						
TOC67N_ROA_IPar_	Operating Angle	deg	30	80	1	60
Characteristic angle (See <i>Figure</i> )						
TOC67N_RCA_IPar_	Characteristic Angle	deg	-180	180	1	60
Start current (TOC51N module)						
TOC67N_StCurr_IPar_	Start Current	%	5	200	1	50

*Table 30 The integer parameters of the residual directional overcurrent protection function*

**Float point parameter**

Parameter name	Title	Unit	Min	Step	Step	Default
Time multiplier of the inverse characteristics (TOC51N module)						
TOC67N_Multip_FPar_	Time Multiplier		0.05	999	0.01	1.0

*Table 31 The float point parameter of the residual directional overcurrent protection function*

**Timer parameters**

Parameter name	Title	Unit	Min	Max	Step	Default
Minimal time delay for the inverse characteristics (TOC 51N module):						
TOC67N_MinDel_TPar_	Min Time Delay	msec	50	60000	1	100
Definite time delay (TOC 51N module):						
TOC67N_DefDel_TPar_	Definite Time Delay	msec	0	60000	1	100
Reset time delay for the inverse characteristics (TOC 51N module):						
TOC67N_Reset_TPar_	Reset Time	msec	0	60000	1	100

*Table 32 The timer parameters of the residual directional overcurrent protection function*



### 1.3.1.7 Line differential protection function (DIF87L)

The line differential protection function provides main protection for two terminal transmission lines. The line differential protection function does not apply vector shift compensation, thus transformers must be excluded from the protected section.

The operating principle is based on synchronized Fourier basic harmonic comparison between the line ends.

The devices at both line ends sample the phase currents and calculate the Fourier basic harmonic components. These components are exchanged between the devices synchronized via communication channels. The differential characteristic is a biased characteristic with two break points. Additionally, an unbiased overcurrent stage is applied, based on the calculated differential current.

The EuroProt+ protection devices communicate via fiber optic cables. Generally, mono-mode cables are required, but for distances below 2 km a multi-mode cable may be sufficient. The line differential protection can be applied up to the distance of 120 km. (The limiting factor is the damping of the fiber optic channel: up to 30 dB is permitted to prevent the disturbance of operation.)

The hardware module applied is the CPU module of the EuroProt+ protection device. The two devices are interconnected via the "process bus".

#### Technical data

Function	Value	Accuracy
Operating characteristic	2 breakpoints and unrestrained decision	
Reset ratio	0.95	
Characteristic accuracy ( $I_{bias} > 2 \times I_n$ )		<2%
Operate time ( $I_{bias} > 0.3 \times I_n$ )	Typically 35 ms	
Reset time	Typically 60 ms	

Table 33 Technical data of the line differential protection

#### Parameters

**Enumerated parameter** for the line differential protection function:

Parameter name	Title	Selection range	Default
Parameter to enable the line differential protection function:			
DIFF87L_Oper_EPar_	Operation	Off, On	Off

Table 34 The enumerated parameter of the line differential protection function

#### Integer parameters

Parameter name	Title	Unit	Min	Max	Step	Default
Parameters of the percentage characteristic curve:						
Base sensitivity:						
DIFF87L_f1_IPar_	Base Sensitivity	%	10	50	1	30
Slope of the second section of the characteristics:						
DIFF87L_f21_IPar_	1st Slope	%	10	50	1	30
Slope of the third section of the characteristics:						
DIFF87L_f2_IPar_	2nd Slope	%	50	100	1	70
Bias limit of the first slope:						
DIFF87L_f2Brk_IPar_	1st Slope Bias Limit	%	100	400	1	200
Unrestrained line differential protection current level:						
DIFF87L_HS_IPar_	UnRst Diff Current	%	500	1500	1	800

Table 35 The integer parameters of the line differential protection function

**Floating point parameters**

Parameter name	Title	Unit	Min	Max	Step	Default
DIFF87L_LocalRatio_FPar_	Local Ratio	-	0.10	2.00	0.01	1.00
DIFF87L_RemoteRatio_FPar_	Remote Ratio	-	0.10	2.00	0.01	1.00


*Table 36 The float parameters of the line differential protection function***Timer parameters**

The line differential protection function does not have timers.

### 1.3.1.8 Distance protection function (DIS21)

The distance protection function provides main protection for overhead lines and cables of solidly grounded networks. Its main features are as follows:

- A full-scheme system provides continuous measurement of impedance separately in three independent phase-to-phase measuring loops as well as in three independent phase-to-earth measuring loops.
- The complex earth fault compensation factor is applied for correct impedance measuring on single-phase-to-earth fault.
- Analogue input processing is applied to the zero sequence current of the parallel line.
- Impedance calculation is conditional of the values of phase currents being sufficient. The current is considered to be sufficient for impedance calculation if it is above the level set by parameter.
- To decide the presence or absence of the zero sequence current, biased characteristics are applied.
- Full-scheme faulty phase identification by minimum impedance detection.
- Five independent distance protection zones are configured.
- The operating decision is based on polygon-shaped characteristics.

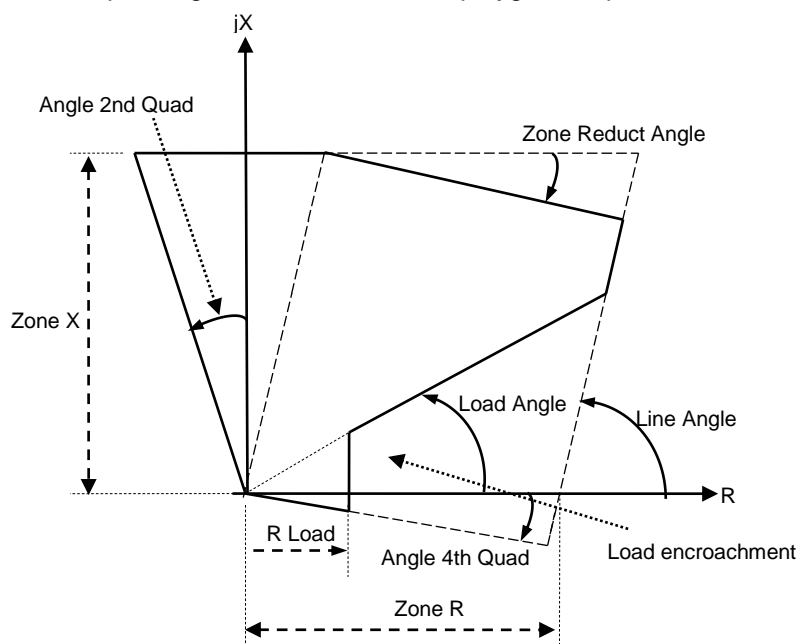

- Load encroachment characteristics can be selected (see Figure) determined by two parameters.
- The directional decision is dynamically based on:
  - measured loop voltages if they are sufficient for decision,
  - healthy phase voltages if they are available for asymmetrical faults,
  - voltages stored in the memory if they are available,
- Directional decision of any zones can be reversed.
- The operation of any zones is non-directional if it is optionally selected.
- The distance protection function can operate properly if CVT is applied as well.
- Non-directional impedance protection function or high speed OC protection function is applied in case of switch-onto-fault.
- Distance-to-fault evaluation is implemented (fault locator function).
- Binary input signals and conditions can influence the operation:
  - blocking/enabling
  - VT failure signal
- Integrated high-speed overcurrent back-up function is also implemented.
- The power swing detection function can block the distance protection function in case of stable swings, or it can generate a trip command if the system operates out of step.

**Technical data**

Function	Range	Accuracy
Number of zones	5	
Rated current $I_n$	1/5A, parameter setting	
Rated voltage $U_n$	100/200V, parameter setting	
Current effective range	20 – 2000% of $I_n$	$\pm 1\%$ of $I_n$
Voltage effective range	2-110 % of $U_n$	$\pm 1\%$ of $U_n$
Impedance effective range $I_n=1A$ $I_n=5A$	0.1 – 200 Ohm 0.1 – 40 Ohm	$\pm 5\%$
Zone static accuracy	48 Hz – 52 Hz	$\pm 5\%$
	49.5 Hz – 50.5 Hz	$\pm 2\%$
Zone angular accuracy		$\pm 3^\circ$
Operate time	Typically 25 ms	$\pm 3$ ms
Minimum operate time	<20 ms	
Reset time	16 – 25 ms	
Reset ratio	1.1	

*Table 37 Technical data of the distance protection function***Measured values**

Measured value	Dim.	Explanation
$ZL1 = RL1+j XL1$	ohm	Measured positive sequence impedance in the L1N loop, using the zero sequence current compensation factor for zone 1
$ZL2 = RL2+j XL2$	ohm	Measured positive sequence impedance in the L2N loop, using the zero sequence current compensation factor for zone 1
$ZL3 = RL3+j XL3$	ohm	Measured positive sequence impedance in the L3N loop, using the zero sequence current compensation factor for zone 1
$ZL1L2 = RL1L2+j XL1L2$	ohm	Measured positive sequence impedance in the L1L2 loop
$ZL2L3 = RL2L3+j XL2L3$	ohm	Measured positive sequence impedance in the L2L3 loop
$ZL3L1 = RL3L1+j XL3L1$	ohm	Measured positive sequence impedance in the L3L1 loop
Fault location	km	Measured distance to fault
Fault react.	ohm	Measured reactance in the fault loop

*Table 38 Measured values of the distance protection function*

**Parameters****Enumerated parameters**

Parameter name	Title	Selection range	Default
Parameters to select directionality of the individual zones:			
DIS21_Z1_EPar_	Operation Zone1	Off, Forward, Backward	Forward
DIS21_Z2_EPar_	Operation Zone2	Off, Forward, Backward, NonDirectional	Forward
DIS21_Z3_EPar_	Operation Zone3	Off, Forward, Backward, NonDirectional	Forward
DIS21_Z4_EPar_	Operation Zone4	Off, Forward, Backward, NonDirectional	Forward
DIS21_Z5_EPar_	Operation Zone5	Off, Forward, Backward, NonDirectional	Backward
Parameters for power swing detection:			
DIS21_PSD_EPar_	Operation PSD	Off, 1 out of 3, 2 out of 3, 3 out of 3	1 out of 3
Parameter enabling “out-of-step” function:			
DIS21_Out_EPar_	Oper OutOfStep	Off, On	Off
Parameter for selecting one of the zones or “high speed overcurrent protection” for the “switch-onto-fault” function:			
DIS21_SOTFMd_EPar_	SOTF Zone	Off, Zone1, Zone2, Zone3, Zone4, Zone5, HSOC	Zone1

*Table 39 The enumerated parameters of the distance protection function***Boolean parameters**

To generate trip command (0) or to indicate starting only (1):

Parameter name	Title	Default	Explanation
DIS21_Z1St_BPar_	Zone1 Start Only	0	0 for Zone1 to generate trip command
DIS21_Z2St_BPar_	Zone2 Start Only	0	0 for Zone2 to generate trip command
DIS21_Z3St_BPar_	Zone3 Start Only	0	0 for Zone3 to generate trip command
DIS21_Z4St_BPar_	Zone4 Start Only	0	0 for Zone4 to generate trip command
DIS21_Z5St_BPar_	Zone5 Start Only	0	0 for Zone5 to generate trip command

*Table 40 The boolean parameters of the distance protection function*

**Integer parameters**

Parameter name	Title	Unit	Min	Max	Step	Default
Definition of minimal current enabling impedance calculation:						
DIS21_Imin_IPar_	I <sub>Ph</sub> Base Sens	%	10	30	1	20
Definition of zero sequence current characteristic enabling impedance calculation in phase-to-earth loops:						
DIS21_IoBase_IPar_	I <sub>Res</sub> Base Sens	%	10	50	1	10
DIS21_IoBias_IPar_	I <sub>Res</sub> Bias	%	5	30	1	10
Definition of the polygon characteristic angle in the 4 <sup>th</sup> quadrant of the impedance plane:						
DIS21_dirRX_IPar_	Angle 4th Quad	deg	0	30	1	15
Definition of the polygon characteristic angle in the 2 <sup>nd</sup> quadrant of the impedance plane:						
DIS21_dirXR_IPar_	Angle 2nd Quad	deg	0	30	1	15
Definition of the polygon characteristic's zone reduction angle on the impedance plane:						
DIS21_Cut_IPar_	Zone Reduct Angle	deg	0	40	1	0
Definition of the load angle of the polygon characteristic:						
DIS21_LdAng_IPar_	Load Angle	deg	0	45	1	30
Definition of the line angle:						
DIS21_LinAng_IPar_	Line Angle	deg	45	90	1	75
Definition of the ratio of the characteristics for power swing detection:						
DIS21_RRat_IPar_	PSD R <sub>out</sub> /R <sub>in</sub>	%	120	160	1	130
DIS21_XRat_IPar_	PSD X <sub>out</sub> /X <sub>in</sub>	%	120	160	1	130
Definition of the overcurrent setting for the switch-onto-fault function, for the case where the DIS21_SOTFMd_EPar_ (SOTF Zone) parameter is set to "HSOC":						
DIS21_SOTFOC_IPar_	SOTF Current	%	10	1000	1	200

*Table 41 The integer parameters of the distance protection function*

**Floating point parameters**

Parameter name	Title	Dim.	Min	Max	Default
R and X setting values for the five zones individually:					
DIS21_Z1R_FPar	Zone1 R	ohm	0.1	200	10
DIS21_Z2R_FPar	Zone2 R	ohm	0.1	200	10
DIS21_Z3R_FPar	Zone3 R	ohm	0.1	200	10
DIS21_Z4R_FPar	Zone4 R	ohm	0.1	200	10
DIS21_Z5R_FPar	Zone5 R	ohm	0.1	200	10
DIS21_Z1X_FPar	Zone1 X	ohm	0.1	200	10
DIS21_Z2X_FPar	Zone2 X	ohm	0.1	200	10
DIS21_Z3X_FPar	Zone3 X	ohm	0.1	200	10
DIS21_Z4X_FPar	Zone4 X	ohm	0.1	200	10
DIS21_Z5X_FPar	Zone5 X	ohm	0.1	200	10
Load encroachment setting:					
DIS21_LdR_FPar	R Load	ohm	0.1	200	10
Zero sequence current compensation factors for the five zones individually:					
DIS21_Z1aX_FPar_	Zone1 (Xo-X1)/3X1		0	5	1
DIS21_Z1aR_FPar_	Zone1 (Ro-R1)/3R1		0	5	1
DIS21_Z2aX_FPar_	Zone2 (Xo-X1)/3X1		0	5	1
DIS21_Z2aR_FPar_	Zone2 (Ro-R1)/3R1		0	5	1
DIS21_Z3aX_FPar_	Zone3 (Xo-X1)/3X1		0	5	1
DIS21_Z3aR_FPar_	Zone3 (Ro-R1)/3R1		0	5	1
DIS21_Z4aX_FPar_	Zone4 (Xo-X1)/3X1		0	5	1
DIS21_Z4aR_FPar_	Zone4 (Ro-R1)/3R1		0	5	1
DIS21_Z5aX_FPar_	Zone5 (Xo-X1)/3X1		0	5	1
DIS21_Z5aR_FPar_	Zone5 (Ro-R1)/3R1		0	5	1
Parallel line coupling factor:					
DIS21_a2X_FPar_	Par Line Xm/3X1		0	5	0
DIS21_a2R_FPar_	Par Line Rm/3R1		0	5	0
Data of the protected line for displaying distance:					
DIS21_Lgth_FPar_	Line Length	km	0.1	1000	100
DIS21_LReact_FPar_	Line Reactance	ohm	0.1	200	10
Characteristics for the power swing detection function:					
DIS21_Xin_FPar	PSD Xinner	ohm	0.1	200	10
DIS21_Rin_FPar	PSD Rinner	ohm	0.1	200	10

Table 42 The floating point parameters of the distance protection function

**Timer parameters**

Parameter name	Title	Unit	Min	Max	Step	Default
Time delay for the zones individually:						
DIS21_Z1Del_TPar_	Zone1 Time Delay	ms	0	60000	1	0
DIS21_Z2Del_TPar_	Zone2 Time Delay	ms	0	60000	1	400
DIS21_Z3Del_TPar_	Zone3 Time Delay	ms	0	60000	1	800
DIS21_Z4Del_TPar_	Zone4 Time Delay	ms	0	60000	1	2000
DIS21_Z5Del_TPar_	Zone5 Time Delay	ms	0	60000	1	2000
Parameters for the power swing detection function:						
DIS21_PSDDel_TPar_	PSD Time Delay	ms	10	1000	1	40
DIS21_PSDSlow_TPar_	Very Slow Swing	ms	100	10000	1	500
DIS21_PSDRes_TPar_	PSD Reset	ms	100	10000	1	500
DIS21_OutPs_TPar_	OutOfStep Pulse	ms	50	10000	1	150

Table 43 The timer parameters of the distance protection function

### 1.3.1.9 Out of Step (Pole slipping) protection function (PSLIP78)

The pole slipping protection function can be applied mainly for synchronous generators. If a generator falls out of synchronism, then the voltage vector induced by the generator rotates slower or with a higher speed as compared to voltage vectors of the network. The result is that according to the frequency difference of the two vector systems, the cyclical voltage difference on the current carrying elements of the network are overloaded cyclically. To protect the stator coils from the harmful effects of the high currents and to protect the network elements, a disconnection is required.

The pole slipping protection function is designed for this purpose.

#### Main features

The main features of the pole slipping protection function are as follows:

- A full-scheme system provides continuous measurement of impedances separately in three independent phase-to-phase measuring loops.
- Impedance calculation is conditional on the values of the positive sequence currents being above a defined value.
- A further condition of the operation is that the negative sequence current component is less than 1/6 of the value defined for the positive sequence component.
- The operate decision is based on quadrilateral characteristics on the impedance plane using four setting parameters.
- The number of vector revolutions can be set by a parameter.
- The duration of the trip signal is set by a parameter.
- Blocking/enabling binary input signal can influence the operation.

#### Technical data

Function	Range	Accuracy
Rated current $I_n$	1/5A, parameter setting	
Rated Voltage $U_n$	100/200V, parameter setting	
Current effective range	20 – 2000% of $I_n$	$\pm 1\%$ of $I_n$
Voltage effective range	2-110 % of $U_n$	$\pm 1\%$ of $U_n$
Impedance effective range $I_n=1A$ $I_n=5A$	0.1 – 200 Ohm 0.1 – 40 Ohm	$\pm 5\%$
Zone static accuracy	48 Hz – 52 Hz	$\pm 5\%$
	49.5 Hz – 50.5 Hz	$\pm 2\%$
Operate time	Typically 25 ms	$\pm 3$ ms
Minimum operate time	<20 ms	
Reset time	16 – 25 ms	

Table 44 The technical data of the pole slip function

#### Parameters

##### Enumerated parameter

Parameter name	Title	Selection range	Default
Parameter for disabling the function			
PSLIP78_Oper_EPar_	Operation	Off, On	Off

Table 45 The enumerated parameter of the pole slip function

##### Integer parameters

Parameter name	Title	Unit	Min	Max	Step	Default
Definition of the number of the vector revolution up to the trip command:						
PSLIP78_MaxCyc_IPar_	Max. cycle number	cycle	1	10	1	1
Definition of the minimal current for the impedance vector calculation						
PSLIP78_I1Low_IPar_	I1LowLimit	%	50	200	1	120

Table 46 Integer parameters of the pole slip function



**Float parameters**

Parameter name	Title	Unit	Min	Max	Digits	Default
R setting of the impedance characteristics in forward direction						
PSLIP78_Rfw_FPar_	R forward	ohm	0.10	150.00	2	10.00
X setting of the impedance characteristics in forward direction						
PSLIP78_Xfw_FPar_	X forward	ohm	0.10	150.00	2	10.00
R setting of the impedance characteristics in backward direction						
PSLIP78_Rbw_FPar_	R backward	ohm	0.10	150.00	2	10.00
X setting of the impedance characteristics in backward direction						
PSLIP78_Xbw_FPar_	X backward	ohm	0.10	150.00	2	10.00

*Table 47 The float parameters of the pole slip function***Timer parameters**

Parameter name	Title	Unit	Min	Max	Step	Default
Time delay for waiting the subsequent revolution						
PSLIP78_Dead_TPar_	Dead time	msec	1000	60000	1	5000
Generated trip impulse duration						
PSLIP78_TrPu_TPar_	Trip pulse	msec	50	10000	1	150

*Table 48 The timer parameters of the pole slip function*

### 1.3.1.10 Switch-onto-fault preparation function (SOTF)

Some protection functions, e.g. distance protection, directional overcurrent protection, etc. also need to decide the direction of the fault. This decision is based on the angle between the voltage and the current. In case of close-up faults, however, the voltage of the faulty loop is near zero: it is not sufficient for a directional decision. If there are no healthy phases, then the voltage samples stored in the memory are applied to decide if the fault is forward or reverse.

If the protected object is energized, the close command for the circuit breaker is received in “dead” condition. This means that the voltage samples stored in the memory have zero values. In this case the decision on the trip command is based on the programming of the protection function for the “switch-onto-fault” condition.

This “switch-onto-fault” detection function prepares the conditions for the subsequent decision.

The function can handle both automatic and manual close commands.

The automatic close command is not an input for this function. It receives the “Dead line” status signal from the DLD (dead line detection) function block. After dead line detection, the AutoSOTF binary output is delayed by a timer with a constant 200 ms time delay. After voltage detection (resetting of the dead line detection input signal), the drop-off of the output signal is delayed by a timer set by the user.

The manual close command is an input binary signal. The drop-off of this signal is delayed by a timer with timing set by the user.

The fault detection is the task of the subsequent distance protection, directional overcurrent protection, etc.

The operation of the “switch-onto-fault” detection function is shown in Figure 6.

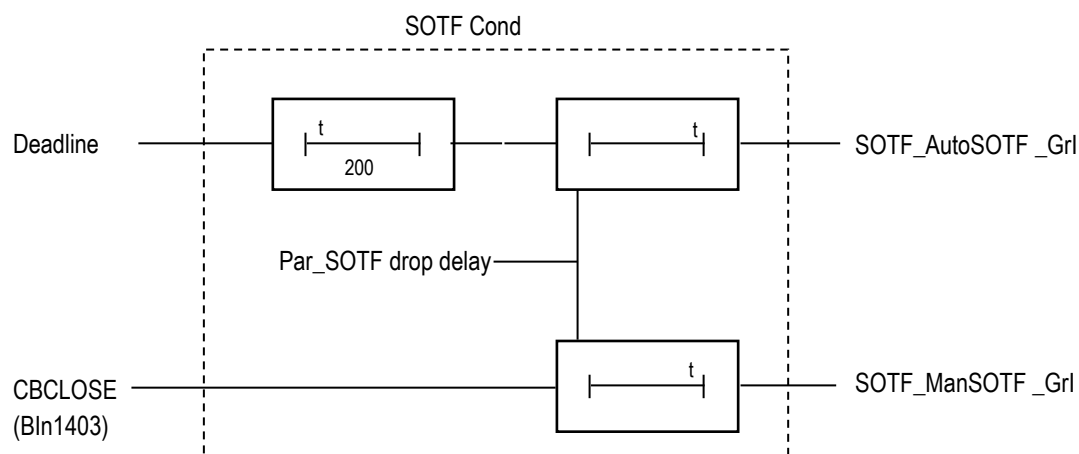


Figure 6 The scheme of the “switch-onto-fault” preparation

#### Technical data

Function	Accuracy
Timer accuracy	±5% or ±15 ms, whichever is greater

Table 49 Technical data of the switch-onto-fault detection

---


**Parameters****Timer parameter**

Parameter name	Title	Unit	Min	Max	Step	Default
Drop-off time delay for the signal						
SOTF_SOTFDeI_TPar_	SOTF Drop Delay	msec	100	10000	1	1000

*Table 50 The timer parameter of the switch-onto-fault detection function*

### 1.3.1.11 Inrush detection function (INR68)

When an inductive element with an iron core (transformer, reactor, etc.) is energized, high current peak values can be detected. This is caused by the transient asymmetric saturation of the iron core as a nonlinear element in the power network. The sizing of the iron core is usually sufficient to keep the steady state magnetic flux values below the saturation point of the iron core, so the inrush transient slowly dies out. These current peaks depend also on random factors such as the phase angle at energizing. Depending on the shape of the magnetization curve of the iron core, the detected peaks can be several times above the rated current peaks. Additionally, in medium or high voltage networks, where losses and damping are low, the indicated high current values may be sustained at length. Figure below shows a typical example for the inrush current shapes of a three-phase transformer.

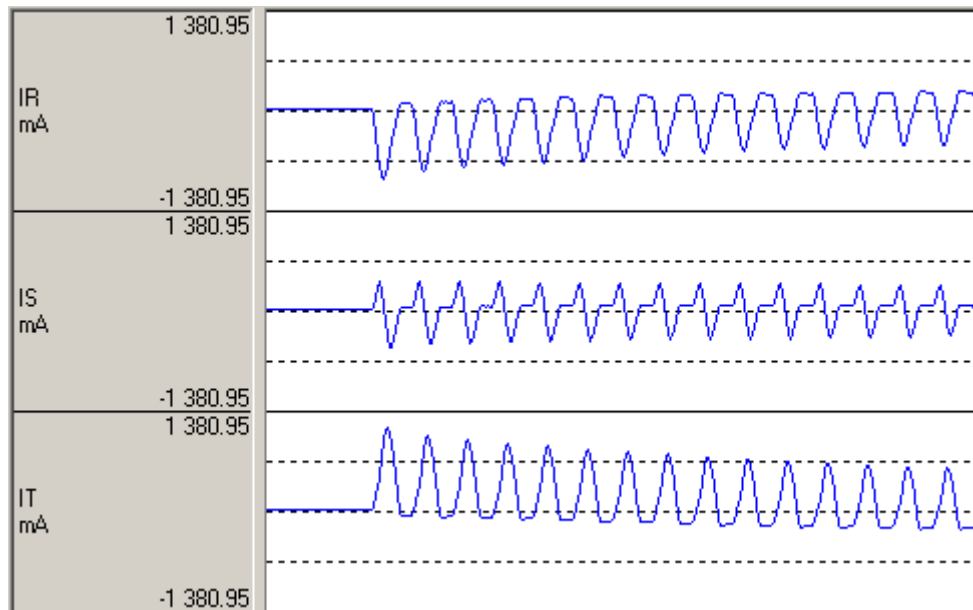

*A typical inrush current*

As a consequence, overcurrent relays, differential relays or distance relays may start, and because of the long duration of the high current peaks, they may generate an unwanted trip command.

The inrush current detection function can distinguish between high currents caused by overload or faults and the high currents during the inrush time.

The operating principle of the inrush current detection function is based on the special shape of the inrush current.

The typical inrush current in one or two phases is asymmetrical to the time axis. For example, in IT of the Figure above the positive peaks are high while no peaks can be detected in the negative domain.

The theory of the Fourier analysis states that even harmonic components (2<sup>nd</sup>, 4<sup>th</sup> etc.) are dominant in waves asymmetrical to the time axis. The component with the highest value is the second one.

Typical overload and fault currents do not contain high even harmonic components.

The inrush current detection function processes the Fourier basic harmonic component and the second harmonic component of the three phase currents. If the ratio of the second harmonic and the base Fourier harmonic is above the setting value of the parameter *2nd Harm Ratio*, an inrush detection signal is generated.

The signal is output only if the base harmonic component is above the level defined by the setting of the parameter *IPh Base Sens*. This prevents unwanted operation in the event that low currents contain relatively high error signals.

The function operates independently using all three phase currents individually, and additionally, a general inrush detection signal is generated if any of the phases detects inrush current.

The function can be disabled by the binary input *Disable*. This signal is the result of logic equations graphically edited by the user.

Using the inrush detection binary signals, other protection functions can be blocked during the transient period so as to avoid the unwanted trip.

Some protection functions use these signals automatically, but a stand-alone inrush detection function block is also available for application at the user's discretion.

### Technical data

Function	Range	Accuracy
Current accuracy	20 ... 2000% of In	±1% of In

Table 51 Technical data of the inrush detection function

### Parameters

#### Enumerated parameter

Parameter name	Title	Selection range	Default
Disabling or enabling the operation of the function			
INR2_Op_EPar_	Operation	Off,On	On

Table 52 The enumerated parameter of the inrush detection function

#### Integer parameters

Parameter name	Title	Unit	Min	Max	Step	Default
Ratio of the second and basic harmonic Fourier components						
INR2_2HRat_IPar_	2nd Harm Ratio	%	5	50	1	15
Basic sensitivity of the function						
INR2_MinCurr_IPar_	IPh Base Sens	%	20	100	1	30

Table 53 The integer parameter of the inrush detection function

### 1.3.1.12 Negative sequence overcurrent protection function (TOC46)

The negative sequence overcurrent protection function (TOC46) block operates if the negative sequence current is higher than the preset starting value.

In the negative sequence overcurrent protection function, definite-time or inverse-time characteristics are implemented, according to IEC or IEEE standards. The function evaluates a single measured current, which is the RMS value of the fundamental Fourier component of the negative sequence current. The characteristics are harmonized with IEC 60255-151, Edition 1.0, 2009-08.

The definite (independent) time characteristic has a fixed delaying time when the current is above the starting current  $G_s$  previously set as a parameter.

The standard dependent time characteristics of the negative sequence overcurrent protection function are as follows.

$$t(G) = TMS \left[ \frac{k}{\left( \frac{G}{G_s} \right)^\alpha - 1} + c \right] \text{ when } G > G_s$$

where

$t(G)$ (seconds)

$k, c$

$\alpha$

$G$

$G_s$

$TMS$

theoretical operate time with constant value of  $G$ ,  
constants characterizing the selected curve (in seconds),  
constant characterizing the selected curve (no dimension),  
measured value of the characteristic quantity, Fourier base harmonic  
of the negative sequence current (INFour),  
preset starting value of the characteristic quantity,  
preset time multiplier (no dimension).

	IEC ref		$k_r$	$c$	$\alpha$
1	A	IEC Inv	0,14	0	0,02
2	B	IEC VeryInv	13,5	0	1
3	C	IEC ExtInv	80	0	2
4		IEC LongInv	120	0	1
5		ANSI Inv	0,0086	0,0185	0,02
6	D	ANSI ModInv	0,0515	0,1140	0,02
7	E	ANSI VeryInv	19,61	0,491	2
8	F	ANSI ExtInv	28,2	0,1217	2
9		ANSI LongInv	0,086	0,185	0,02
10		ANSI LongVeryInv	28,55	0,712	2
11		ANSI LongExtInv	64,07	0,250	2

Table 54 The constants of the standard dependent time characteristics

A parameter (Operation) serves for choosing overcurrent function of independent time delay or dependent one with type selection above.

Time multiplier of the inverse characteristics (TMS) is also a parameter to be preset.

The end of the effective range of the dependent time characteristics ( $G_D$ ) is:

$$G_D = 20 * G_s$$

Above this value the theoretical operating time is definite. The inverse type characteristics are also combined with a minimum time delay, the value of which is set by user parameter TOC46\_MinDel\_TPar\_ (Min. Time Delay).

The negative phase sequence components calculation is based on the Fourier components of the phase currents.

The binary output status signals of the negative sequence overcurrent protection function are the general starting and the general trip command of the function.

The negative sequence overcurrent protection function has a binary input signal, which serves the purpose of disabling the function. The conditions of disabling are defined by the user, applying the graphic equation editor.

### Technical data

Function	Value	Accuracy
Operating accuracy	$10 \leq G_s [\%] \leq 200$	< 2 %
Operate time accuracy		$\pm 5\%$ or $\pm 15$ ms, whichever is greater
Reset ratio	0,95	
Reset time * Dependent time charact. Definite time charact.	approx. 60 ms	<2 % or $\pm 35$ ms, whichever is greater
Transient overreach		< 2 %
Pickup time at $2 \cdot G_s$	<40 ms	
Overshot time Dependent time charact. Definite time charact.	25 ms 45 ms	
Influence of time varying value of the input current (IEC 60255-151)		< 4 %

\* Measured with signal contacts

Table 55 Technical data of the negative sequence overcurrent protection function

### Parameters

#### Enumerated parameter

Parameter name	Title	Selection range	Default
Parameter for type selection			
TOC46_Oper_EPar_	Operation	Off, DefinitTime, IEC Inv, IEC VeryInv, IEC ExtInv, IEC LongInv, ANSI Inv, ANSI ModInv, ANSI VeryInv, ANSI ExtInv, ANSI LongInv, ANSI LongVeryInv, ANSI LongExtInv	Definit Time

Table 56 The enumerated parameter of the negative sequence overcurrent protection function

#### Integer parameter

Parameter name	Title	Unit	Min	Max	Step	Default
Starting current parameter:						
TOC46_StCurr_IPar_	Start Current	%	5	200	1	50

Table 57 The integer parameter of the negative sequence overcurrent protection function

**Float point parameter**

Parameter name	Title	Unit	Min	Max	Step	Default
Time multiplier of the inverse characteristics (OC module)						
TOC46_Multip_FPar_	Time Multiplier		0.05	999	0.01	1.0

\*Valid for inverse type characteristics

*Table 58 The float point parameter of the time overcurrent protection function*

**Timer parameters**

Parameter name	Title	Unit	Min	Max	Step	Default
Minimal time delay for the inverse characteristics:						
TOC46_MinDel_TPar_	Min Time Delay*	msec	0	60000	1	100
Definite time delay:						
TOC46_DefDel_TPar_	Definite Time Delay**	msec	0	60000	1	100
Reset time delay for the inverse characteristics:						
TOC46_Reset_TPar_	Reset Time*	msec	0	60000	1	100

\*Valid for inverse type characteristics

\*\*Valid for definite type characteristics only

*Table 59 The timer parameter of the negative sequence overcurrent protection function*



### 1.3.1.13 Line thermal protection function (TTR49L)

Basically, line thermal protection measures the three sampled phase currents. RMS values are calculated and the temperature calculation is based on the highest RMS value of the phase currents.

The temperature calculation is based on the step-by-step solution of the thermal differential equation. This method yields “overtemperature”, meaning the temperature above the ambient temperature. Accordingly, the temperature of the protected object is the sum of the calculated “overtemperature” and the ambient temperature.

If the calculated temperature (calculated “overtemperature”+ambient temperature) is above the threshold values, alarm, trip and restart blocking status signals are generated.

For correct setting, the following values must be measured and set as parameters: rated load current is the continuous current applied for the measurement, rated temperature is the steady state temperature at rated load current, base temperature is the temperature of the environment during the measurement and the time constant is the measured heating/cooling time constant of the exponential temperature function.

When energizing the protection device, the algorithm permits the definition of the starting temperature as the initial value of the calculated temperature. The parameter Startup Term. is the initial temperature above the temperature of the environment as compared to the rated temperature above the temperature of the environment

The ambient temperature can be measured using e.g. a temperature probe generating electric analog signals proportional to the temperature. In the absence of such measurement, the temperature of the environment can be set using the dedicated parameter TTR49L\_Amb\_IPar\_ (Ambient Temperature). The selection between parameter value and direct measurement is made by setting the binary Boolean parameter.

The problem of metal elements (the protected line) exposed to the sun is that they are overheated as compared to the „ambient” temperature even without a heating current; furthermore, they are cooled mostly by the wind and the heat transfer coefficient is highly dependent on the effects of the wind. As the overhead lines are located in different geographical environments along the tens of kilometers of the route, the effects of the sun and the wind cannot be considered in detail. The best approximation is to measure the temperature of a piece of overhead line without current but exposed to the same environmental conditions as the protected line itself.

The application of thermal protection of the overhead line is a better solution than a simple overcurrent-based overload protection because thermal protection “remembers” the preceding load states of the line and the setting of the thermal protection does not need so a high security margin between the permitted current and the permitted continuous thermal current of the line. In a broad range of load states and in a broad range of ambient temperatures this permits the better exploitation of the thermal and consequently current carrying capacity of the line.

The thermal differential equation to be solved is:

$$\frac{d\Theta}{dt} = \frac{1}{T} \left( \frac{I^2(t)R}{hA} - \Theta \right), \text{ and the definition of the heat time constant is: } T = \frac{cm}{hA}$$

In this differential equation:

I(t) (RMS)	heating current, the RMS value usually changes over time;
R	resistance of the line;
c	specific heat capacity of the conductor;
m	mass of the conductor;
θ	rise of the temperature above the temperature of the environment;
h	heat transfer coefficient of the surface of the conductor;
A	area of the surface of the conductor;
t	time.

The solution of the thermal differential equation for constant current is the temperature as the function of time (the mathematical derivation of this equation is described in a separate document):

$$\Theta(t) = \frac{I^2 R}{hA} \left( 1 - e^{-\frac{t}{T}} \right) + \Theta_o e^{-\frac{t}{T}}$$

where

$\Theta_o$  is the starting temperature.

Remember that the calculation of the measurable temperature is as follows:

$$\text{Temperature}(t) = \Theta(t) + \text{Temp\_ambient}$$

where

Temp\_ambient is the ambient temperature.

In a separate document it is proven that some more easily measurable parameters can be introduced instead of the aforementioned ones. Thus, the general form of equation above is:

$$H(t) = \frac{\Theta(t)}{\Theta_n} = \frac{I^2}{I_n^2} \left( 1 - e^{-\frac{t}{T}} \right) + \frac{\Theta_o}{\Theta_n} e^{-\frac{t}{T}}$$

where:

$H(t)$  is the „thermal level“ of the heated object, this is the temperature as a percentage of the  $\Theta_n$  reference temperature. (This is a dimensionless quantity but it can also be expressed in a percentage form.)

$\Theta_n$  is the reference temperature above the temperature of the environment, which can be measured in steady state, in case of a continuous  $I_n$  reference current.

$I_n$  is the reference current (can be considered as the nominal current of the heated object). If it flows continuously, then the reference temperature can be measured in steady state.

$\frac{\Theta_o}{\Theta_n}$  is a parameter of the starting temperature related to the reference temperature

The *RMS calculations modul* calculate the RMS values of the phase currents individually. The sampling frequency of the calculations is 1 kHz; therefore, theoretically, the frequency components below 500Hz are considered correctly in the RMS values. This module is not part of the thermal overload function; it belongs to the preparatory phase.

The *Max selection module* selects the maximal value of the three RMS phase currents.

The *Thermal replica module* solves the first order thermal differential equation using a simple step-by-step method and compares the calculated temperature to the values set by parameters. The temperature sensor value proportional to the ambient temperature can be an input (this signal is optional, defined at parameter setting).

The function can be disabled by parameter, or generates a trip pulse if the calculated temperature exceeds the trip value, or generates a trip signal if the calculated temperature exceeds the trip value given by a parameter but it resets only if the temperature cools below the „Unlock temperature“.

The line thermal protection function has two binary input signals. The conditions of the input signal are defined by the user, applying the graphic equation editor. One of the signals can block the line thermal protection function, the other one can reset the accumulated heat and set the temperature to the defined value for the subsequent heating test procedure.

**Technical data**

Function	Accuracy
Operate time at $I > 1.2 \cdot I_{trip}$	$< 3\%$ or $< \pm 20\text{ ms}$

*Table 60 Technical data of the line thermal protection function***Parameters****Enumerated parameter**

Parameter name	Title	Selection range	Default
Parameter for mode of operation			
TTR49L_Oper_EPar_	Operation	Off, Pulsed, Locked	Pulsed

*Table 61 The enumerated parameter of the line thermal protection function*

The meaning of the enumerated values is as follows:

- Off                    the function is switched off; no output status signals are generated;
- Pulsed                the function generates a trip pulse if the calculated temperature exceeds the trip value
- Locked                the function generates a trip signal if the calculated temperature exceeds the trip value. It resets only if the temperature cools below the "Unlock temperature".

**Integer parameters**

Parameter name	Title	Unit	Min	Max	Step	Default
Alarm Temperature						
TTR49L_Alm_IPar_	Alarm Temperature	deg	60	200	1	80
Trip Temperature						
TTR49L_Trip_IPar_	Trip Temperature	deg	60	200	1	100
Rated Temperature						
TTR49L_Max_IPar_	Rated Temperature	deg	60	200	1	100
Base Temperature						
TTR49L_Ref_IPar_	Base Temperature	deg	0	40	1	25
Unlock Temperature						
TTR49L_Unl_IPar_	Unlock Temperature	deg	20	200	1	60
Ambient Temperature						
TTR49L_Amb_IPar_	Ambient Temperature	deg	0	40	1	25
Startup Term.						
TTR49L_Str_IPar	Startup Term	%	0	60	1	0
Rated Load Current						
TTR49L_Inom_IPar_	Rated Load Current	%	20	150	1	100
Time constant						
TTR49L_pT_IPar_	Time Constant	min	1	999	1	10

*Table 62 The integer parameters of the line thermal protection function***Boolean parameter**

Boolean parameter	Signal title	Selection range	Default
Parameter for ambient temperature sensor application			
TTR49L_Sens_BPar_	Temperature Sensor	No, Yes	No

*Table 63 The boolean parameter of the line thermal protection function*

### 1.3.1.14 Definite time overvoltage protection function (TOV59)

The definite time overvoltage protection function measures three voltages. The measured values of the characteristic quantity are the RMS values of the basic Fourier components of the phase voltages.

The Fourier calculation inputs are the sampled values of the three phase voltages (UL1, UL2, UL3), and the outputs are the basic Fourier components of the analyzed voltages (UL1Four, UL2Four, UL3Four). They are not part of the TOV59 function; they belong to the preparatory phase.

The function generates start signals for the phases individually. The general start signal is generated if the voltage in any of the three measured voltages is above the level defined by parameter setting value.

The function generates a trip command only if the definite time delay has expired and the parameter selection requires a trip command as well.

The overvoltage protection function has a binary input signal, which serves the purpose of disabling the function. The conditions of disabling are defined by the user, applying the graphic equation editor.

#### Technical data

Function	Value	Accuracy
Pick-up starting accuracy		< ± 0,5 %
Blocking voltage		< ± 1,5 %
Reset time U< → Un U< → 0	60 ms 50 ms	
Operate time accuracy		< ± 20 ms
Minimum operate time	50 ms	

Table 64 Technical data of the definite time overvoltage protection function

#### Parameters

##### Enumerated parameter

Parameter name	Title	Selection range	Default
Enabling or disabling the overvoltage protection function			
TOV59_Oper_EPar_	Operation	Off, On	On

Table 65 The enumerated parameter of the definite time overvoltage protection function

##### Integer parameter

Parameter name	Title	Unit	Min	Max	Step	Default
Voltage level setting. If the measured voltage is above the setting value, the function generates a start signal.						
TOV59_StVol_IPar_	Start Voltage	%	30	130	1	63

Table 66 The integer parameter of the definite time overvoltage protection function

##### Boolean parameter

Parameter name	Title	Default
Enabling start signal only:		
TOV59_StOnly_BPar_	Start Signal Only	FALSE

Table 67 The boolean parameter of the definite time overvoltage protection function

##### Timer parameter

Parameter name	Title	Unit	Min	Max	Step	Default
Time delay of the overvoltage protection function.						
TOV59_Delay_TPar_	Time Delay	ms	0	60000	1	100

Table 68 The timer parameter of the definite time overvoltage protection function

### 1.3.1.15 Definite time undervoltage protection function (TUV27)

The definite time undervoltage protection function measures the RMS values of the fundamental Fourier component of three phase voltages.

The Fourier calculation inputs are the sampled values of the three phase voltages (UL1, UL2, UL3), and the outputs are the basic Fourier components of the analyzed voltages (UL1Four, UL2Four, UL3Four). They are not part of the TUV27 function; they belong to the preparatory phase.

The function generates start signals for the phases individually. The general start signal is generated if the voltage is below the preset starting level parameter setting value and above the defined blocking level.

The function generates a trip command only if the definite time delay has expired and the parameter selection requires a trip command as well.

The operation mode can be chosen by the type selection parameter. The function can be disabled, and can be set to "1 out of 3", "2 out of 3", and "All".

The overvoltage protection function has a binary input signal, which serves the purpose of disabling the function. The conditions of disabling are defined by the user, applying the graphic equation editor.

#### Technical data

Function	Value	Accuracy
Pick-up starting accuracy		$< \pm 0,5 \%$
Blocking voltage		$< \pm 1,5 \%$
Reset time U> → Un U> → 0	50 ms 40 ms	
Operate time accuracy		$< \pm 20 \text{ ms}$
Minimum operate time	50 ms	

Table 69 Technical data of the definite time undervoltage protection function

#### Parameters

##### Enumerated parameter

Parameter name	Title	Selection range	Default
Parameter for type selection			
TUV27_Oper_EPar_	Operation	Off, 1 out of 3, 2 out of 3, All	1 out of 3

Table 70 The enumerated parameter of the definite time undervoltage protection function

##### Integer parameters

Parameter name	Title	Unit	Min	Max	Step	Default
Starting voltage level setting						
TUV27_StVol_IPar_	Start Voltage	%	30	130	1	52
Blocking voltage level setting						
TUV27_BlkVol_IPar_	Block Voltage	%	0	20	1	10

Table 71 The integer parameters of the definite time undervoltage protection function

##### Boolean parameter

Parameter name	Title	Default
Enabling start signal only:		
TUV27_StOnly_BPar_	Start Signal Only	FALSE

Table 72 The boolean parameter of the definite time undervoltage protection function

##### Timer parameters

Parameter name	Title	Unit	Min	Max	Step	Default
Time delay of the undervoltage protection function.						
TUV27_Delay_TPar_	Time Delay	ms	0	60000	1	100

Table 73 The timer parameter of the definite time undervoltage protection function

### 1.3.1.16 Residual definite time overvoltage protection function (TOV59N)

The residual definite time overvoltage protection function operates according to definite time characteristics, using the RMS values of the fundamental Fourier component of the zero sequence voltage ( $U_N=3U_0$ ).

The Fourier calculation inputs are the sampled values of the residual or neutral voltage ( $U_N=3U_0$ ) and the outputs are the RMS value of the basic Fourier components of those.

The function generates start signal if the residual voltage is above the level defined by parameter setting value.

The function generates a trip command only if the definite time delay has expired and the parameter selection requires a trip command as well.

The residual overvoltage protection function has a binary input signal, which serves the purpose of disabling the function. The conditions of disabling are defined by the user, applying the graphic equation editor.

#### Technical data

Function	Value	Accuracy
Pick-up starting accuracy	2 – 8 % 8 – 60 %	< ± 2 % < ± 1.5 %
Reset time U> → U <sub>N</sub> U> → 0	60 ms 50 ms	
Operate time	50 ms	< ± 20 ms

Table 74 Technical data of the residual definite time overvoltage protection function

#### Parameters

##### Enumerated parameter

Parameter name	Title	Selection range	Default
Parameter for enabling/disabling:			
TOV59N_Oper_EPar_	Operation	Off, On	On

Table 75 The enumerated parameter of the residual definite time overvoltage protection function

##### Integer parameter

Parameter name	Title	Unit	Min	Max	Step	Default
Starting voltage parameter:						
TOV59N_StVol_IPar_	Start Voltage	%	2	60	1	30

Table 76 The integer parameter of the residual definite time overvoltage protection function

##### Boolean parameter

Parameter name	Title	Default
Enabling start signal only:		
TOV59N_StOnly_BPar_	Start Signal Only	FALSE

Table 77 The boolean parameter of the residual definite time overvoltage protection function

##### Timer parameter

Parameter name	Title	Unit	Min	Max	Step	Default
Definite time delay:						
TOV59N_Delay_TPar_	Time Delay	ms	0	60000	1	100

Table 78 The time parameter of the residual definite time overvoltage protection function

### 1.3.1.17 Over-frequency protection function (TOF81)

The deviation of the frequency from the rated system frequency indicates unbalance between the generated power and the load demand. If the available generation is large compared to the consumption by the load connected to the power system, then the system frequency is above the rated value. The over-frequency protection function is usually applied to decrease generation to control the system frequency.

Another possible application is the detection of unintended island operation of distributed generation and some consumers. In the island, there is low probability that the power generated is the same as consumption; accordingly, the detection of high frequency can be one of the indication of island operation.

Accurate frequency measurement is also the criterion for the synchro-check and synchro-switch functions.

The accurate frequency measurement is performed by measuring the time period between two rising edges at zero crossing of a voltage signal. For the acceptance of the measured frequency, at least four subsequent identical measurements are needed. Similarly, four invalid measurements are needed to reset the measured frequency to zero. The basic criterion is that the evaluated voltage should be above 30% of the rated voltage value.

The over-frequency protection function generates a start signal if at least five measured frequency values are above the preset level.

Time delay can also be set.

The function can be enabled/disabled by a parameter.

The over-frequency protection function has a binary input signal. The conditions of the input signal are defined by the user, applying the graphic equation editor. The signal can block the under-frequency protection function.

#### Technical data

Function	Range	Accuracy
Operate range	40 - 70 Hz	30 mHz
Effective range	45 - 55 Hz / 55 - 65 Hz	2 mHz
Operate time		min 140 ms
Time delay	140 – 60000 ms	± 20 ms
Reset ratio		0,99

Table 79 Technical data of the over-frequency protection function

#### Parameters

##### Enumerated parameter

Parameter name	Title	Selection range	Default
Selection of the operating mode			
TOF81_Oper_EPar_	Operation	Off,On	On

Table 80 The enumerated parameter of the over-frequency protection function

##### Boolean parameter

Parameter name	Title	Default
Enabling start signal only:		
TOF81_StOnly_BPar_	Start Signal Only	FALSE

Table 81 The boolean parameter of the over-frequency protection function

##### Float point parameter

Parameter name	Title	Unit	Min	Max	Step	Default
Setting value of the comparison						
TOF81_St_FPar_	Start Frequency	Hz	40	60	0.01	51

Table 82 The float point parameter of the over-frequency protection function

##### Timer parameter

Parameter name	Title	Unit	Min	Max	Step	Default
Time delay						
TOF81_Del_TPar_	Time Delay	msec	100	60000	1	200

Table 83 The timer parameter of the over-frequency protection function



### 1.3.1.18 Underfrequency protection function (TUF81)

The deviation of the frequency from the rated system frequency indicates unbalance between the generated power and the load demand. If the available generation is small compared to the consumption by the load connected to the power system, then the system frequency is below the rated value. The under-frequency protection function is usually applied to increase generation or for load shedding to control the system frequency.

Another possible application is the detection of unintended island operation of distributed generation and some consumers. In the island, there is low probability that the power generated is the same as consumption; accordingly, the detection of low frequency can be one of the indications of island operation.

Accurate frequency measurement is also the criterion for the synchro-check and synchro-switch functions.

The accurate frequency measurement is performed by measuring the time period between two rising edges at zero crossing of a voltage signal. For the acceptance of the measured frequency, at least four subsequent identical measurements are needed. Similarly, four invalid measurements are needed to reset the measured frequency to zero. The basic criterion is that the evaluated voltage should be above 30% of the rated voltage value.

The under-frequency protection function generates a start signal if at least five measured frequency values are below the setting value.

Time delay can also be set.

The function can be enabled/disabled by a parameter.

The under-frequency protection function has a binary input signal. The conditions of the input signal are defined by the user, applying the graphic equation editor. The signal can block the under-frequency protection function.

#### Technical data

Function	Range	Accuracy
Operate range	40 - 70 Hz	30 mHz
Effective range	45 - 55 Hz / 55 - 65 Hz	2 mHz
Operate time		min 140 ms
Time delay	140 – 60000 ms	± 20 ms
Reset ratio		0,99

Table 84 Technical data of the under-frequency protection function

#### Parameters

##### Enumerated parameter

Parameter name	Title	Selection range	Default
Selection of the operating mode			
TUF81_Oper_EPar_	Operation	Off, On	On

Table 85 The enumerated parameter of the under-frequency protection function

##### Boolean parameter

Parameter name	Title	Default
Enabling start signal only:		
TUF81_StOnly_BPar_	Start Signal Only	FALSE

Table 86 The boolean parameter of the under-frequency protection function

##### Float point parameter

Parameter name	Title	Unit	Min	Max	Digits	Default
Preset value of the comparison						
TUF81_St_FPar_	Start Frequency	Hz	40	60	0.01	49

Table 87 The float point parameter of the under-frequency protection function

##### Timer parameter

Parameter name	Title	Unit	Min	Max	Step	Default
Time delay						
TUF81_Del_TPar_	Time Delay	ms	100	60000	1	200

Table 88 The timer parameter of the under-frequency protection function



### 1.3.1.19 Rate of change of frequency protection function (FRC81)

The deviation of the frequency from the rated system frequency indicates unbalance between the generated power and the load demand. If the available generation is large compared to the consumption by the load connected to the power system, then the system frequency is above the rated value, and if it is small, the frequency is below the rated value. If the unbalance is large, then the frequency changes rapidly. The rate of change of frequency protection function is usually applied to reset the balance between generation and consumption to control the system frequency.

Another possible application is the detection of unintended island operation of distributed generation and some consumers. In the island, there is low probability that the power generated is the same as consumption; accordingly, the detection of a high rate of change of frequency can be an indication of island operation.

Accurate frequency measurement is also the criterion for the synchro-switch function.

The source for the rate of change of frequency calculation is an accurate frequency measurement.

In some applications, the frequency is measured based on the weighted sum of the phase voltages.

The accurate frequency measurement is performed by measuring the time period between two rising edges at zero crossing of a voltage signal. For the acceptance of the measured frequency, at least four subsequent identical measurements are needed. Similarly, four invalid measurements are needed to reset the measured frequency to zero. The basic criterion is that the evaluated voltage should be above 30% of the rated voltage value.

The rate of change of frequency protection function generates a start signal if the  $df/dt$  value is above the setting value. The rate of change of frequency is calculated as the difference of the frequency at the present sampling and at three periods earlier.

Time delay can also be set.

The function can be enabled/disabled by a parameter.

The rate of change of frequency protection function has a binary input signal. The conditions of the input signal are defined by the user, applying the graphic equation editor. The signal can block the rate of change of frequency protection function.

#### Technical data

Function	Effective range	Accuracy
Operating range	-5 - -0.05 and +0.05 - +5 Hz/sec	
Pick-up accuracy		±20 mHz/sec
Operate time	min 140 ms	
Time delay	140 – 60000 ms	± 20 ms

Table 89 Technical data of the rate of change of frequency protection function

#### Parameters

##### Enumerated parameter

Parameter name	Title	Selection range	Default
Selection of the operating mode			
FRC81_Oper_EPar_	Operation	Off,On	On

Table 90 The enumerated parameter of the rate of change of frequency protection function

##### Boolean parameter

Parameter name	Title	Default
Enabling start signal only:		
FRC81_StOnly_BPar_	Start Signal Only	True

Table 91 The boolean parameter of the rate of change of frequency protection function

**Float point parameter**

Parameter name	Title	Unit	Min	Max	Step	Default
Setting value of the comparison						
FRC81_St_FPar_	Start df/dt	Hz/sec	-5	5	0.01	0.5

*Table 92 The float point parameter of the rate of change of frequency protection function*

**Timer parameters**

Parameter name	Title	Unit	Min	Max	Step	Default
Time delay						
FRC81_Del_TPar_	Time Delay	msec	100	60000	1	200

*Table 93 The timer parameter of the rate of change of frequency protection function*

### 1.3.1.20 Synchrocheck function (SYN25)

Several problems can occur in the electric power system if the circuit breaker closes and connects two systems operating asynchronously. The high current surge can cause damage in the interconnecting elements, the accelerating forces can overstress the shafts of rotating machines or, at last, the actions taken by the protective system can result in the unwanted separation of parts of the electric power system.

To prevent such problems, this function checks whether the systems to be interconnected are operating synchronously. If yes, then the close command is transmitted to the circuit breaker. In case of asynchronous operation, the close command is delayed to wait for the appropriate vector position of the voltage vectors on both sides of the circuit breaker. If the conditions for safe closing cannot be fulfilled within an expected time, then closing is declined.

The conditions for safe closing are as follows:

- The difference of the voltage magnitudes is below the declared limit,
- The difference of the frequencies is below the declared limit and
- The angle difference between the voltages on both sides of the circuit breaker is within the declared limit.

The function processes both automatic reclosing and manual close commands.

The limits for automatic reclosing and manual close commands can be set independently of each other.

The function compares the voltage of the line and the voltage of one of the bar sections (Bus1 or Bus2). The bus selection is made automatically based on a binary input signal defined by the user applying the graphic equation editor.

As to voltages: any phase-to-ground or phase-to-phase voltage can be selected.

The function processes the signals of the voltage transformer supervision function and enables the close command only in case of plausible voltages.

There are three modes of operation:

- Energizing check:
  - Dead bus, live line,
  - Live bus, dead line,
  - Any Energizing Case (including Dead bus, dead line).
- Synchro check (Live line, live bus)
- Synchro switch (Live line, live bus)

If the conditions for “Energizing check” or “Synchro check” are fulfilled, then the function generates the release command, and in case of a manual or automatic close request, the close command is generated.

If the conditions for energizing or synchronous operation are not met when the close request is received, then synchronous switching is attempted within the set time-out. In this case, the rotating vectors must fulfill the conditions for safe switching within the declared waiting time: at the moment the contacts of the circuit breaker are closed, the voltage vectors must match each other with appropriate accuracy. For this mode of operation, the expected operating time of the circuit breaker must be set as a parameter value, to generate the close command in advance taking the relative vector rotation speed into consideration.

The started checking procedure can be interrupted by a cancel command defined by the user in the graphic equation editor.

In “bypass” operation mode, the function generates the release signals and simply transmits the close command.

The function can be started by the switching request signals initiated both the automatic reclosing and the manual closing. The binary input signals are defined by the user, applying the graphic equation editor.

Blocking signal of the function are defined by the user, applying the graphic equation editor.

Blocking signal of the voltage transformer supervision function for all voltage sources are defined by the user, applying the graphic equation editor.

Signal to interrupt (cancel) the automatic or the manual switching procedure are defined by the user, applying the graphic equation editor.

### Technical data

Function	Effective range	Accuracy in the effective range
Rated Voltage Un	100/200V, parameter setting	
Voltage effective range	10-110 % of Un	±1% of Un
Frequency	47.5 – 52.5 Hz	±10 mHz
Phase angle		±3 °
Operate time	Setting value	±3 ms
Reset time	<50 ms	
Reset ratio	0.95 Un	

Table 94 Technical data of the synchro check / synchro switch function

### Parameters

#### Enumerated parameters

Parameter name	Title	Selection range	Default
Selection of the processed voltage			
SYN25_VoltSel_EPar_	Voltage Select	L1-N,L2-N,L3-N,L1-L2,L2-L3,L3-L1	L1-N
Operation mode for automatic switching			
SYN25_OperA_EPar_	Operation Auto	Off, On, ByPass	On
Enabling/disabling automatic synchro switching			
SYN25_SwOperA_EPar_	SynSW Auto	Off, On	On
Energizing mode for automatic switching			
SYN25_EnOperA_EPar_	Energizing Auto	Off, DeadBus LiveLine, LiveBus DeadLine, Any energ case	DeadBus LiveLine
Operation mode for manual switching			
SYN25_OperM_EPar_	Operation Man	Off, On, ByPass	On
Enabling/disabling manual synchro switching			
SYN25_SwOperM_EPar_	SynSW Man	Off, On	On
Energizing mode for manual switching			
SYN25_EnOperM_EPar_	Energizing Man	Off,DeadBus LiveLine, LiveBus DeadLine, Any energ case	DeadBus LiveLine

Table 95 The enumerated parameters of the synchro check / synchro switch function

**Integer parameters**

Parameter name	Title	Unit	Min	Max	Step	Default
Voltage limit for “live line” detection						
SYN25_LiveU_IPar_	U Live	%	60	110	1	70
Voltage limit for “dead line” detection						
SYN25_DeadU_IPar_	U Dead	%	10	60	1	30
Voltage difference for automatic synchro checking mode						
SYN25_ChkUdA_IPar_	Udiff SynCheck Auto	%	5	30	1	10
Voltage difference for automatic synchro switching mode						
SYN25_SwUdA_IPar_	Udiff SynSW Auto	%	5	30	1	10
Phase difference for automatic switching						
SYN25_MaxPhDiffA_IPar_	MaxPhaseDiff Auto	deg	5	80	1	20
Voltage difference for manual synchro checking mode						
SYN25_ChkUdM_IPar_	Udiff SynCheck Man	%	5	30	1	10
Voltage difference for manual synchro switching mode						
SYN25_SwUdM_IPar_	Udiff SynSW Man	%	5	30	1	10
Phase difference for manual switching						
SYN25_MaxPhDiffM_IPar_	MaxPhaseDiff Man	deg	5	80	1	20

Table 96 The integer parameters of the synchro check / synchro switch function

**Floating point parameters**

Parameter name	Title	Dim.	Min	Max	Default
Frequency difference for automatic synchro checking mode					
SYN25_ChkFrDA_FPar_	FrDiff SynCheck Auto	Hz	0.02	0.5	0.02
Frequency difference for automatic synchro switching mode					
SYN25_SwFrDA_FPar_	FrDiff SynSW Auto	Hz	0.10	1.00	0.2
Frequency difference for manual synchro checking mode					
SYN25_ChkFrDM_FPar_	FrDiff SynCheck Man	Hz	0.02	0.5	0.02
Frequency difference for manual synchro switching mode					
SYN25_SwFrDM_FPar_	FrDiff SynSW Man	Hz	0.10	1.00	0.2

Table 97 The floating point parameters of the synchro check / synchro switch function

**Timer parameters**

Parameter name	Title	Unit	Min	Max	Step	Default
Breaker operating time at closing						
SYN25_CBTrav_TPar_	Breaker Time	msec	0	500	1	80
Impulse duration for close command						
SYN25_SwPu_TPar_	Close Pulse	msec	10	60000	1	1000
Maximum allowed switching time						
SYN25_MaxSw_TPar_	Max Switch Time	msec	100	60000	1	2000

Table 98 The timer parameters of the synchro check / synchro switch function

### 1.3.1.21 Auto-reclose protection function (REC79HV)

The HV automatic reclosing function for high voltage networks can realize up to four shots of reclosing. The dead time can be set individually for each reclosing and separately for single-phase faults and for multi-phase faults.

The starting signal of the cycles can be generated by any combination of the protection functions or external signals of the binary inputs. The selection is made by graphic equation programming.

The automatic reclosing function is triggered if as a consequence of a fault a protection function generates a trip command to the circuit breaker and the protection function resets because the fault current drops to zero or the circuit breaker's auxiliary contact signals open state. According to the preset parameter values, either of these two conditions starts counting the dead time, at the end of which the HV automatic reclosing function generates a close command automatically. If the fault still exists or reappears, then within the "Reclaim time" started at the close command the protection functions picks up again and the subsequent cycle is started. If no pickup is detected within this time, then the HV automatic reclosing cycle resets and a new fault will start the procedure with the first cycle again.

At the moment of generating the close command, the circuit breaker must be ready for operation, which is signaled via a binary input (CB Ready). The Boolean parameter „ CB State Monitoring" enables the function. The preset parameter value (CB Supervision time) decides how long the HV automatic reclosing function is allowed to wait at the end of the dead time for this signal. If the signal is not received during this dead time extension, then the HV automatic reclosing function terminates.

Depending on binary parameter settings, the automatic reclosing function block can accelerate trip commands of the individual reclosing cycles. This function needs user-programmed graphic equations to generate the accelerated trip command.

In case of a manual close command which is assigned to the logic variable "Manual Close" using graphic equation programming, a preset parameter value decides how long the HV automatic reclosing function should be disabled after the manual close command.

The duration of the close command depends on preset parameter value "Close command time", but the close command terminates if any of the protection functions issues a trip command.

The HV automatic reclosing function can control up to four reclosing cycles. Depending on the preset parameter value "Reclosing cycles", there are different modes of operation:

Disabled	No automatic reclosing is selected,
1. Enabled	Only one automatic reclosing cycle is selected,
1.2. Enabled	Two automatic reclosing cycles are activated,
1.2.3. Enabled	Three automatic reclosing cycles are activated,
1.2.3.4. Enabled	All automatic reclosing cycles are activated.

The function can be switched Off /On using the parameter "Operation"

The user can also block the HV automatic reclosing function applying the graphic equation editor. The binary status variable to be programmed is "Block".

Depending on the present parameter value "Reclosing started by", the HV automatic reclosing function can be started either by resetting of the TRIP command or by the binary signal indicating the open state of the circuit breaker.

If the reset state of the TRIP command is selected to start the HV automatic reclosing function, then the conditions are defined by the user applying the graphic equation editor. The binary status variable to be programmed is "AutoReclosing Start".

If the open state of the circuit breaker is selected to start the HV automatic reclosing function, then additionally to programming the “AutoReclosing Start” signal, the conditions for detecting the open state of the CB are defined by the user applying the graphic equation editor.

For all four reclosing cycles, separate dead times can be defined for single-phase-reclosing after single-phase trip commands (as a consequence of single-phase faults) and for three-phase-reclosing after three-phase trip commands (as a consequence of multi-phase faults).

The different dead time settings of single-phase-reclosing and three-phase-reclosing can be justified as follows: in case of a single-phase fault, only the circuit breakers of the faulty phase open. In this case, due to the capacitive coupling of the healthy phases, the extinction of the secondary arc at the fault location can be delayed. Consequently, a longer dead time is needed for the fault current to die out than in the case of a three-phase open state, when no coupled voltage can sustain the fault current.

From other point of view, in case of a transmission line connecting two power systems, only a shorter dead time is allowed for the three-phase open state because, due to the possible power unbalance between the interconnected systems, a large angle difference can be reached if the dead time is too long. If only a single phase is open, then the two connected healthy phases and the ground can sustain the synchronous operation of both power systems.

Special dead time can be necessary if a three-phase fault arises near either substation of a line and the protection system operates without tele-protection. If the three-phase dead time is too short, the HV automatic reclosing may attempt to close the circuit breaker during the running time of the second zone trip at the other side. Consequently, a prolonged dead time is needed if the fault was detected in the first zone.

Dead time reduction may be applicable if healthy voltage is measured in all three phases during the dead time, this means that no fault exists on the line. In this case, the expiry of the normal dead time need not be waited for; a reclosing attempt can be initiated immediately.

If, during the cycles, the three-phase dead time is applied once, then all subsequent cycles will consider the three-phase dead time settings, too.

Three-phase reclosing can be disabled by a preset parameter value.

At the end of the dead time, reclosing is possible only if the circuit breaker can perform the command. The conditions are defined by the user applying the graphic equation editor.

Reclosing is possible only if the conditions required by the “synchro-check” function are fulfilled. The conditions are defined by the user applying the graphic equation editor. The HV automatic reclosing function waits for a pre-programmed time for this signal. This time is defined by the user. If the “SYNC Release” signal is not received during the running time of this timer, then the “synchronous switch” operation is started.

The separate function controls the generation of the close command in case of relatively rotating voltage vectors on both sides of the open circuit breaker to make contact at the synchronous state of the rotating vectors. For this calculation, the closing time of the circuit breaker must be defined.

When the close command is generated, a timer is started to measure the “Reclaim time”. If the fault is detected again during this time, then the sequence of the HV automatic reclosing cycles continues. If no fault is detected, then at the expiry of the reclaim time the reclosing is evaluated as successful and the function resets. If fault is detected after the expiry of this timer, then the cycles restart with the first reclosing cycle.

If the manual close command is received during the running time of any of the cycles, then the HV automatic reclosing function resets.

After a manual close command, the HV automatic reclosing function does not operate for the time period defined by a parameter.

In case of evolving faults i.e. when a detected single-phase fault changes to multi-phase fault, the behavior of the automatic reclosing function is controlled by the preset parameter value "Evolving fault". The options are "Block Reclosing" or "Start 3Ph Rec."

Depending on binary parameter settings, the automatic reclosing function block can accelerate trip commands of the individual reclosing cycles.

#### Technical data

Function	Accuracy
Operating time	$\pm 1\%$ of setting value or $\pm 30$ ms

*Table 99 Technical data of the rate of auto-reclose function*

#### Parameters

##### Enumerated parameters

Parameter name	Title	Selection range	Default
Switching ON/OFF the HV automatic reclosing function			
REC79_Op_EPar_	Operation	Off, On	On
Selection of the number of reclosing sequences			
REC79_CycEn_EPar_	Reclosing Cycles	Disabled, 1. Enabled, 1.2. Enabled, 1.2.3. Enabled, 1.2.3.4. Enabled	1. Enabled
Selection of triggering the dead time counter (trip signal reset or circuit breaker open position)			
REC79_St_EPar_	Reclosing Started by	Trip reset, CB open	Trip reset
Selection of behavior in case of evolving fault (block reclosing or perform three-phase automatic reclosing cycle)			
REC79_EvoFlt_EPar_	Evolving Fault	Block Reclosing, Start 3Ph Rec.	Block Reclosing

*Table 100 The enumerated parameters of the rate of auto-reclose function*



**Timer parameters**

Parameter name	Title	Unit	Min	Max	Step	Default
Dead time setting for the first reclosing cycle for single-phase fault						
REC79_1PhDT1_TPar_	1. Dead Time 1Ph	msec	0	100000	10	500
Dead time setting for the second reclosing cycle for single-phase fault						
REC79_1PhDT2_TPar_	2. Dead Time 1Ph	msec	10	100000	10	600
Dead time setting for the third reclosing cycle for single-phase fault						
REC79_1PhDT3_TPar_	3. Dead Time 1Ph	msec	10	100000	10	700
Dead time setting for the fourth reclosing cycle for single-phase fault						
REC79_1PhDT4_TPar_	4. Dead Time 1Ph	msec	10	100000	10	800
Dead time setting for the first reclosing cycle for multi-phase fault						
REC79_3PhDT1_TPar_1	1. Dead Time 3Ph	msec	0	100000	10	1000
Special dead time setting for the first reclosing cycle for multi-phase fault						
REC79_3PhDT1_TPar_2	1. Special DT 3Ph	msec	0	100000	10	1350
Dead time setting for the second reclosing cycle for multi-phase fault						
REC79_3PhDT2_TPar_	2. Dead Time 3Ph	msec	10	100000	10	2000
Dead time setting for the third reclosing cycle for multi-phase fault						
REC79_3PhDT3_TPar_	3. Dead Time 3Ph	msec	10	100000	10	3000
Dead time setting for the fourth reclosing cycle for multi-phase fault						
REC79_3PhDT4_TPar_	4. Dead Time 3Ph	msec	10	100000	10	4000
Reclaim time setting						
REC79_Rec_TPar_	Reclaim Time	msec	100	100000	10	2000
Impulse duration setting for the CLOSE command						
REC79_Close_TPar_	Close Command Time	msec	10	10000	10	100
Setting of the dynamic blocking time						
REC79_DynBlk_TPar_	Dynamic Blocking Time	msec	10	100000	10	1500
Setting of the blocking time after manual close command						
REC79_MC_TPar_	Block after Man.Close	msec	0	100000	10	1000
Setting of the action time (max. allowable duration between protection start and trip)						
REC79_Act_TPar_	Action Time	msec	0	20000	10	1000
Limitation of the starting signal (trip command is too long or the CB open signal received too late)						
REC79_MaxSt_TPar_	Start Signal Max Time	msec	0	10000	10	1000
Max. delaying the start of the dead-time counter						
REC79_DtDel_TPar_	DeadTime Max Delay	msec	0	100000	10	3000
Waiting time for circuit breaker ready to close signal						
REC79_CBTO_TPar_	CB Supervision Time	msec	10	100000	10	1000
Waiting time for synchronous state signal						
REC79_SYN1_TPar_	Syn Check Max Time	msec	500	100000	10	10000
Waiting time for synchronous switching signal						
REC79_SYN2_TPar_	SynSw Max Time	msec	500	100000	10	10000

*Table 101 The timer parameters of the rate of auto-reclose function*

**Boolean parameters**

Parameter name	Title	Default	Explanation
REC79_CBState_BPar_	CB State Monitoring	0	Enable CB state monitoring for “Not Ready” state
REC79_3PhRecBlk_BPar_	Disable 3Ph Rec.	0	Disable three-phase reclosing
REC79_Acc1_BPar_	Accelerate 1.Trip	0	Accelerate trip command at starting cycle 1
REC79_Acc2_BPar_	Accelerate 2.Trip	0	Accelerate trip command at starting cycle 2
REC79_Acc3_BPar_	Accelerate 3.Trip	0	Accelerate trip command at starting cycle 3
REC79_Acc4_BPar_	Accelerate 4.Trip	0	Accelerate trip command at starting cycle 4
REC79_Acc5_BPar_	Accelerate FinTrip	0	Accelerate final trip command

*Table 102 The boolean parameters of the rate of auto-reclose function*

### 1.3.1.22 Voltage transformer supervision function (VTS60)

The voltage transformer supervision function generates a signal to indicate an error in the voltage transformer secondary circuit. This signal can serve, for example, as a warning, indicating disturbances in the measurement, or it can disable the operation of the distance protection function if appropriate measured voltage signals are not available for a distance decision.

The voltage transformer supervision function is designed to detect faulty asymmetrical states of the voltage transformer circuit caused, for example, by a broken conductor in the secondary circuit.

(Another method for detecting voltage disturbances is the supervision of the auxiliary contacts of the miniature circuit breakers in the voltage transformer secondary circuits. This function is not described here.)

The user has to generate graphic equations for the application of the signal of this voltage transformer supervision function.

This function is interconnected with the “dead line detection function”. Although the dead line detection function is described fully in a separate document, the explanation necessary to understand the operation of the VT supervision function is repeated also in this document.

The voltage transformer supervision function can be used in three different modes of application:

Zero sequence detection (for typical applications in systems with grounded neutral): “VT failure” signal is generated if the residual voltage ( $3U_0$ ) is above the preset voltage value AND the residual current ( $3I_0$ ) is below the preset current value.

Negative sequence detection (for typical applications in systems with isolated or resonant grounded (Petersen) neutral): “VT failure” signal is generated if the negative sequence voltage component ( $U_2$ ) is above the preset voltage value AND the negative sequence current component ( $I_2$ ) is below the preset current value.

Special application: “VT failure” signal is generated if the residual voltage ( $3U_0$ ) is above the preset voltage value AND the residual current ( $3I_0$ ) AND the negative sequence current component ( $I_2$ ) are below the preset current values.

The voltage transformer supervision function can be activated if “Live line” status is detected for at least 200 ms. This delay avoids mal-operation at line energizing if the poles of the circuit breaker make contact with a time delay. The function is set to be inactive if “Dead line” status is detected.

If the conditions specified by the selected mode of operation are fulfilled (for at least 4 milliseconds) then the voltage transformer supervision function is activated and the operation signal is generated. (When evaluating this time delay, the natural operating time of the applied Fourier algorithm must also be considered.)

**NOTE:** For the operation of the voltage transformer supervision function the “Dead line detection function” must be operable as well: it must be enabled by binary parameter setting, and its blocking signal may not be active.

If, in the active state, the conditions for operation are no longer fulfilled, the resetting of the function depends on the mode of operation of the primary circuit:

- If the “Live line” state is valid, then the function resets after approx. 200 ms of time delay. (When evaluating this time delay, the natural operating time of the applied Fourier algorithm must also be considered.)
- If the “Dead line” state is started and the “VTS Failure” signal has been continuous for at least 100 ms, then the “VTS failure” signal does not reset; it is generated continuously even when the line is in a disconnected state. Thus, the “VTS Failure” signal remains active at reclosing.
- If the “Dead line” state is started and the “VTS Failure” signal has not been continuous for at least 100 ms, then the “VTS failure” signal resets.

#### Technical data

Function	Value	Accuracy
Pick-up voltage I <sub>0</sub> =0A I <sub>2</sub> =0A		<1% <1%
Operation time	<20ms	
Reset ratio	0.95	

Table 103 Technical data of the voltage transformer supervision function

#### Parameters

##### Integer parameters

Parameter name	Title	Unit	Min	Max	Step	Default
Integer parameters of the dead line detection function						
DLD_ULev_IPar_	Min Operate Voltage	%	10	100	1	60
DLD_ILev_IPar_	Min Operate Current	%	2	100	1	10
Starting voltage and current parameter for residual and negative sequence detection:						
VTS_Uo_IPar_	Start URes	%	5	50	1	30
VTS_Io_IPar_	Start IRes	%	10	50	1	10
VTS_Uneg_IPar_	Start UNeg	%	5	50	1	10
VTS_Ineg_IPar_	Start INeg	%	10	50	1	10

Table 104 The integer parameters of the voltage transformer supervision function

##### Enumerated parameter

Parameter name	Title	Selection range	Default
Parameter for type selection			
VTS_Oper_EPar_	Operation	Off, Zero sequence, Neg. sequence, Special	Zero sequence

Table 105 The enumerated parameter of the voltage transformer supervision function

### 1.3.1.23 Current unbalance function (VCB60)

The current unbalance protection function (VCB60) can be applied to detect unexpected asymmetry in current measurement.

The applied method selects maximum and minimum phase currents (RMS value of the fundamental Fourier components). If the difference between them is above the setting limit, the function generates a start signal. It is a necessary precondition of start signal generation that the maximum of the currents be above 10 % of the rated current and below 150% of the rated current.

*The Fourier calculation modules* calculate the RMS value of the basic Fourier current components of the phase currents individually. They are not part of the VCB60 function; they belong to the preparatory phase.

*The analog signal processing module* processes the RMS value of the basic Fourier current components of the phase currents to prepare the signals for the decision. It calculates the maximum and the minimum value of the RMS values and the difference between the maximum and minimum of the RMS values of the fundamental Fourier components of the phase currents as a percentage of the maximum of these values ( $\Delta I$ ). If the maximum of the currents is above 10 % of the rated current and below 150% of the rated current and the  $\Delta I$  value is above the limit defined by the preset parameter (Start Current Diff) an output is generated to the decision module.

*The decision logic module* combines the status signals to generate the starting signal and the trip command of the function.

The trip command is generated after the defined time delay if trip command is enabled by the Boolean parameter setting.

The function can be disabled by parameter setting, and by an input signal programmed by the user with the graphic programming tool.

#### Technical data

Function	Value	Accuracy
Pick-up starting accuracy at In		< 2 %
Reset ratio	0.95	
Operate time	70 ms	

Table 106 Technical data of the current unbalance function

#### Parameters

##### Enumerated parameter

Parameter name	Title	Selection range	Default
Selection of the operating mode			
VCB60_Oper_EPar_	Operation	Off, On	On

Table 107 The enumerated parameter of the current unbalance function

##### Boolean parameter

Parameter name	Title	Explanation	Default
Selection for trip command			
VCB60_StOnly_BPar_	Start Signal Only	0 to generate trip command	0

Table 108 The boolean parameter of the current unbalance function

**Integer parameter**

---

Parameter name	Title	Unit	Min	Max	Step	Default
Phase difference current setting						
VCB60_StCurr_IPar_	Start Current Diff	%	10	90	1	50

*Table 109 The integer parameter of the current unbalance function***Timer parameter**

Parameter name	Title	Unit	Min	Max	Step	Default
Time delay						
VCB60_Del_TPar_	Time Delay	msec	100	60000	100	1000

*Table 110 The timer parameter of the current unbalance function*

### 1.3.1.24 Breaker failure protection function (BRF50)

After a protection function generates a trip command, it is expected that the circuit breaker opens and the fault current drops below the pre-defined normal level.

If not, then an additional trip command must be generated for all backup circuit breakers to clear the fault. At the same time, if required, a repeated trip command can be generated to the circuit breakers which are a priori expected to open.

The breaker failure protection function can be applied to perform this task.

The starting signal of the breaker failure protection function is usually the trip command of any other protection function assigned to the protected object. The user has the task to define these starting signals using the graphic equation editor, or if the operation of the individual phases is needed, then the start signals for the phases individually.

Two dedicated timers start at the rising edge of the start signals at the same time, one for the backup trip command and one for the repeated trip command, separately for operation in the individual phases. During the running time of the timers the function optionally monitors the currents, the closed state of the circuit breakers or both, according to the user's choice. The selection is made using an enumerated parameter.

If current supervision is selected by the user then the current limit values must be set correctly. The binary inputs indicating the status of the circuit breaker poles have no meaning.

If contact supervision is selected by the user then the current limit values have no meaning. The binary inputs indicating the status of the circuit breaker poles must be programmed correctly using the graphic equation editor.

If the parameter selection is "Current/Contact", the current parameters and the status signals must be set correctly. The breaker failure protection function resets only if all conditions for faultless state are fulfilled.

If at the end of the running time of the backup timer the currents do not drop below the pre-defined level, and/or the monitored circuit breaker is still in closed position, then a backup trip command is generated.

If repeated trip command is to be generated for the circuit breakers that are expected to open, then the enumerated parameter Retrip must be set to "On". In this case, at the end of the retrip timer(s) a repeated trip command is also generated in the phase(s) where the retrip timer(s) run off.

The pulse duration of the trip command is not shorter than the time defined by setting the parameter Pulse length.

The breaker failure protection function can be disabled by setting the enabling parameter to "Off".

Dynamic blocking (inhibition) is possible using the binary input Block. The conditions are to be programmed by the user, using the graphic equation editor.

#### Technical data

Function	Effective range	Accuracy
Current accuracy		<2 %
Retrip time	approx. 15 ms	
BF time accuracy		± 5 ms
Current reset time	20 ms	

*Table 111 Technical data of the breaker failure protection function*

**Parameters****Enumerated parameters**

Parameter name	Title	Selection range	Default
Selection of the operating mode			
BRF50_Oper_EPar_	Operation	Off, Current, Contact, Current/Contact	Current
Switching on or off of the repeated trip command			
BRF50_ReTr_EPar_	Retrip	Off, On	On

*Table 112 The enumerated parameters of the breaker failure protection function***Integer parameters**

Parameter name	Title	Unit	Min	Max	Step	Default
Phase current setting						
BRF50_StCurrPh_IPar_	Start Ph Current	%	20	200	1	30
Neutral current setting						
BRF50_StCurrN_IPar_	Start Res Current	%	10	200	1	20

*Table 113 The integer parameters of the breaker failure protection function***Timer parameters**

Parameter name	Title	Unit	Min	Max	Step	Default
Time delay for repeated trip command generation						
BRF50_TrDel_TPar_	Retrip Time Delay	msec	0	10000	1	200
Time delay for trip command generation for the backup circuit breaker(s)						
BRF50_BUDeL_TPar_	Backup Time Delay	msec	60	10000	1	300
Trip command impulse duration						
BRF50_Pulse_TPar_	Pulse Duration	msec	0	60000	1	100

*Table 114 The timer parameters of the breaker failure protection function*



### 1.3.1.25 Directional over-power protection function (DOP32)

The directional over-power protection function can be applied to protect any elements of the electric power system mainly generators if the active and/or reactive power has to be limited.

#### Technical data

Function	Effective range	Accuracy
P,Q measurement	$I > 5\% I_n$	$< 3\%$

Table 115 Technical data of the directional over-power protection function

#### Parameters

##### Enumerated parameter

Parameter name	Title	Selection range	Default
Switching on/off of the function			
DOP32_Oper_EPar_	Operation	Off, On	On

Table 116 The enumerated parameter of the directional over-power protection function

##### Boolean parameter

Parameter name	Title	Default
Selection: start signal only or both start signal and trip command		
DOP32_StOnly_BPar_	Start Signal Only	0

Table 117 The Boolean parameter of the directional over-power protection function

##### Integer parameter

Parameter name	Title	Unit	Min	Max	Step	Default
Direction angle						
DOP32_RCA_IPar_	Direction Angle	deg	-179	180	1	0

Table 118 Integer parameter of the directional over-power protection function

##### Float parameter

Parameter name	Title	Unit	Min	Max	Step	Default
Minimum power setting						
DOP32_StPow_FPar_	Start Power	%	1	200	0.1	10

Table 119 Float parameter of the directional over-power protection function

##### Timer parameters

Parameter name	Title	Unit	Min	Max	Step	Default
Definite time delay of the trip command						
DOP32_Delay_TPar_	Time Delay	msec	0	60000	1	100

Table 120 Timer parameter of the directional over-power protection function

### 1.3.1.26 Directional under-power protection function (DUP32)

The directional under-power protection function can be applied mainly to protect any elements of the electric power system, mainly generators, if the active and/or reactive power has to be limited in respect of the allowed minimum power.

#### Technical data

Function	Effective range	Accuracy
P,Q measurement	$I > 5\% I_n$	$< 3\%$

Table 121 Technical data of the directional under-power protection function

#### Parameters

##### Enumerated parameter

Parameter name	Title	Selection range	Default
Switching on/off of the function			
DUP32_Oper_EPar_	Operation	Off, On	On

Table 122 The enumerated parameter of the directional under-power protection function

##### Boolean parameter

Parameter name	Title	Default
Selection: start signal only or both start signal and trip command		
DUP32_StOnly_BPar_	Start Signal Only	0

Table 123 The Boolean parameter of the directional under-power protection function

##### Integer parameter

Parameter name	Title	Unit	Min	Max	Step	Default
Direction angle						
DUP32_RCA_IPar_	Direction Angle	deg	-179	180	1	0

Table 124 Integer parameter of the directional under-power protection function

##### Float parameter

Parameter name	Title	Unit	Min	Max	Step	Default
Minimum power setting						
DUP32_StPow_FPar_	Start Power	%	1	200	0,1	10

Table 125 Float parameter of the directional under-power protection function

##### Timer parameter

Parameter name	Title	Unit	Min	Max	Step	Default
Definite time delay of the trip command						
DUP32_Delay_TPar_	Time Delay	msec	0	60000	1	100

Table 126 Timer parameter of the directional under-power protection function

### 1.3.1.27 Phase-selective trip logic (TRC94\_PhS)


The phase-selective trip logic function operates according to the functionality required by the IEC 61850 standard for the “Trip logic logical node”.

The function receives the trip requirements of the protective functions implemented in the device and combines the parameters and the binary signals into the outputs of the device.

The trip requirements are programmed by the user, using the graphic equation editor. The decision logic has the following aims:

- define a minimal impulse duration even if the protection functions detect a very short time fault,
- in case of phase-to-phase faults, involve the third phase in the trip command,
- fulfill the requirements of the automatic reclosing function to generate a three-phase trip command even in case of single-phase faults,
- in case of an evolving fault, during the evolving fault waiting time include all three phases into the trip command.

The decision logic module combines the status signals and enumerated parameters to generate the trip commands on the output module of the device.

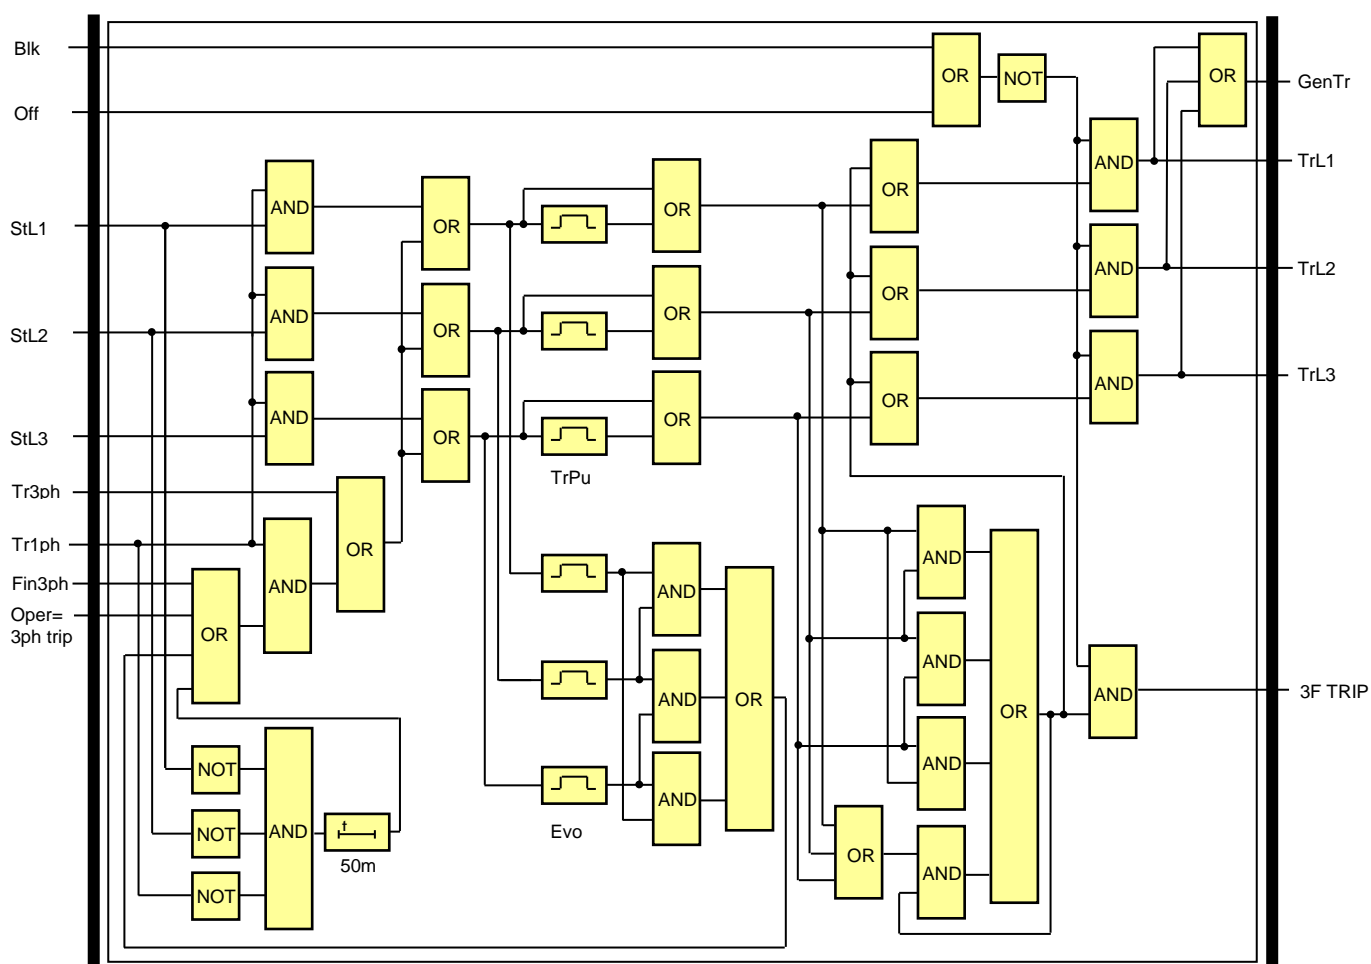

**Technical data**

Function	Accuracy
Timer accuracy	±5% or ±15 ms, whichever is greater

*Table 127 Technical data of the phase-selective trip logic function***Parameters****Enumerated parameter**

Parameter name	Title	Selection range	Default
Selection of the operating mode			
TRC94_Oper_EPar_	Operation	Off, 3ph trip, 1ph/3ph trip	3ph trip

*Tables 128 The enumerated parameter of the phase-selective trip logic function***Timer parameter**

Parameter name	Title	Unit	Min	Max	Step	Default
Minimum duration of the generated impulse						
TRC94_TrPu_TPar_	Min Pulse Duration	msec	50	60000	1	150
Waiting time for evolving fault						
TRC94_Evo_TPar_	Evolving Fault Time	msec	50	60000	1	1000

*Table 129 Timer parameter of the phase-selective trip logic function*

### 1.3.1.28 Dead line detection function (DLD)

The “Dead Line Detection” (DLD) function generates a signal indicating the dead or live state of the line. Additional signals are generated to indicate if the phase voltages and phase currents are above the pre-defined limits.

The task of the “Dead Line Detection” (DLD) function is to decide the Dead line/Live line state.

Criteria of “Dead line” state: all three phase voltages are below the voltage setting value AND all three currents are below the current setting value.

Criteria of “Live line” state: all three phase voltages are above the voltage setting value.

The details are described in the document ***Dead line detection protection function block description.***

#### Technical data

Function	Value	Accuracy
Pick-up voltage		1%
Operation time	<20ms	
Reset ratio	0.95	

*Table 130 Technical data of the dead line detection function*

#### Parameters

##### Integer parameters

Parameter name	Title	Unit	Min	Max	Step	Default
Integer parameters of the dead line detection function						
DLD_ULev_IPar_	Min. Operate Voltage	%	10	100	1	60
DLD_ILev_IPar_	Min. Operate Current	%	2	100	1	10

*Table 131 The integer parameters of the dead line detection function*

## 1.3.2 Control functions

### 1.3.2.1 Circuit breaker control function block (CB1Pol)

The Circuit breaker control function block can be used to integrate the circuit breaker control of the EuroProt+ device into the station control system and to apply active scheme screens of the local LCD of the device.

The Circuit breaker control function block receives remote commands from the SCADA system and local commands from the local LCD of the device, performs the prescribed checking and transmits the commands to the circuit breaker. It processes the status signals received from the circuit breaker and offers them to the status display of the local LCD and to the SCADA system.

Main features:

- Local (LCD of the device) and Remote (SCADA) operation modes can be enabled or disabled individually.
- The signals and commands of the synchro check / synchro switch function block can be integrated into the operation of the function block.
- Interlocking functions can be programmed by the user applying the inputs “EnaOff” (enabled trip command) and “EnaOn” (enabled close command), using the graphic equation editor.
- Programmed conditions can be used to temporarily disable the operation of the function block using the graphic equation editor.
- The function block supports the control models prescribed by the IEC 61850 standard.
- All necessary timing tasks are performed within the function block:
  - Time limitation to execute a command
  - Command pulse duration
  - Filtering the intermediate state of the circuit breaker
  - Checking the synchro check and synchro switch times
  - Controlling the individual steps of the manual commands
- Sending trip and close commands to the circuit breaker (to be combined with the trip commands of the protection functions and with the close command of the automatic reclosing function; the protection functions and the automatic reclosing function directly gives commands to the CB). The combination is made graphically using the graphic equation editor
- Operation counter
- Event reporting

The Circuit breaker control function block has binary input signals. The conditions are defined by the user applying the graphic equation editor. The signals of the circuit breaker control are seen in the binary input status list.

#### Technical data

Function	Accuracy
Operate time accuracy	±5% or ±15 ms, whichever is greater

*Table 132 Technical data of the circuit breaker control function*

**Parameters****Enumerated parameter**

Parameter name	Title	Selection range	Default
The control model of the circuit breaker node according to the IEC 61850 standard			
CB1Pol_ctlMod_EPar_	ControlModel*	Direct normal, Direct enhanced, SBO enhanced	Direct normal

*\*ControlModel*

- Direct normal: only command transmission
- Direct enhanced: command transmission with status check and command supervision
- SBO enhanced: Select Before Operate mode with status check and command supervision

*Table 133 Enumerated parameter of the circuit breaker control function***Boolean parameter**

Boolean parameter	Title	Explanation
CB1Pol_DisOverR_BPar_	Forced check	If true, then the check function cannot be neglected by the check attribute defined by the IEC 61850 standard

*Table 134 Boolean parameter of the circuit breaker control function***Timer parameters**

Parameter name	Title	Unit	Min	Max	Step	Default
Timeout for signaling failed operation						
CB1Pol_TimOut_TPar_	Max.Operating time	msec	10	1000	1	200
Duration of the generated On and Off impulse						
CB1Pol_Pulse_TPar_	Pulse length	msec	50	500	1	100
Waiting time, at expiry intermediate state of the CB is reported						
CB1Pol_MidPos_TPar_	Max.Intermediate time	msec	20	30000	1	100
Length of the time period to wait for the conditions of the synchron state. After expiry of this time, the synchro switch procedure is initiated (see synchro check/ synchro switch function block description)						
CB1Pol_SynTimOut_TPar_	Max.SynChk time	msec	10	5000	1	1000
Length of the time period to wait for the synchro switch impulse (see synchro check/ synchro switch function block description). After this time the function resets, no switching is performed						
CB1Pol_SynSWTimOut_TPar_	Max.SynSW time*	msec	0	60000	1	0
Duration of the waiting time between object selection and command selection. At timeout no command is performed						
CB1Pol_SBOTimeout_TPar_	SBO Timeout	msec	1000	20000	1	5000

\* If this parameter is set to 0, then the "StartSW" output is not activated

*Table 135 Timer parameters of the circuit breaker control function*

**Available internal status variable and command channel**

To generate an active scheme on the local LCD, there is an internal status variable indicating the state of the circuit breaker. Different graphic symbols can be assigned to the values. (See Chapter 3.2 of the document “EuroCAP configuration tool for EuroProt+ devices”).

Status variable	Title	Explanation
CB1Pol_stVal_Ist_	Status	Can be: 0: Intermediate 1: Off 2: On 3: Bad

The available control channel to be selected is:

Command channel	Title	Explanation
CB1Pol_Oper_Con_	Operation	Can be: On Off

Using this channel, the pushbuttons on the front panel of the device can be assigned to close or open the circuit breaker. These are the “Local commands”.



### 1.3.2.2 Disconnecter control function (DisConn)

The Disconnecter control function block can be used to integrate the disconnecter control of the EuroProt+ device into the station control system and to apply active scheme screens of the local LCD of the device.

The Disconnecter control function block receives remote commands from the SCADA system and local commands from the local LCD of the device, performs the prescribed checking and transmits the commands to the disconnecter. It processes the status signals received from the disconnecter and offers them to the status display of the local LCD and to the SCADA system.

Main features:

- Local (LCD of the device) and Remote (SCADA) operation modes can be enabled or disabled individually.
- Interlocking functions can be programmed by the user applying the inputs “EnaOff” (enabled trip command) and “EnaOn” (enabled close command), using the graphic equation editor.
- Programmed conditions can be used to temporarily disable the operation of the function block using the graphic equation editor.
- The function block supports the control models prescribed by the IEC 61850 standard.
- All necessary timing tasks are performed within the function block:
  - Time limitation to execute a command
  - Command pulse duration
  - Filtering the intermediate state of the disconnecter
  - Controlling the individual steps of the manual commands
- Sending trip and close commands to the disconnecter
- Operation counter
- Event reporting

The Disconnecter control function block has binary input signals. The conditions are defined by the user applying the graphic equation editor. The signals of the disconnecter control are seen in the binary input status list.

#### Technical data

Function	Accuracy
Operate time accuracy	±5% or ±15 ms, whichever is greater

Table 136 Technical data of the disconnecter control function

#### Parameters

##### Enumerated parameters

Parameter name	Title	Selection range	Default
The control model of the disconnecter node according to the IEC 61850 standard			
DisConn_ctlMod_EPar_	ControlModel*	Direct normal, Direct enhanced, SBO enhanced	Direct normal
Type of switch			
DisConn_SwTyp_EPar_	Type of Switch	N/A, Load break, Disconnecter, Earthing Switch, HS Earthing Switch	Disconnecter

\*ControlModel

- Direct normal: only command transmission
- Direct enhanced: command transmission with status check and command supervision
- SBO enhanced: Select Before Operate mode with status check and command supervision

Table 137 Enumerated parameters of the disconnecter control function

**Boolean parameter**

Boolean parameter	Title	Explanation
DisConn_DisOverR_BPar_	Forced check	If true, then the check function cannot be neglected by the check attribute defined by the IEC 61850 standard

*Table 138 Boolean parameter of the disconnector control function***Timer parameters**

Parameter name	Title	Unit	Min	Max	Step	Default
Timeout for signaling failed operation						
DisConn_TimOut_TPar_	Max.Operating time	msec	10	20000	1	1000
Duration of the generated On and Off impulse						
DisConn_Pulse_TPar_	Pulse length	msec	50	30000	1	100
Waiting time, at expiry intermediate state of the disconnector is reported						
DisConn_MidPos_TPar_	Max.Intermediate time	msec	20	30000	1	100
Duration of the waiting time between object selection and command selection. At timeout no command is performed						
DisConn_SBOTimeout_TPar_	SBO Timeout	msec	1000	20000	1	5000

*Table 139 Timer parameters of the disconnector control function***Available internal status variable and command channel**

To generate an active scheme on the local LCD, there is an internal status variable indicating the state of the disconnector. Different graphic symbols can be assigned to the values. (See Chapter 3.2 of the document “EuroCAP configuration tool for EuroProt+ devices”).

Status variable	Title	Explanation
DisConn_l_stVal_lst_	Status	Can be: 0: Intermediate 1: Off 2: On 3:Bad

The available control channel to be selected is:

Command channel	Title	Explanation
DisConn_Oper_Con_	Operation	Can be: On Off

Using this channel, the pushbuttons on the front panel of the device can be assigned to close or open the disconnector. These are the “Local commands”.

### 1.3.3 Measuring functions

The measured values can be checked on the touch-screen of the device in the “On-line functions” page, or using an Internet browser of a connected computer. The displayed values are secondary voltages and currents, except the block “Line measurement”. This specific block displays the measured values in primary units, using VT and CT primary value settings.

Analog value	Explanation
<b>VT4 module</b>	
Voltage Ch – U1	RMS value of the Fourier fundamental harmonic voltage component in phase L1
Angle Ch – U1	Phase angle of the Fourier fundamental harmonic voltage component in phase L1*
Voltage Ch – U2	RMS value of the Fourier fundamental harmonic voltage component in phase L2
Angle Ch – U2	Phase angle of the Fourier fundamental harmonic voltage component in phase L2*
Voltage Ch – U3	RMS value of the Fourier fundamental harmonic voltage component in phase L3
Angle Ch – U3	Phase angle of the Fourier fundamental harmonic voltage component in phase L3*
Voltage Ch – U4	RMS value of the Fourier fundamental harmonic voltage component in Channel U4
Angle Ch – U4	Phase angle of the Fourier fundamental harmonic voltage component in Channel U4*
<b>CT4 module</b>	
Current Ch - I1	RMS value of the Fourier fundamental harmonic current component in phase L1
Angle Ch - I1	Phase angle of the Fourier fundamental harmonic current component in phase L1*
Current Ch - I2	RMS value of the Fourier fundamental harmonic current component in phase L2
Angle Ch - I2	Phase angle of the Fourier fundamental harmonic current component in phase L2*
Current Ch - I3	RMS value of the Fourier fundamental harmonic current component in phase L3
Angle Ch - I3	Phase angle of the Fourier fundamental harmonic current component in phase L3*
Current Ch - I4	RMS value of the Fourier fundamental harmonic current component in Channel I4
Angle Ch - I4	Phase angle of the Fourier fundamental harmonic current component in Channel I4*
<b>Distance protection function (DIS21_HV)</b>	
Fault location	Measured distance to fault
Fault react.	Measured reactance in the fault loop
L1N loop R	Resistive component value of impedance in L1-N loop
L1N loop X	Reactive component value of impedance in L1-N loop
L2N loop R	Resistive component value of impedance in L2-N loop
L2N loop X	Reactive component value of impedance in L2-N loop
L3N loop R	Resistive component value of impedance in L3-N loop
L3N loop X	Reactive component value of impedance in L3-N loop
L12 loop R	Resistive component value of impedance in L12 loop
L12 loop X	Reactive component value of impedance in L12 loop
L23 loop R	Resistive component value of impedance in L23 loop
L23 loop X	Reactive component value of impedance in L23 loop
L31 loop R	Resistive component value of impedance in L31 loop
L31 loop X	Reactive component value of impedance in L31 loop

<i>Synchrocheck function (SYN25)</i>	
Voltage Diff	Voltage different value
Frequency Diff	Frequency different value
Angle Diff	Angle different value
<i>Line measurement (MXU_L) (here the displayed information means primary value)</i>	
Active Power – P	Three-phase active power
Reactive Power – Q	Three-phase reactive power
Apparent Power – S	Three-phase power based on true RMS voltage and current measurement
Current L1	True RMS value of the current in phase L1
Current L2	True RMS value of the current in phase L2
Current L3	True RMS value of the current in phase L3
Voltage L1	True RMS value of the voltage in phase L1
Voltage L2	True RMS value of the voltage in phase L2
Voltage L3	True RMS value of the voltage in phase L3
Voltage L12	True RMS value of the voltage between phases L1 L2
Voltage L23	True RMS value of the voltage between phases L2 L3
Voltage L31	True RMS value of the voltage between phases L3 L1
Frequency	Frequency
<i>Metering (MTR)</i>	
Forward MWh	Forward MWh
Backward MWh	Backward MWh
Forward MVarh	Forward MVarh
Backward MVarh	Backward MVarh
<i>Line thermal protection (TTR49L)</i>	
Calc. Temperature	Calculated line temperature

\* The reference angle is the phase angle of “Voltage Ch - U1”

Table 140 Measured analog values

### 1.3.3.1 Current input function (CT4)

If the factory configuration includes a current transformer hardware module, the current input function block is automatically configured among the software function blocks. Separate current input function blocks are assigned to each current transformer hardware module.

A current transformer hardware module is equipped with four special intermediate current transformers. (See Chapter 5 of the EuroProt+ hardware description document.) As usual, the first three current inputs receive the three phase currents (IL1, IL2, IL3), the fourth input is reserved for zero sequence current, for the zero sequence current of the parallel line or for any additional current. Accordingly, the first three inputs have common parameters while the fourth current input needs individual setting.

The role of the current input function block is to

- set the required parameters associated to the current inputs,
- deliver the sampled current values for disturbance recording,
- perform the basic calculations
  - Fourier basic harmonic magnitude and angle,
  - True RMS value;
- provide the pre-calculated current values to the subsequent software modules,
- deliver the basic calculated values for on-line displaying.

#### Operation of the current input algorithm

The current input function block receives the sampled current values from the internal operating system. The scaling (even hardware scaling) depends on parameter setting. See parameters CT4\_Ch13Nom\_EPar\_ (Rated Secondary I1-3) and CT4\_Ch4Nom\_EPar\_ (Rated Secondary I4). The options to choose from are 1A or 5A (in special applications, 0.2A or 1A). This parameter influences the internal number format and, naturally, accuracy. (A small current is processed with finer resolution if 1A is selected.)

If needed, the phase currents can be inverted by setting the parameter CT4\_Ch13Dir\_EPar\_ (Starpoint I1-3). This selection applies to each of the channels IL1, IL2 and IL3. The fourth current channel can be inverted by setting the parameter CT4\_Ch4Dir\_EPar\_ (Direction I4). This inversion may be needed in protection functions such as distance protection, differential protection or for any functions with directional decision.

These sampled values are available for further processing and for disturbance recording.

The performed basic calculation results the Fourier basic harmonic magnitude and angle and the true RMS value. These results are processed by subsequent protection function blocks and they are available for on-line displaying as well.

The function block also provides parameters for setting the primary rated currents of the main current transformer. This function block does not need that parameter setting. These values are passed on to function blocks such as displaying primary measured values, primary power calculation, etc.

#### Technical data

Function	Range	Accuracy
Current accuracy	20 – 2000% of In	±1% of In

Table 141 Technical data of the current input

**Parameters****Enumerated parameters**

Parameter name	Title	Selection range	Default
Rated secondary current of the first three input channels. 1A or 5A is selected by parameter setting, no hardware modification is needed.			
CT4_Ch13Nom_EPar_	Rated Secondary I1-3	1A,5A	1A
Rated secondary current of the fourth input channel. 1A or 5A is selected by parameter setting, no hardware modification is needed.			
CT4_Ch4Nom_EPar_	Rated Secondary I4	1A,5A (0.2A or 1A)	1A
Definition of the positive direction of the first three currents, given by location of the secondary star connection point			
CT4_Ch13Dir_EPar_	Starpoint I1-3	Line,Bus	Line
Definition of the positive direction of the fourth current, given as normal or inverted			
CT4_Ch4Dir_EPar_	Direction I4	Normal,Inverted	Normal

*Table 142 The enumerated parameters of the current input function***Floating point parameters**

Parameter name	Title	Dim.	Min	Max	Default
Rated primary current of channel1					
CT4_PrI1_FPar_	Rated Primary I1	A	100	4000	1000
Rated primary current of channel2					
CT4_PrI2_FPar_	Rated Primary I2	A	100	4000	1000
Rated primary current of channel3					
CT4_PrI3_FPar_	Rated Primary I3	A	100	4000	1000
Rated primary current of channel4					
CT4_PrI4_FPar_	Rated Primary I4	A	100	4000	1000

*Table 143 The floating point parameters of the current input function*

NOTE: The rated primary current of the channels is not needed for the current input function block itself. These values are passed on to the subsequent function blocks.

The **measured values** of the current input function block.

Measured value	Dim.	Explanation
Current Ch - I1	A(secondary)	Fourier basic component of the current in channel IL1
Angle Ch - I1	degree	Vector position of the current in channel IL1
Current Ch - I2	A(secondary)	Fourier basic component of the current in channel IL2
Angle Ch - I2	degree	Vector position of the current in channel IL2
Current Ch - I3	A(secondary)	Fourier basic component of the current in channel IL3
Angle Ch - I3	degree	Vector position of the current in channel IL3
Current Ch - I4	A(secondary)	Fourier basic component of the current in channel I4
Angle Ch - I4	degree	Vector position of the current in channel I4

*Table 144 The measured analogue values of the current input function*

NOTE1: The scaling of the Fourier basic component is such that if pure sinusoid 1A RMS of the rated frequency is injected, the displayed value is 1A. (The displayed value does not depend on the parameter setting values "Rated Secondary".)

NOTE2: The reference of the vector position depends on the device configuration. If a voltage input module is included, then the reference vector (vector with angle 0 degree) is the vector calculated for the first voltage input channel of the first applied voltage input module. If no voltage input module is configured, then the reference vector (vector with angle 0 degree)

is the vector calculated for the first current input channel of the first applied current input module.

*Figure 7* shows an example of how the calculated Fourier components are displayed in the on-line block. (See the document “EuroProt+ Remote user interface description”.)

[-] CT4 module		
Current Ch - I1	0.84	A
Angle Ch - I1	-9	deg
Current Ch - I2	0.84	A
Angle Ch - I2	-129	deg
Current Ch - I3	0.85	A
Angle Ch - I3	111	deg
Current Ch - I4	0.00	A
Angle Ch - I4	0	deg

*Figure 7 Example: On-line displayed values for the current input module*

### 1.3.3.2 Voltage input function (VT4)

If the factory configuration includes a voltage transformer hardware module, the voltage input function block is automatically configured among the software function blocks. Separate voltage input function blocks are assigned to each voltage transformer hardware module.

A voltage transformer hardware module is equipped with four special intermediate voltage transformers. (See Chapter 6 of the EuroProt+ hardware description document.) As usual, the first three voltage inputs receive the three phase voltages (UL1, UL2, UL3), the fourth input is reserved for zero sequence voltage or for a voltage from the other side of the circuit breaker for synchron switching. All inputs have a common parameter for type selection: 100V or 200V.

Additionally, there is a correction factor available if the rated secondary voltage of the main voltage transformer (e.g. 110V) does not match the rated input of the device.

The role of the voltage input function block is to

- set the required parameters associated to the voltage inputs,
- deliver the sampled voltage values for disturbance recording,
- perform the basic calculations
  - Fourier basic harmonic magnitude and angle,
  - True RMS value;
- provide the pre-calculated voltage values to the subsequent software modules,
- deliver the basic calculated values for on-line displaying.

#### Operation of the voltage input algorithm

The voltage input function block receives the sampled voltage values from the internal operating system. The scaling (even hardware scaling) depends on parameter setting. See the parameter VT4\_Type\_EPar\_ (Range). The options to choose from are 100V or 200V. This parameter influences the internal number format and, naturally, accuracy. (A small voltage is processed with finer resolution if 100V is selected.)

The connection of the first three VT secondary winding must be set to reflect actual physical connection. The associated parameter is VT4\_Ch13Nom\_EPar\_ (Connection U1-3). The selection can be: Ph-N, Ph-Ph or Ph-N-Isolated.

The Ph-N option is applied in solidly grounded networks, where the measured phase voltage is never above 1.5- $U_n$ . In this case the primary rated voltage of the VT must be the value of the rated PHASE-TO-NEUTRAL voltage.

The Ph-N option is applied in compensated or isolated networks, where the measured phase voltage can be above 1.5- $U_n$  even in normal operation. In this case the primary rated voltage of the VT must be the value of the rated PHASE-TO-PHASE voltage.

If phase-to-phase voltage is connected to the VT input of the device, then the Ph-Ph option is to be selected. Here, the primary rated voltage of the VT must be the value of the rated PHASE-TO-PHASE voltage. This option must not be selected if the distance protection function is supplied from the VT input.

The fourth input is reserved for zero sequence voltage or for a voltage from the other side of the circuit breaker for synchron switching. Accordingly, the connected voltage must be identified with parameter setting VT4\_Ch4Nom\_EPar\_ (Connection U4). Here, phase-to-neutral or phase-to-phase voltage can be selected: Ph-N, Ph-Ph

If needed, the phase voltages can be inverted by setting the parameter VT4\_Ch13Dir\_EPar\_ (Direction U1-3). This selection applies to each of the channels UL1, UL2 and UL3. The fourth voltage channel can be inverted by setting the parameter VT4\_Ch4Dir\_EPar\_ (Direction U4). This inversion may be needed in protection functions such as distance protection, differential protection or for any functions with directional decision, or for checking the voltage vector positions.



Additionally, there is a correction factor available if the rated secondary voltage of the main voltage transformer (e.g. 110V) does not match the rated input of the device. The related parameter is VT4\_CorrFact\_IPar\_ (VT correction). As an example: if the rated secondary voltage of the main voltage transformer is 110V, then select Type 100 for the parameter "Range" and the required value to set here is 110%.

These sampled values are available for further processing and for disturbance recording.

The performed basic calculation results the Fourier basic harmonic magnitude and angle and the true RMS value of the voltages. These results are processed by subsequent protection function blocks and they are available for on-line displaying as well.

The function block also provides parameters for setting the primary rated voltages of the main voltage transformer. This function block does not need that parameter setting. These values are passed on to function blocks such as displaying primary measured values, primary power calculation, etc. Concerning the rated voltage, see the instructions related to the parameter for the connection of the first three VT secondary winding.

### Parameters

#### Enumerated parameters

Parameter name	Title	Selection range	Default
Rated secondary voltage of the input channels. 100 V or 200V is selected by parameter setting, no hardware modification is needed.			
VT4_Type_EPar_	Range	Type 100, Type 200	Type 100
Connection of the first three voltage inputs (main VT secondary)			
VT4_Ch13Nom_EPar_	Connection U1-3	Ph-N, Ph-Ph, Ph-N-Isolated	Ph-N
Selection of the fourth channel input: phase-to-neutral or phase-to-phase voltage			
VT4_Ch4Nom_EPar_	Connection U4	Ph-N, Ph-Ph	Ph-Ph
Definition of the positive direction of the first three input channels, given as normal or inverted			
VT4_Ch13Dir_EPar_	Direction U1-3	Normal, Inverted	Normal
Definition of the positive direction of the fourth voltage, given as normal or inverted			
VT4_Ch4Dir_EPar_	Direction U4	Normal, Inverted	Normal

Table 145 The enumerated parameters of the voltage input function

#### Integer parameter

Parameter name	Title	Unit	Min	Max	Step	Default
Voltage correction						
VT4_CorrFact_IPar_	VT correction	%	100	115	1	100

Table 146 The integer parameter of the voltage input function

#### Floating point parameters

Parameter name	Title	Dim.	Min	Max	Default
Rated primary voltage of channel1					
VT4_PriU1_FPar	Rated Primary U1	kV	1	1000	100
Rated primary voltage of channel2					
VT4_PriU2_FPar	Rated Primary U2	kV	1	1000	100
Rated primary voltage of channel3					
VT4_PriU3_FPar	Rated Primary U3	kV	1	1000	100
Rated primary voltage of channel4					
VT4_PriU4_FPar	Rated Primary U4	kV	1	1000	100

Table 147 The floating point parameters of the voltage input function

NOTE: The rated primary voltage of the channels is not needed for the voltage input function block itself. These values are passed on to the subsequent function blocks.

Function	Range	Accuracy
Voltage accuracy	30% ... 130%	< 0.5 %

Table 148 Technical data of the voltage input

#### Measured values

Measured value	Dim.	Explanation
Voltage Ch - U1	V(secondary)	Fourier basic component of the voltage in channel UL1
Angle Ch - U1	degree	Vector position of the voltage in channel UL1
Voltage Ch - U2	V(secondary)	Fourier basic component of the voltage in channel UL2
Angle Ch - U2	degree	Vector position of the voltage in channel UL2
Voltage Ch - U3	V(secondary)	Fourier basic component of the voltage in channel UL3
Angle Ch - U3	degree	Vector position of the voltage in channel UL3
Voltage Ch - U4	V(secondary)	Fourier basic component of the voltage in channel U4
Angle Ch - U4	degree	Vector position of the voltage in channel U4

Table 149 The measured analogue values of the voltage input function

NOTE1: The scaling of the Fourier basic component is such if pure sinusoid 57V RMS of the rated frequency is injected, the displayed value is 57V. (The displayed value does not depend on the parameter setting values "Rated Secondary".)

NOTE2: The reference vector (vector with angle 0 degree) is the vector calculated for the first voltage input channel of the first applied voltage input module.

The figure below shows an example of how the calculated Fourier components are displayed in the on-line block. (See the document EuroProt+ "Remote user interface description".)

[-] VT4 module		
Voltage Ch - U1	56.75	V
Angle Ch - U1	0	deg
Voltage Ch - U2	51.46	V
Angle Ch - U2	-112	deg
Voltage Ch - U3	60.54	V
Angle Ch - U3	128	deg
Voltage Ch - U4	0.00	V
Angle Ch - U4	0	deg

Figure 8 Example: On-line displayed values for the voltage input module

### 1.3.3.3 Line measurement function (MXU)

#### The measurement

The input values of the EuroProt+ devices are the secondary signals of the voltage transformers and those of the current transformers.

These signals are pre-processed by the “Voltage transformer input” function block and by the “Current transformer input” function block. These function blocks are described in separate documents. The pre-processed values include the Fourier basic harmonic phasors of the voltages and currents and the true RMS values. Additionally, it is in these function blocks that parameters are set concerning the voltage ratio of the primary voltage transformers and current ratio of the current transformers.

Based on the pre-processed values and the measured transformer parameters, the “Line measurement” function block calculates - depending on the hardware and software configuration - the primary RMS values of the voltages and currents and some additional values such as active and reactive power, symmetrical components of voltages and currents. These values are available as primary quantities and they can be displayed on the on-line screen of the device or on the remote user interface of the computers connected to the communication network and they are available for the SCADA system using the configured communication system.

#### Reporting the measured values and the changes

It is usual for the SCADA systems that they sample the measured and calculated values in regular time periods and additionally they receive the changed values as reports at the moment when any significant change is detected in the primary system. The “Line measurement” function block is able to perform such reporting for the SCADA system.

#### Operation of the line measurement function block

The **inputs** of the line measurement function are

- the Fourier components and true RMS values of the measured voltages and currents,
- frequency measurement,
- parameters.

The **outputs** of the line measurement function are

- displayed measured values,
- reports to the SCADA system.

NOTE: the scaling values are entered as parameter setting for the “Voltage transformer input” function block and for the “Current transformer input” function block.

#### The measured values

The **measured values** of the line measurement function depend on the hardware configuration. As an example, Table 150 shows the list of the measured values available in a configuration for solidly grounded networks.

Measured value	Explanation
MXU_P_OLM_	Active Power – P (Fourier base harmonic value)
MXU_Q_OLM_	Reactive Power – Q (Fourier base harmonic value)
MXU_S_OLM_	Apparent Power – S (Fourier base harmonic value)
MXU_I1_OLM_	Current L1
MXU_I2_OLM_	Current L2
MXU_I3_OLM_	Current L3
MXU_U1_OLM_	Voltage L1
MXU_U2_OLM_	Voltage L2
MXU_U3_OLM_	Voltage L3
MXU_U12_OLM_	Voltage L12
MXU_U23_OLM_	Voltage L23
MXU_U31_OLM_	Voltage L31
MXU_f_OLM_	Frequency

*Table 150 Example: Measured values in a configuration for solidly grounded networks*

Another example is Figure 9, where the measured values available are shown as on-line information in a configuration for compensated networks.

[-] Line measurement		
Active Power - P	17967.19	kW
Reactive Power - Q	10414.57	kVAr
Current L1	97	A
Current L2	97	A
Current L3	97	A
Voltage L12	120.0	kV
Voltage L23	120.0	kV
Voltage L31	120.0	kV
Residual Voltage	0.0	kV
Frequency	50.00	Hz

*Figure 9 Example: Measured values in a configuration for compensated networks*

The available quantities are described in the configuration description documents.

### Reporting the measured values and the changes

For reporting, additional information is needed, which is defined in parameter setting. As an example, in a configuration for solidly grounded networks the following parameters are available:

**Enumerated parameters**

Parameter name	Title	Selection range	Default
Selection of the reporting mode for active power measurement			
MXU_PRepMode_EPar_	Operation ActivePower	Off, Amplitude, Integrated	Amplitude
Selection of the reporting mode for reactive power measurement			
MXU_QRepMode_EPar_	Operation ActivePower	Off, Amplitude, Integrated	Amplitude
Selection of the reporting mode for apparent power measurement			
MXU_SRepMode_EPar_	Operation ApparPower	Off, Amplitude, Integrated	Amplitude
Selection of the reporting mode for current measurement			
MXU_IRepMode_EPar_	Operation Current	Off, Amplitude, Integrated	Amplitude
Selection of the reporting mode for voltage measurement			
MXU_URepMode_EPar_	Operation Voltage	Off, Amplitude, Integrated	Amplitude
Selection of the reporting mode for frequency measurement			
MXU_fRepMode_EPar_	Operation Frequency	Off, Amplitude, Integrated	Amplitude

*Table 151 The enumerated parameters of the line measurement function*

The selection of the reporting mode items is explained in Figure 10 and in Figure 11.

**“Amplitude” mode of reporting**

If the “Amplitude” mode is selected for reporting, a report is generated if the measured value leaves the deadband around the previously reported value. As an example, Figure 10 shows that the current becomes higher than the value reported in “report1” PLUS the Deadband value, this results “report2”, etc.

For this mode of operation, the Deadband parameters are explained in Table 152.

The “Range” parameters in Table 152 are needed to evaluate a measurement as “out-of-range”.

**Floating point parameters**

Parameter name	Title	Dim.	Min	Max	Step	Default
Deadband value for the active power						
MXU_PDeadB_FPar_	Deadband value - P	MW	0.1	100000	0.01	10
Range value for the active power						
MXU_PRange_FPar_	Range value - P	MW	1	100000	0.01	500
Deadband value for the reactive power						
MXU_QDeadB_FPar_	Deadband value - Q	MVAr	0.1	100000	0.01	10
Range value for the reactive power						
MXU_QRange_FPar_	Range value - Q	MVAr	1	100000	0.01	500
Deadband value for the apparent power						
MXU_SDeadB_FPar_	Deadband value - S	MVA	0.1	100000	0.01	10
Range value for the apparent power						
MXU_SRange_FPar_	Range value - S	MVA	1	100000	0.01	500
Deadband value for the current						
MXU_IDeadB_FPar_	Deadband value - I	A	1	2000	1	10
Range value for the current						
MXU_IRange_FPar_	Range value - I	A	1	5000	1	500
Deadband value for the phase-to-neutral voltage						
MXU_UPhDeadB_FPar_	Deadband value – U ph-N	kV	0.1	100	0.01	1
Range value for the phase-to-neutral voltage						
MXU_UPhRange_FPar_	Range value – U ph-N	kV	1	1000	0.1	231
Deadband value for the phase-to-phase voltage						
MXU_UPPDeadB_FPar_	Deadband value – U ph-ph	kV	0.1	100	0.01	1
Range value for the phase-to-phase voltage						
MXU_UPPRange_FPar_	Range value – U ph-ph	kV	1	1000	0.1	400
Deadband value for the current						
MXU_fDeadB_FPar_	Deadband value - f	Hz	0.01	1	0.01	0.02
Range value for the current						
MXU_fRange_FPar_	Range value - f	Hz	0.05	10	0.01	5

*Table 152 The floating-point parameters of the line measurement function*

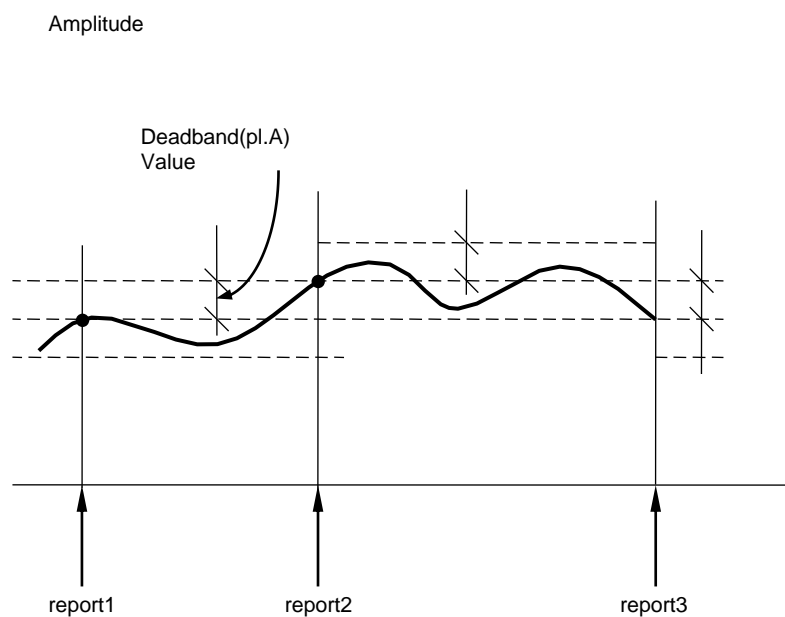


Figure 10 Reporting if "Amplitude" mode is selected

### "Integral" mode of reporting

If the "Integrated" mode is selected for reporting, a report is generated if the time integral of the measured value since the last report gets becomes larger, in the positive or negative direction, then the (deadband\*1sec) area. As an example, Figure 11 shows that the integral of the current in time becomes higher than the Deadband value multiplied by 1sec, this results "report2", etc.

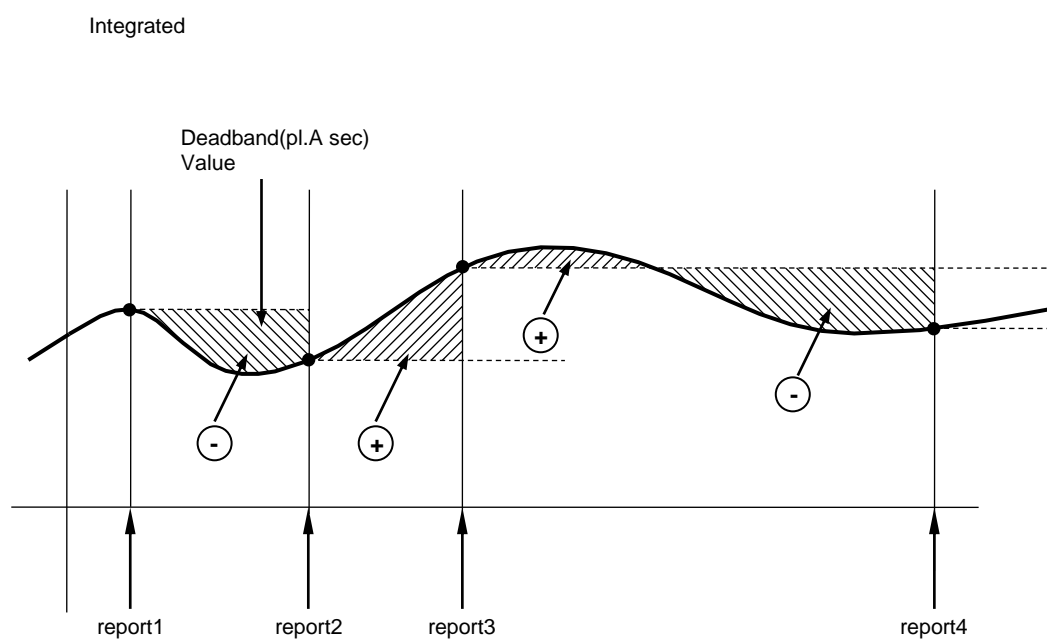


Figure 11 Reporting if "Integrated" mode is selected

**Periodic reporting**

Periodic reporting is generated independently of the changes of the measured values when the defined time period elapses. The required parameter setting is shown in Table 153.

**Integer parameters**

Parameter name	Title	Unit	Min	Max	Step	Default
Reporting time period for the active power						
MXU_PIntPer_IPar_	Report period P	sec	0	3600	1	0
Reporting time period for the reactive power						
MXU_QIntPer_IPar_	Report period Q	sec	0	3600	1	0
Reporting time period for the apparent power						
MXU_SIntPer_IPar_	Report period S	sec	0	3600	1	0
Reporting time period for the voltage						
MXU_UIntPer_IPar_	Report period U	sec	0	3600	1	0
Reporting time period for the current						
MXU_IIntPer_IPar_	Report period I	sec	0	3600	1	0
Reporting time period for the frequency						
MXU_fIntPer_IPar_	Report period f	sec	0	3600	1	0

*Table 153 The integer parameters of the line measurement function*

If the reporting time period is set to 0, then no periodic reporting is performed for this quantity.

All reports can be disabled for a quantity if the reporting mode is set to "Off". See Table 151.

**Technical data**

Function	Range	Accuracy
Current accuracy		
with CT/5151 or CT/5102 modules	0,2 In – 0,5 In	±2%, ±1 digit
	0,5 In – 20 In	±1%, ±1 digit
with CT/1500 module	0,03 In – 2 In	±0,5%, ±1 digit
Voltage accuracy	5 – 150% of Un	±0.5% of Un, ±1 digit
Power accuracy	I>5% In	±3%, ±1 digit
Frequency accuracy	U>3.5%Un 45Hz – 55Hz	2mHz

*Table 154 Technical data of line measurement*



### 1.3.4 Disturbance recorder

The E2-Line configuration contains a disturbance recorder function. The details are described in the document shown in Table 155.

Name	Title	Document
DRE	Disturbance Rec	<b><i>Disturbance recorder function block description</i></b>

*Table 155 Implemented disturbance recorder function*

The recorded analog channels:

Recorded analog signal	Explanation
UL1	Measured voltage of line 1
UL2	Measured voltage of line 2
UL3	Measured voltage of line 3
U4	Measured voltage of the fourth voltage input channel (Uo)
IL1	Measured current for all overcurrent protection functions in line 1
IL2	Measured current for all overcurrent protection functions in line 2
IL3	Measured current for all overcurrent protection functions in line 3
I4	Measured current of the fourth current input channel (Io)

*Table 156 Disturbance recorder, recorded analog channels*

The recorded binary channels:

Recorded binary signal	Explanation
Trip	Trip command of the trip logic function
LineDiff Trip	Trip command of the line differential prot. function
BackupTrip	Backup trip command of the breaker failure prot. function
OutOfStep Trip	Out of step trip command of the distance prot. function
PSD Detect	Power-swing detection of the distance prot. function
SOTF Trip	Switch-onto-fault trip of the distance prot. function
DIS Start L1	Start signal of the distance prot. function in L1 phase
DIS Start L2	Start signal of the distance prot. function in L2 phase
DIS Start L3	Start signal of the distance prot. function in L3 phase
Z1 Start	Start signal of the distance prot. function in zone 1
Z2 Start	Start signal of the distance prot. function in zone 2
Z3 Start	Start signal of the distance prot. function in zone 3
Z4 Start	Start signal of the distance prot. function in zone 4
Z5 Start	Start signal of the distance prot. function in zone 5
Z1 Trip	Trip command of the distance prot. function in zone 1
Z2 Trip	Trip command of the distance prot. function in zone 2
Z3 Trip	Trip command of the distance prot. function in zone 3
Z4 Trip	Trip command of the distance prot. function in zone 4
Z5 Trip	Trip command of the distance prot. function in zone 5
Inst OC Trip	Trip command of the 3ph instantaneous OC prot. function
Res Inst OC Trip	Trip command of the residual instantaneous OC prot. function
Time OC Start Low	Low setting stage start signal of the 3ph time OC prot. function
Time OC Start High	High setting stage start signal of the 3ph time OC prot. function
Res Time OC Start Low	Low setting stage start signal of the residual time OC prot. function

Res Time OC Start High	High setting stage start signal of the residual time OC prot. function
Dir OC Start Low	Low setting stage start signal of the 3ph directional OC prot. funct.
Dir OC Start High	High setting stage start signal of the 3ph directional OC prot. funct.
Res Dir OC Start Low	Low setting stage start signal of the residual directional OC prot.
Res Dir OC Start High	High setting stage start signal of the residual directional OC prot.
Overfrequ Start Low	Low setting stage start signal of the overfrequency prot. function
Overfrequ Start High	High setting stage start signal of the overfrequency prot. function
Underfrequ Start Low	Low setting stage start signal of the underfrequency prot. function
Underfrequ Start High	High setting stage start signal of the underfrequency prot. function
ROC of Frequ Start	Start signal of the rate of change of frequency prot. function
Overvoltage Start Low	Low setting stage start signal of the definite time overvoltage prot.
Overvoltage Start High	High setting stage start signal of the definite time overvoltage prot.
Res Overvolt Start Low	Low setting stage start signal of the residual overvoltage prot.
Res Overvolt Start High	High setting stage start signal of the residual overvoltage prot.
Undervoltage Start Low	Low setting stage start signal of the definite time undervoltage prot.
Undervoltage Start High	High setting stage start signal of the def. time undervoltage prot.
Therm OL Alarm	Alarm signal of the thermal overload prot.
Unbalance Start	Unbalance signal of the current unbalance prot. function
VT Failure	Voltage transformer fuse failure
Release Aut	Release auto signal of the synchrocheck function
Syn Command	Synchroswitch command of the synchrocheck function
REC Blocked	Blocked state of auto reclosing function
REC Close	Close command of auto reclosing function

*Table 157 Disturbance recorder, recorded binary channels*

#### Enumerated parameter

Parameter name	Title	Selection range	Default
Parameter for activation			
DRE_Oper_EPar_	Operation	Off, On	Off

*Table 158 The enumerated parameter of the disturbance recorder function*

**Timer parameters**

Parameter name	Title	Unit	Min	Max	Step	Default
Pre-fault time:						
DRE_PreFault_TPar_	PreFault	msec	100	1000	1	200
Post-fault time:						
DRE_PostFault_TPar_	PostFault	msec	100	1000	1	200
Overall-fault time limit:						
DRE_MaxFault_TPar_	MaxFault	msec	500	10000	1	1000

*Table 159 The timer parameters of the disturbance recorder function*

### 1.3.5 Event recorder

The events of the device and those of the protection functions are recorded with a time stamp of 1 ms time resolution. This information with indication of the generating function can be checked on the touch-screen of the device in the “Events” page, or using an Internet browser of a connected computer.

Event	Explanation
<i>Voltage transformer supervision function (VTS)</i>	
VT Failure	Voltage transformer failure
<i>Distance protection (DIS21_HV2)</i>	
Z1 Start	Distance protection zone 1 start
Z1 Direction	Distance protection zone 1 direction
Z1 Trip	Distance protection zone 1 trip
Z1 FaultLoop	Distance protection zone 1 fault loop
Z2 Start	Distance protection zone 2 start
Z2 Direction	Distance protection zone 2 direction
Z2 Trip	Distance protection zone 2 trip
Z2 FaultLoop	Distance protection zone 2 fault loop
Z3 Start	Distance protection zone 3 start
Z3 Direction	Distance protection zone 3 direction
Z3 Trip	Distance protection zone 3 trip
Z3 FaultLoop	Distance protection zone 3 fault loop
Z4 Start	Distance protection zone 4 start
Z4 Direction	Distance protection zone 4 direction
Z4 Trip	Distance protection zone 4 trip
Z4 FaultLoop	Distance protection zone 4 fault loop
Z5 Start	Distance protection zone 5 start
Z5 Direction	Distance protection zone 5 direction
Z5 Trip	Distance protection zone 5 trip
Z5 FaultLoop	Distance protection zone 5 fault loop
SOTF condition	Distance protection switch on-to-fault
SOTF Trip	Distance protection switch on-to-fault trip
Start L1	Distance protection start in phase L1
Start L2	Distance protection start in phase L2
Start L3	Distance protection start in phase L3
Start Neut	Distance protection start in earth loop
Start	Distance protection general start
PSD Detect	Distance protection power swing detection
OutOfStep Trip	Distance protection out of step trip
Fault Loc. km	Distance protection distance to fault in km
Fault Loc. ohm	Distance protection distance to fault in ohm

<i>Three-phase instantaneous overcurrent protection function (IOC50)</i>	
Trip L1	Trip command in phase L1
Trip L2	Trip command in phase L2
Trip L3	Trip command in phase L3
General Trip	General trip command
<i>Three-phase overcurrent protection function (TOC51_1)</i>	
Low Start L1	Low setting stage start signal in phase L1
Low Start L2	Low setting stage start signal in phase L2
Low Start L3	Low setting stage start signal in phase L3
Low General Start	Low setting stage general start signal
Low General Trip	Low setting stage general trip command
<i>Three-phase overcurrent protection function (TOC51_2)</i>	
High Start L1	High setting stage start signal in phase L1
High Start L2	High setting stage start signal in phase L2
High Start L3	High setting stage start signal in phase L3
High General Start	High setting stage general start signal
High General Trip	High setting stage general trip command
<i>Residual instantaneous overcurrent protection function (IOC50N)</i>	
General Trip	General trip command
<i>Residual overcurrent protection function (TOC51N_1)</i>	
Low General Start	Low setting stage general start signal
Low General Trip	Low setting stage general trip command
<i>Residual overcurrent protection function (TOC51N_2)</i>	
High General Start	High setting stage general start signal
High General Trip	High setting stage general trip command
<i>Directional residual overcurrent protection function (TOC67N_1)</i>	
Low Start	Low setting stage general start signal
Low Trip	Low setting stage general trip command
<i>Directional residual overcurrent protection function (TOC67N_2)</i>	
High Start	High setting stage general start signal
High Trip	High setting stage general trip command
<i>Inrush detection and blocking (INR2)</i>	
2.Harm Restraint	Second harmonic restraint
<i>Current unbalance function (VCB60)</i>	
General Start	Current unbalance general start signal
General Trip	Current unbalance general trip command
<i>Definite time overvoltage protection function (TOV59_1)</i>	
Low Start L1	Low setting stage start signal in phase L1
Low Start L2	Low setting stage start signal in phase L2
Low Start L3	Low setting stage start signal in phase L3
Low General Start	Low setting stage general start signal
Low General Trip	Low setting stage general trip command
<i>Definite time overvoltage protection function (TOV59_2)</i>	
High Start L1	High setting stage start signal in phase L1
High Start L2	High setting stage start signal in phase L2
High Start L3	High setting stage start signal in phase L3
High General Start	High setting stage general start signal
High General Trip	High setting stage general trip command
<i>Definite time undervoltage protection function (TUV27_1)</i>	
Low Start L1	Low setting stage start signal in phase L1
Low Start L2	Low setting stage start signal in phase L2
Low Start L3	Low setting stage start signal in phase L3
Low General Start	Low setting stage general start signal
Low General Trip	Low setting stage general trip command

<i>Definite time undervoltage protection function (TUV27_2)</i>	
High Start L1	High setting stage start signal in phase L1
High Start L2	High setting stage start signal in phase L2
High Start L3	High setting stage start signal in phase L3
High General Start	High setting stage general start signal
High General Trip	High setting stage general trip command
<i>Definite time zero sequence overvoltage protection function (TOV59N_1)</i>	
Low General Start	Low setting stage general start signal
Low General Trip	Low setting stage general trip command
<i>Definite time zero sequence overvoltage protection function (TOV59N_2)</i>	
High General Start	High setting stage general start signal
High General Trip	High setting stage general trip command
<i>Overfrequency protection function (TOF81_1)</i>	
Low General Start	Low setting stage general start signal
Low General Trip	Low setting stage general trip command
<i>Overfrequency protection function (TOF81_2)</i>	
High General Start	High setting stage general start signal
High General Trip	High setting stage general trip command
<i>Underfrequency protection function (TUF81_1)</i>	
Low General Start	Low setting stage general start signal
Low General Trip	Low setting stage general trip command
<i>Underfrequency protection function (TUF81_2)</i>	
High General Start	High setting stage general start signal
High General Trip	High setting stage general trip command
<i>(Rate of change of frequency protection function (FRC81)</i>	
General Start	General start signal
General Trip	General trip command
<i>Synchro-check, synchro-switch function (SYN25)</i>	
Released Auto	Automatic close function released
In progress Auto	Automatic close function in progress
Close_Auto	Close command for automatic request
Release Man	Manual close function released
In progress Man	Manual close function in progress
Close_Manual	Close command for manual request
<i>Breaker failure protection function (BRF50)</i>	
General Trip	Start of the function
Retrip L1	Repeated trip command in phase L1
Retrip L2	Repeated trip command in phase L2
Retrip L3	Repeated trip command in phase L3
Backup Trip	Repeated trip command
<i>Circuit breaker wear monitoring function (CBWear)</i>	
Alarm	
<i>Teleprotection function (SCH85)</i>	
Receive signal 1	Receive signal 1 of teleprotection function
Receive signal 2	Receive signal 2 of teleprotection function
Teleprot. Trip	Trip command of teleprotection function
Send signal	Send signal of teleprotection function
Carrier Failed	Carrier Failed of teleprotection function

<i>Measurement function (MXU_L)</i>	
Current L1	Current violation in phase L1
Current L2	Current violation in phase L2
Current L3	Current violation in phase L3
Voltage L1	Voltage violation in phase L1
Voltage L2	Voltage violation in phase L2
Voltage L3	Voltage violation in phase L3
Voltage L12	Voltage violation in loop L1-L2
Voltage L23	Voltage violation in loop L2-L3
Voltage L31	Voltage violation in loop L3-L1
Active Power – P	Active Power – P violation
Reactive Power – Q	Reactive Power – Q violation
Apparent Power – S	Apparent Power – S violation
Frequency	Frequency violation
<i>Metering function (MTR)</i>	
Demand MWh	Demand MWh
Supply MWh	Supply MWh
Demand MVarh	Demand MVarh
Supply MVarh	Supply MVarh
<i>Disconnecter 1 (DisConn_1)</i>	
Status	Status of the bus disconnector
Enable Close	Close command is enabled
Enable Open	Open command is enabled
Local	Local mode of operation
Operation counter	Operation counter
DC OPCap	
<i>Disconnecto 2 (DisConn_2)</i>	
Status	Status of the bus disconnector
Enable Close	Close command is enabled
Enable Open	Open command is enabled
Local	Local mode of operation
Operation counter	Operation counter
DC OPCap	
<i>Circuit breaker (CB1Pol)</i>	
Status	State of the circuit breaker function
Enable Close	Close command is enabled
Enable Open	Open command is enabled
Local	Local mode of operation
Operation counter	Operation counter
CB OPCap	
<i>Directional three-phase overcurrent protection function (TOC67_1)</i>	
Start L1	Low setting stage start signal in phase L1
Start L2	Low setting stage start signal in phase L2
Start L3	Low setting stage start signal in phase L3
Start	Low setting stage start signal
Trip	Low setting stage trip command
<i>Directional three-phase overcurrent protection function (TOC67_2)</i>	
Start L1	High setting stage start signal in phase L1
Start L2	High setting stage start signal in phase L2
Start L3	High setting stage start signal in phase L3
Start	High setting stage start signal
Trip	High setting stage trip command
<i>Line thermal protection function (TTR49L)</i>	
Alarm	Line thermal protection alarm signal
General Trip	Line thermal protection general trip command

<i>Automatic reclosing function (REC79_HV)</i>	
Blocked	Blocked state of the automatic reclosing function
Close Command	Close command of the automatic reclosing function
Status	State of the automatic reclosing function
Actual cycle	Running cycle of the automatic reclosing function
Final Trip	Definite trip command at the end of the automatic reclosing cycles
<i>Negative sequence overcurrent protection (TOC46)</i>	
General Start	General start signal
General Trip	General trip command
<i>Directional overpower protection function (DOP32)</i>	
General Start	General start signal
General Trip	General trip command
<i>Directional underpower protection function (DUP32)</i>	
General Start	General start signal
General Trip	General trip command
<i>(GGIO16)</i>	
Input01	Event channel, free programmable by the user
Input02	Event channel, free programmable by the user
Input03	Event channel, free programmable by the user
Input04	Event channel, free programmable by the user
Input05	Event channel, free programmable by the user
Input06	Event channel, free programmable by the user
Input07	Event channel, free programmable by the user
Input08	Event channel, free programmable by the user
Input09	Event channel, free programmable by the user
Input10	Event channel, free programmable by the user
Input11	Event channel, free programmable by the user
Input12	Event channel, free programmable by the user
Input13	Event channel, free programmable by the user
Input14	Event channel, free programmable by the user
Input15	Event channel, free programmable by the user
Input16	Event channel, free programmable by the user
<i>Phase-selective trip logic (TRC94_PhS)</i>	
Trip L1	Trip command in phase L1
Trip L2	Trip command in phase L2
Trip L3	Trip command in phase L3
General Trip	General trip command
<i>Line differential protection function (DIFF87L)</i>	
Trip L1	Trip command in phase L1
Trip L2	Trip command in phase L2
Trip L3	Trip command in phase L3
Trip	General trip command
CommFail	Communication failed

Table 160 List of the possible events



### 1.3.6 TRIP contact assignment

The outputs of the “phase selective trip logic function” are connected directly to the contacts of the trip module (TRIP+/2101 module in position “O”).

Binary status signal	Title	Connected to the contact TRIP+/2101 module in position “O”
TRC94_GenTr_Grl_	General Trip	Trip

Table 161 The connected signals of the phase-selective trip logic function

To the inputs of the “phase-selective trip logic function” some signals are assigned during factory configuration, some signals however depend on the programming by the user. **The conditions are defined by the user applying the graphic equation editor.** The factory defined inputs and the user defined inputs are in “OR” relationship.

Input	Binary status signal	Explanation
3Ph Trip	DIS21_SOTFTr_Grl_ OR IOC50_GenTr_Grl_ OR IOC50N_GenTr_Grl_	Trip command of the switch onto fault logic OR Trip command of the instantaneous overcurrent protection function OR Trip command of the residual instantaneous overcurrent protection function
1Ph Trip	DIS21_Z1Tr_Grl_ OR DIS21_Z2Tr_Grl_ OR DIFF87L_GenTr_Grl_	First zone trip command of the distance protection function OR Second zone trip command of the distance protection function OR Trip command of the line differential protection function
Trip L1	DIS21_Z1StL1_Grl_ OR DIS21_Z2StL1_Grl_ OR DIFF87L_TrL1_Grl_	First zone L1 trip command of the distance protection function OR Second zone L1 trip command of the distance protection function OR L1 trip command of the line differential protection function
Trip L2	DIS21_Z1StL2_Grl_ OR DIS21_Z2StL2_Grl_ OR DIFF87L_TrL2_Grl_	First zone L2 trip command of the distance protection function OR Second zone L2 trip command of the distance protection function OR L2 trip command of the line differential protection function
Trip L3	DIS21_Z1StL3_Grl_ OR DIS21_Z2StL3_Grl_ OR DIFF87L_TrL3_Grl_	First zone L3 trip command of the distance protection function OR Second zone L3 trip command of the distance protection function OR L3 trip command of the line differential protection function
Fin3Ph	n.a.	Forcing three-phase trip even in case of single-phase fault

---

Block	n.a.	Blocking the outputs of the phase-selective trip logic function
-------	------	---

*Table 162 The factory defined binary input signals of the trip logic function*

The user defined signals are listed in Table 163.

Input	Binary status signal	Explanation
1ph Trip	TRC94_Tr1ph_GrO_	Request for single-phase trip command
3ph Trip	TRC94_Tr3ph_GrO_	Request for three-phase trip command
Block	TRC94_Blk_GrO_	Blocking the outputs of the phase-selective trip logic function

*Table 163 The user defined binary input signals of the trip logic function*

## 1.4 LED assignment

On the front panel of the device there are “User LED”-s with the “Changeable LED description label” (See the document “***Quick start guide to the devices of the EuroProt+ product line***”). Some LED-s are factory assigned, some are free to be defined by the user.

LED	Explanation
General Trip	Trip command generated by the trip logic function
Z1 Trip	Distance protection zone 1 trip
Z2 Trip	Distance protection zone 2 trip
Z3 Trip	Distance protection zone 3 trip
Z4 Trip	Distance protection zone 4 trip
Z5 Trip	Distance protection zone 5 trip
Dis Start	Start signal of the
AR Blocked	Blocked state of the automatic reclosing function
OC Trip	Trip command generated by the phase OC protection functions
Res OC Trip	Trip command generated by the residual OC protection functions
Voltage Trip	Trip command generated by the voltage-related functions
Frequ Trip	Trip command generated by the frequency-related functions
LED3113	Free LED
AutoReclose	Close command of auto-reclosing function
LED3115	Free LED
LED3116	Free LED

*Table 164 LED assignment*

## 2 External connection

