

EUROPROT +

**E2-Feeder
configuration description
(type: DTIVA)**



**Document ID: PP-16-20064
Budapest, August 2013**

User's manual version information

| Version | Date | Modification | Compiled by |
|---------|--------------|---|---------------------|
| | 09. 05. 2012 | | Kazai, Ferencsik |
| | 30.08.2013 | Released formatted version with chapter 3 | Csaba Olah |
| | | | |
| | | | |
| | | | |
| | | | |

CONTENTS

| | | |
|----------|--|----|
| 1 | Configuration description..... | 4 |
| 1.1 | Application..... | 4 |
| 1.1.1 | Protection functions..... | 4 |
| 1.1.2 | Measurement functions..... | 5 |
| 1.1.3 | Hardware configuration..... | 6 |
| 1.1.4 | The applied hardware modules..... | 6 |
| 2 | Meeting the device..... | 7 |
| 2.1 | Software configuration..... | 8 |
| 2.1.1 | Protection functions..... | 8 |
| 2.1.1.1 | Three-phase instantaneous overcurrent protection function (IOC50)..... | 9 |
| 2.1.1.2 | Three-phase time overcurrent protection function (TOC51)..... | 10 |
| 2.1.1.3 | Residual instantaneous overcurrent protection function (IOC50N)..... | 13 |
| 2.1.1.4 | Residual overcurrent protection function (TOC51N)..... | 14 |
| 2.1.1.5 | Residual directional overcurrent protection function (TOC67N)..... | 17 |
| 2.1.1.6 | Inrush detection function (INR68)..... | 20 |
| 2.1.1.7 | Negative sequence overcurrent protection function (TOC46)..... | 22 |
| 2.1.1.8 | Line thermal protection function (TTR49L)..... | 25 |
| 2.1.1.9 | Definite time overvoltage protection function (TOV59)..... | 28 |
| 2.1.1.10 | Definite time undervoltage protection function (TUV27)..... | 29 |
| 2.1.1.11 | Residual definite time overvoltage protection function (TOV59N)..... | 30 |
| 2.1.1.12 | Auto-reclose protection (REC79MV)..... | 31 |
| 2.1.1.13 | Current unbalance function (VCB60)..... | 34 |
| 2.1.1.14 | Breaker failure protection function (BRF50)..... | 36 |
| 2.1.1.15 | Directional over-power protection function (DOP32)..... | 38 |
| 2.1.1.16 | Directional under-power protection function (DUP32)..... | 39 |
| 2.1.1.17 | Trip logic (TRC94)..... | 40 |
| 2.1.1.18 | Dead line detection function (DLD)..... | 41 |
| 2.1.1.19 | Current input function (CT4)..... | 42 |
| 2.1.1.20 | Voltage input function (VT4)..... | 45 |
| 2.1.1.21 | Circuit breaker control function block (CBIPol)..... | 48 |
| 2.1.1.22 | Disconnecter control function (DisConn)..... | 51 |
| 2.1.1.23 | Line measurement function (MXU)..... | 53 |
| 2.1.2 | Monitoring functions..... | 56 |
| 2.1.2.1 | Disturbance recorder function..... | 56 |
| 2.1.2.2 | Event recorder..... | 57 |
| 2.1.2.3 | Measured values..... | 60 |
| 2.1.3 | TRIP contact assignment..... | 61 |
| 2.1.4 | LED assignment..... | 62 |
| 3 | External Connections..... | 63 |
| 3.1 | The 42 inch rack of EuroProt+ without Cable Type..... | 63 |
| 3.2 | The 42 inch rack of EuroProt+ with Cable Type..... | 64 |

1 Configuration description

The E2-Feeder protection device is a member of the **EuroProt+** product line, made by Protecta Co. Ltd. The **EuroProt+** type complex protection in respect of hardware and software is a modular device. The modules are assembled and configured according to the requirements, and then the software determines the functions. This manual describes the specific application of the E2-Feeder factory configuration.

1.1 Application

The members of the DTIVA product line are configured to protect and control the elements of the medium voltage networks.

1.1.1 Protection functions

The E2-Feeder configuration measures three phase currents, the zero sequence current component and additionally three phase voltages and the zero sequence voltage component. These measurements allow, in addition to the current- and voltage-based functions, directionality extension of the residual overcurrent function and also directional overpower or underpower functions. It is intended to protect overhead line or cable networks. The choice of the functions is extended with the automatic reclosing function. The configured protection functions are listed in the Table below.

| Protection functions | IEC | ANSI | E2-Feeder |
|--|-------------------------------------|------|-----------|
| Three-phase instantaneous overcurrent protection | I >>> | 50 | X |
| Three-phase time overcurrent protection | I >, I >> | 51 | X |
| Residual instantaneous overcurrent protection | lo >>> | 50N | X |
| Residual time overcurrent protection | lo >, lo >> | 51N | X |
| Residual directional overcurrent protection | lo Dir > >, lo Dir >> | 67N | X |
| Inrush detection and blocking | I _{2h} > | 68 | X |
| Negative sequence overcurrent protection | I ₂ > | 46 | X |
| Thermal protection | T > | 49 | X |
| Definite time overvoltage protection | U >, U >> | 59 | X |
| Definite time undervoltage protection | U <, U << | 27 | X |
| Residual overvoltage protection | U ₀ >, U ₀ >> | 59N | X |
| Negative sequence overvoltage protection | U ₂ > | 47 | X |
| Auto-reclose | 0 -> 1 | 79 | X |
| Current unbalance protection | | 60 | X |
| Breaker failure protection | CBFP | 50BF | X |
| Directional overpower | P > | 32 | X |
| Directional underpower | P < | 32 | X |
| Busbar sub-unit | | | Op. |

Table 1 The protection functions of the E2-Feeder configuration

The configured functions are drawn symbolically in the Figure below.

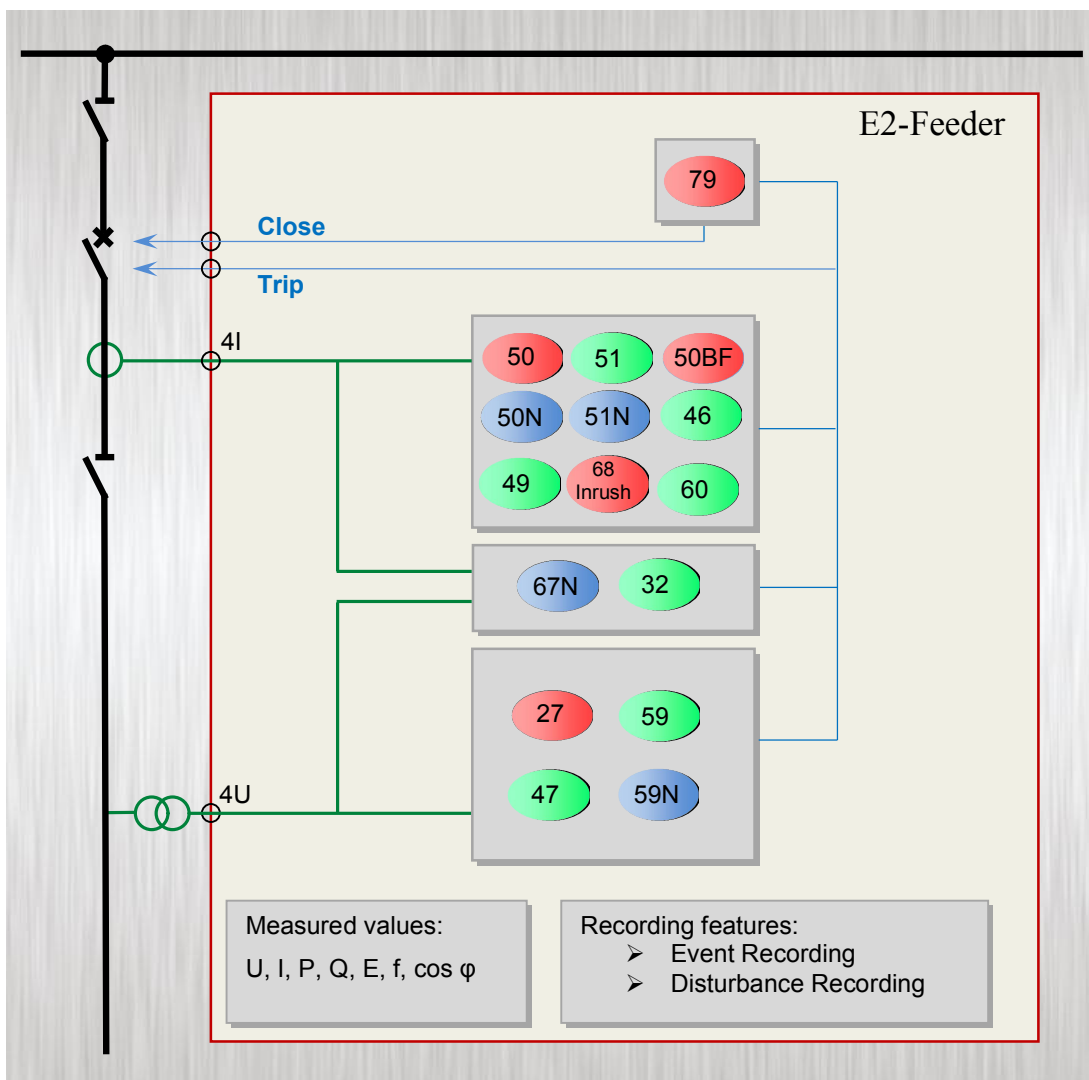


Figure 1 Implemented protection functions

1.1.2 Measurement functions

Based on the hardware inputs the measurements listed in Table below are available.

| Measurement functions | E2-Feeder |
|---|-----------|
| Current (I1, I2, I3, Io) | X |
| Voltage (U1, U2, U3, U12, U23, U31, Uo, Useq) and frequency | X |
| Power (P, Q, S, pf) and Energy (E+, E-, Eq+, Eq-) | X |
| Circuit breaker wear | X |
| Supervised trip contacts (TCS) | X |

Table 2 The measurement functions of the E2-Feeder configuration

1.1.3 Hardware configuration

The minimum number of inputs and outputs are listed in the Table below.

| Hardware configuration | ANSI | E2-Feeder |
|---|----------|-----------|
| Mounting | | Op. |
| Panel instrument case | | X |
| Current inputs (4th channel can be sensitive) | | 4 |
| Voltage inputs | | 4 |
| Digital inputs | | 12 |
| Digital outputs | | 8 |
| Fast trip outputs | | 4 |
| Temperature monitoring (RTDs) * | 38 / 49T | Op. |

Table 3 The basic hardware configuration of the E2-Feeder configuration

The basic module arrangement of the E2-Feeder configuration is shown below. (Related to 84TE rack size.)

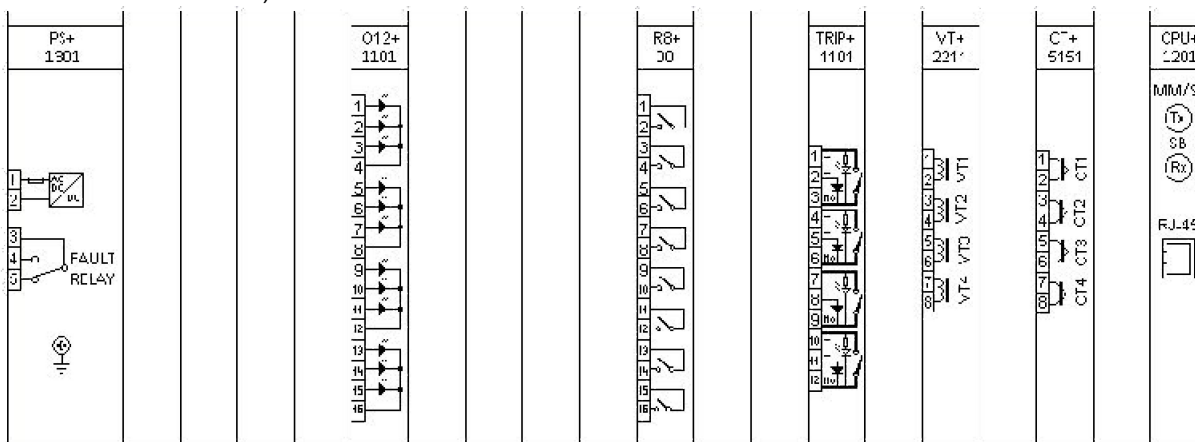


Figure 2 Basic module arrangement of the E2-Feeder configuration (84TE, rear view)

1.1.4 The applied hardware modules

The applied modules are listed in Table 4.

The technical specification of the device and that of the modules are described in the document "**Hardware description**".

| Module identifier | Explanation |
|-------------------|-------------------------------------|
| PS+ 1301 | Power supply unit |
| O12+ 1101 | Binary input module |
| R8+ 00 | Signal relay output module |
| TRIP+ 1101 | Trip relay output module |
| VT+ 2211 | Analog voltage input module |
| CT + 5151 | Analog current input module |
| CPU+ 1201 | Processing and communication module |

Table 4 The applied modules of the E2-Feeder configuration

2 Meeting the device

The basic information for working with the **EuroProt+** devices are described in the document “**Quick start guide to the devices of the EuroProt+ product line**”.



*Figure 1 The 84 inch rack of **EuroProt+** family*



*Figure 2 The 42 inch rack of **EuroProt+** family*



*Figure 3 The double 42 inch rack of **EuroProt+** family*

2.1 Software configuration

2.1.1 Protection functions

The implemented protection functions are listed in Table 1. The function blocks are described in details in separate documents. These are referred to also in this table.

| Name | Title | Document |
|---------|---------------------|---|
| IOC50 | 3ph Instant.OC | Three-phase instantaneous overcurrent protection function block description |
| TOC51 | 3ph Overcurr | Three-phase overcurrent protection function block description |
| IOC50N | Residual Instant.OC | Residual instantaneous overcurrent protection function block description |
| TOC51N | Residual TOC | Residual overcurrent protection function block description |
| TOC67N | Dir.Residual TOC | Directional residual overcurrent protection function block description |
| INR68 | Inrush | Inrush detection and blocking protection function block description |
| TOC46 | Neg. Seq. OC | Negative sequence overcurrent protection function block description |
| TTR49L | Thermal overload | Line thermal protection function block description |
| TOV59 | Overvoltage | Definite time overvoltage protection function block description |
| TUV27 | Undervoltage | Definite time undervoltage protection function block description |
| TOV59N | Overvoltage | Definite time zero sequence overvoltage protection function block description |
| REC79MV | MV autoreclosing | Automatic reclosing function for medium voltage networks, function block description |
| VCB60 | Current Unbalance | Current unbalance function block description |
| BRF50 | Breaker failure | Breaker failure protection function block description |
| DOP32 | Directional OP | Directional overpower protection function block description |
| DUP32 | Directional UP | Directional underpower protection function block description |
| TRC94 | Trip Logic | Trip logic function block description |
| CT4 | | Current input function block description |
| VT4 | | Voltage input function block description |
| CB1Pol | | Circuit breaker control function block description |
| DisConn | | Disconnecter control function block description |
| MXU | | Line measurement function block description |

Table 1 Implemented protection functions

2.1.1.1 Three-phase instantaneous overcurrent protection function (IOC50)

The three-phase instantaneous overcurrent protection function (IOC50) operates immediately if the phase currents are higher than the setting value.

The setting value is a parameter, and it can be doubled by graphic programming of the dedicated input binary signal defined by the user.

The function is based on peak value selection or on the RMS values of the Fourier basic harmonic calculation, according to the parameter setting. The fundamental Fourier components are results of an external function block.

Parameter for type selection has selection range of Off, Peak value and Fundamental value. When Fourier calculation is selected then the accuracy of the operation is high, the operation time however is above one period of the network frequency. If the operation is based on peak values then fast sub-cycle operation can be expected, but the transient overreach can be high.

The function generates trip commands without additional time delay if the detected values are above the current setting value.

The function generates trip commands for the three phases individually and a general trip command as well.

The instantaneous overcurrent protection function has a binary input signal, which serves the purpose of disabling the function. The conditions of disabling are defined by the user, applying the graphic equation editor.

Technical data

| Function | | Accuracy |
|---|---------------|----------|
| Using peak value calculation | | |
| Operating characteristic | Instantaneous | <6% |
| Reset ratio | 0.85 | |
| Operate time at 2*I _s | <15 ms | |
| Reset time * | < 40 ms | |
| Transient overreach | 90 % | |
| Using Fourier basic harmonic calculation | | |
| Operating characteristic | Instantaneous | <2% |
| Reset ratio | 0.85 | |
| Operate time at 2* I _s | <25 ms | |
| Reset time * | < 60 ms | |
| Transient overreach | 15 % | |

*Measured with signal contacts

Table 2 Technical data of of the instantaneous overcurrent protection function

Parameters

Enumerated parameter

| Parameter name | Title | Selection range | Default |
|------------------------------|-----------|------------------------------------|------------|
| Parameter for type selection | | | |
| IOC50_Oper_EPar_ | Operation | Off, Peak value, Fundamental value | Peak value |

Table 3 The enumerated parameter of the instantaneous overcurrent protection function

Integer parameter

| Parameter name | Title | Unit | Min | Max | Step | Default |
|-----------------------------|---------------|------|-----|------|------|---------|
| Starting current parameter: | | | | | | |
| IOC50_StCurr_IPar_ | Start Current | % | 20 | 3000 | 1 | 200 |

Table 4 The integer parameter of the instantaneous overcurrent protection function

2.1.1.2 Three-phase time overcurrent protection function (TOC51)

The overcurrent protection function realizes definite time or inverse time characteristics according to IEC or IEEE standards, based on three phase currents. The characteristics are harmonized with IEC 60255-151, Edition 1.0, 2009-08. This function can be applied as main protection for medium-voltage applications or backup or overload protection for high-voltage network elements.

The definite (independent) time characteristic has a fixed time delay when the current is above the starting current I_s previously set as a parameter.

The standard operating characteristics of the inverse time overcurrent protection function are defined by the following formula:

$$t(G) = TMS \left[\frac{k}{\left(\frac{G}{G_s}\right)^\alpha - 1} + c \right] \text{ when } G > G_s$$

where

$t(G)$ (seconds) theoretical operate time with constant value of G ,
 k, c constants characterizing the selected curve (in seconds),
 α constants characterizing the selected curve (no dimension),
 G measured value of the characteristic quantity, Fourier base harmonic of the phase currents (IL1Four, IL2Four, IL3Four),
 G_s preset value of the characteristic quantity (Start current),
 TMS preset time multiplier (no dimension).

| | IEC ref | Title | k_r | c | α |
|----|---------|------------------|--------|--------|----------|
| 1 | A | IEC Inv | 0,14 | 0 | 0,02 |
| 2 | B | IEC VeryInv | 13,5 | 0 | 1 |
| 3 | C | IEC ExtInv | 80 | 0 | 2 |
| 4 | | IEC LongInv | 120 | 0 | 1 |
| 5 | | ANSI Inv | 0,0086 | 0,0185 | 0,02 |
| 6 | D | ANSI ModInv | 0,0515 | 0,1140 | 0,02 |
| 7 | E | ANSI VeryInv | 19,61 | 0,491 | 2 |
| 8 | F | ANSI ExtInv | 28,2 | 0,1217 | 2 |
| 9 | | ANSI LongInv | 0,086 | 0,185 | 0,02 |
| 10 | | ANSI LongVeryInv | 28,55 | 0,712 | 2 |
| 11 | | ANSI LongExtInv | 64,07 | 0,250 | 2 |

The end of the effective range of the dependent time characteristics (G_D) is:

$$G_D = 20 * G_s$$

Above this value the theoretical operating time is definite:

$$t(G) = TMS \left[\frac{k}{\left(\frac{G_D}{G_s}\right)^\alpha - 1} + c \right] \text{ when } G > G_D = 20 * G_s$$

Additionally a minimum time delay can be defined by a dedicated parameter. This delay is valid if it is longer than $t(G)$, defined by the formula above.

Resetting characteristics:

- for IEC type characteristics the resetting is after a fix time delay defined by TOC51_Reset_TPar_ (Reset delay),
- for ANSI types however according to the formula below:

$$t_r(G) = TMS \left[\frac{k_r}{1 - \left(\frac{G}{G_s}\right)^\alpha} \right] \text{ when } G < G_s$$

where

$t_r(G)$ (seconds) theoretical reset time with constant value of G,
 k_r constants characterizing the selected curve (in seconds),
 α constants characterizing the selected curve (no dimension),
 G measured value of the characteristic quantity, Fourier base harmonic of the phase currents,
 G_s preset value of the characteristic quantity (Start current),
 TMS preset time multiplier (no dimension).

| | IEC ref | Title | k_r | α |
|----|---------|------------------|---|----------|
| 1 | A | IEC Inv | Resetting after fix time delay, according to preset parameter TOC51_Reset_TPar_ "Reset delay" | |
| 2 | B | IEC VeryInv | | |
| 3 | C | IEC ExtInv | | |
| 4 | | IEC LongInv | | |
| 5 | | ANSI Inv | 0,46 | 2 |
| 6 | D | ANSI ModInv | 4,85 | 2 |
| 7 | E | ANSI VeryInv | 21,6 | 2 |
| 8 | F | ANSI ExtInv | 29,1 | 2 |
| 9 | | ANSI LongInv | 4,6 | 2 |
| 10 | | ANSI LongVeryInv | 13,46 | 2 |
| 11 | | ANSI LongExtInv | 30 | 2 |

The binary output status signals of the three-phase overcurrent protection function are starting signals of the three phases individually, a general starting signal and a general trip command.

The overcurrent protection function has a binary input signal, which serves the purpose of disabling the function. The conditions of disabling are defined by the user, applying the graphic equation editor.

Technical data

| Function | Value | Accuracy |
|--|-------------------------|--|
| Operating accuracy | $20 \leq G_S \leq 1000$ | < 2 % |
| Operate time accuracy | | $\pm 5\%$ or ± 15 ms, whichever is greater |
| Reset ratio | 0,95 | |
| Reset time * Dependent time char. Definite time char. | Approx 60 ms | < 2% or ± 35 ms, whichever is greater |
| Transient overreach | | < 2 % |
| Pickup time * | < 40 ms | |
| Overshot time Dependent time char. Definite time char. | 30 ms 50 ms | |
| Influence of time varying value of the input current (IEC 60255-151) | | < 4 % |

* Measured with signal relay contact

Table 5 Technical data of of the instantaneous overcurrent protection function

Parameters

Enumerated parameters

| Parameter name | Title | Selection range | Default |
|------------------------------|-----------|--|--------------|
| Parameter for type selection | | | |
| TOC51_Oper_EPar_ | Operation | Off, DefinitTime, IEC Inv, IEC VeryInv, IEC ExtInv, IEC LongInv, ANSI Inv, ANSI ModInv, ANSI VeryInv, ANSI ExtInv, ANSI LongInv, ANSI LongVeryInv, ANSI LongExtInv | Definit Time |

Table 6 The enumerated parameters of the time overcurrent protection function

Integer parameter

| Parameter name | Title | Unit | Min | Max | Step | Default |
|-----------------------------|---------------|------|-----|------|------|---------|
| Starting current parameter: | | | | | | |
| TOC51_StCurr_IPar_ | Start Current | % | 20 | 1000 | 1 | 200 |

Table 7 The integer parameter of the time overcurrent protection function

Float point parameter

| Parameter name | Title | Unit | Min | Max | Step | Default |
|--|-----------------|------|------|-----|------|---------|
| Time multiplier of the inverse characteristics (OC module) | | | | | | |
| TOC67_Multip_FPar_ | Time Multiplier | sec | 0.05 | 999 | 0.01 | 1.0 |

Table 8 The float point parameter of the time overcurrent protection function

Timer parameters

| Parameter name | Title | Unit | Min | Max | Step | Default |
|---|------------------------|------|-----|-------|------|---------|
| Minimal time delay for the inverse characteristics: | | | | | | |
| TOC51_MinDel_TPar_ | Min Time Delay * | msec | 0 | 60000 | 1 | 100 |
| Definite time delay: | | | | | | |
| TOC51_DefDel_TPar_ | Definite Time Delay ** | msec | 0 | 60000 | 1 | 100 |
| Reset time delay for the inverse characteristics: | | | | | | |
| TOC51_Reset_TPar_ | Reset Time* | msec | 0 | 60000 | 1 | 100 |

*Valid for inverse type characteristics

**Valid for definite type characteristics only

Table 9 The timer parameters of the time overcurrent protection function

2.1.1.3 Residual instantaneous overcurrent protection function (IOC50N)

The residual instantaneous overcurrent protection function (IOC50N) block operates immediately if the residual current ($3I_0$) is above the setting value. The setting value is a parameter, and it can be doubled by a dedicated binary input signal defined by the user applying the graphic programming.

The function is based on peak value selection or on the RMS values of the Fourier basic harmonic component of the residual current, according to the parameter setting. The fundamental Fourier component calculation is not part of the IOC50N function.

Parameter for type selection has selection range of Off, Peak value and Fundamental value.

The function generates a trip commands without additional time delay if the detected values are above the current setting value.

The residual instantaneous overcurrent protection function has a binary input signal, which serves the purpose of disabling the function. The conditions of disabling are defined by the user, applying the graphic equation editor.

Technical data

| Function | | Accuracy |
|---|---------------|----------|
| Using peak value calculation | | |
| Operating characteristic ($I > 0.1 I_n$) | Instantaneous | <6% |
| Reset ratio | 0.85 | |
| Operate time at $2 \cdot I_s$ | <15 ms | |
| Reset time * | < 35 ms | |
| Transient overreach | 85 % | |
| Using Fourier basic harmonic calculation | | |
| Operating characteristic ($I > 0.1 I_n$) | Instantaneous | <3% |
| Reset ratio | 0.85 | |
| Operate time at $2 \cdot I_s$ | <25 ms | |
| Reset time * | < 60 ms | |
| Transient overreach | 15 % | |

*Measured with signal contacts

Table 10 Technical data of the residual instantaneous overcurrent protection function

Parameters

Enumerated parameter

| Parameter name | Title | Selection range | Default |
|------------------------------|-----------|------------------------------------|------------|
| Parameter for type selection | | | |
| IOC50N_Oper_EPar_ | Operation | Off, Peak value, Fundamental value | Peak value |

Table 11 The enumerated parameter of the residual instantaneous overcurrent protection function

Integer parameter

| Parameter name | Title | Unit | Min | Max | Step | Default |
|-----------------------------|---------------|------|-----|-----|------|---------|
| Starting current parameter: | | | | | | |
| IOC50N_StCurr_IPar_ | Start Current | % | 10 | 400 | 1 | 200 |

Table 12 The integer parameter of the residual instantaneous overcurrent protection function

2.1.1.4 Residual overcurrent protection function (TOC51N)

The residual delayed overcurrent protection function can realize definite time or inverse time characteristics according to IEC or IEEE standards, based on the RMS value of the fundamental Fourier component of a single measured current, which can be the measured residual current at the neutral point (3I₀) or the calculated zero sequence current component. The characteristics are harmonized with IEC 60255-151, Edition 1.0, 2009-08.

The definite (independent) time characteristic has a fixed time delay when the current is above the starting current I_s previously set as a parameter.

The standard operating characteristics of the inverse time overcurrent protection function are defined by the following formula:

$$t(G) = TMS \left[\frac{k}{\left(\frac{G}{G_s}\right)^\alpha - 1} + c \right] \text{ when } G > G_s$$

where

t(G)(seconds) theoretical operate time with constant value of G,
k, c constants characterizing the selected curve (in seconds),
α constant characterizing the selected curve (no dimension),
G measured value of the characteristic quantity, Fourier base harmonic of the residual current (INFour),
G_s preset value of the characteristic quantity (Start current),
TMS preset time multiplier (no dimension).

| | IEC ref | | k _r | c | α |
|----|---------|------------------|----------------|--------|------|
| 1 | A | IEC Inv | 0,14 | 0 | 0,02 |
| 2 | B | IEC VeryInv | 13,5 | 0 | 1 |
| 3 | C | IEC ExtInv | 80 | 0 | 2 |
| 4 | | IEC LongInv | 120 | 0 | 1 |
| 5 | | ANSI Inv | 0,0086 | 0,0185 | 0,02 |
| 6 | D | ANSI ModInv | 0,0515 | 0,1140 | 0,02 |
| 7 | E | ANSI VeryInv | 19,61 | 0,491 | 2 |
| 8 | F | ANSI ExtInv | 28,2 | 0,1217 | 2 |
| 9 | | ANSI LongInv | 0,086 | 0,185 | 0,02 |
| 10 | | ANSI LongVeryInv | 28,55 | 0,712 | 2 |
| 11 | | ANSI LongExtInv | 64,07 | 0,250 | 2 |

The end of the effective range of the dependent time characteristics (G_D) is:

$$G_D = 20 * G_s$$

Above this value the theoretical operating time is definite:

$$t(G) = TMS \left[\frac{k}{\left(\frac{G_D}{G_s}\right)^\alpha - 1} + c \right] \text{ when } G > G_D = 20 * G_s$$

Additionally a minimum time delay can be defined by a dedicated parameter (Min. Time Delay). This delay is valid if it is longer than t(G), defined by the formula above.

Resetting characteristics:

- for IEC type characteristics the resetting is after a fix time delay,
- for ANSI types however according to the formula below:

$$t_r(G) = TMS \left[\frac{k_r}{1 - \left(\frac{G}{G_S}\right)^\alpha} \right] \text{ when } G < G_S$$

where

$t_r(G)$ (seconds)

k_r

α

G

G_S

TMS

theoretical reset time with constant value of G ,
 constants characterizing the selected curve (in seconds),
 constant characterizing the selected curve (no dimension),
 measured value of the characteristic quantity, Fourier base harmonic
 of the residual current,
 preset value of the characteristic quantity (Start current),
 preset time multiplier (no dimension).

| | IEC ref | | k_r | α |
|----|---------|------------------|---|----------|
| 1 | A | IEC Inv | Resetting after fix time delay, according to preset parameter TOC51_Reset_TPar_ "Reset delay" | |
| 2 | B | IEC VeryInv | | |
| 3 | C | IEC ExtInv | | |
| 4 | | IEC LongInv | | |
| 5 | | ANSI Inv | 0,46 | 2 |
| 6 | D | ANSI ModInv | 4,85 | 2 |
| 7 | E | ANSI VeryInv | 21,6 | 2 |
| 8 | F | ANSI ExtInv | 29,1 | 2 |
| 9 | | ANSI LongInv | 4,6 | 2 |
| 10 | | ANSI LongVeryInv | 13,46 | 2 |
| 11 | | ANSI LongExtInv | 30 | 2 |

The binary output status signals of the residual overcurrent protection function are the general starting signal and the general trip command if the time delay determined by the characteristics expired.

The residual overcurrent protection function has a binary input signal, which serves the purpose of disabling the function. The conditions of disabling are defined by the user, applying the graphic equation editor.

Technical data

| Function | Value | Accuracy |
|--|-------------------------|--|
| Operating accuracy * | $20 \leq G_S \leq 1000$ | < 3 % |
| Operate time accuracy | | $\pm 5\%$ or ± 15 ms, whichever is greater |
| Reset ratio | 0,95 | |
| Reset time * Dependent time char. Definite time char. | Approx 60 ms | < 2% or ± 35 ms, whichever is greater |
| Transient overreach | | 2 % |
| Pickup time | ≤ 40 ms | |
| Overshot time Dependent time char. Definite time char. | 30 ms 50 ms | |
| Influence of time varying value of the input current (IEC 60255-151) | | < 4 % |

* Measured in version $I_n = 200$ mA

Table 13 The technical data of the residual overcurrent protection function

Parameters

Enumerated parameters

| Parameter name | Title | Selection range | Default |
|------------------------------|-----------|--|---------------|
| Parameter for type selection | | | |
| TOC51N_Oper_EPar_ | Operation | Off, DefinitTime, IEC Inv, IEC VeryInv, IEC ExtInv, IEC LongInv, ANSI Inv, ANSI ModInv, ANSI VeryInv, ANSI ExtInv, ANSI LongInv, ANSI LongVeryInv, ANSI LongExtInv | Definite Time |

Table 14 The enumerated parameters of the residual overcurrent protection function

Integer parameter

| Parameter name | Title | Unit | Min | Max | Step | Default |
|-----------------------------|------------------|------|-----|------|------|---------|
| Starting current parameter: | | | | | | |
| TOC51N_StCurr_IPar_ | Start Current * | % | 5 | 200 | 1 | 50 |
| TOC51N_StCurr_IPar_ | Start Current ** | % | 10 | 1000 | 1 | 50 |

* $I_n = 1 \text{ A or } 5 \text{ A}$

** $I_n = 200 \text{ mA or } 1 \text{ A}$

Table 15 The integer parameter of the residual overcurrent protection function

Float point parameter

| Parameter name | Title | Unit | Min | Max | Step | Default |
|--|-----------------|------|------|-----|------|---------|
| Time multiplier of the inverse characteristics (OC module) | | | | | | |
| TOC51N_Multip_FPar_ | Time Multiplier | sec | 0.05 | 999 | 0.01 | 1.0 |

Table 16 The float parameter of the residual overcurrent protection function

Timer parameters

| Parameter name | Title | Unit | Min | Max | Step | Default |
|---|-----------------------|------|-----|-------|------|---------|
| Minimal time delay for the inverse characteristics: | | | | | | |
| TOC51N_MinDel_TPar_ | Min Time Delay* | msec | 0 | 60000 | 1 | 100 |
| Definite time delay: | | | | | | |
| TOC51N_DefDel_TPar_ | Definite Time Delay** | msec | 0 | 60000 | 1 | 100 |
| Reset time delay for the inverse characteristics: | | | | | | |
| TOC51N_Reset_TPar_ | Reset Time* | msec | 0 | 60000 | 1 | 100 |

*Valid for inverse type characteristics

**Valid for definite type characteristics only


Table 17 The timer parameters of the residual overcurrent protection function

2.1.1.5 Residual directional overcurrent protection function (TOC67N)

The main application area of the directional residual delayed overcurrent protection function is an earth-fault protection.

The inputs of the function are the RMS value of the Fourier basic harmonic components of the zero sequence current ($I_N=3I_0$) and those of the zero sequence voltage ($U_N=3U_0$).

The block of the directional decision generates a signal of TRUE value if the $U_N=3U_0$ zero sequence voltage and the $I_N=3I_0$ zero sequence current are above the limits needed for correct directional decision, and the angle difference between the vectors is within the preset range. The decision enables the output start and trip signal of an overcurrent protection function block (TOC51N). This non-directional residual overcurrent protection function block is described in a separate document.

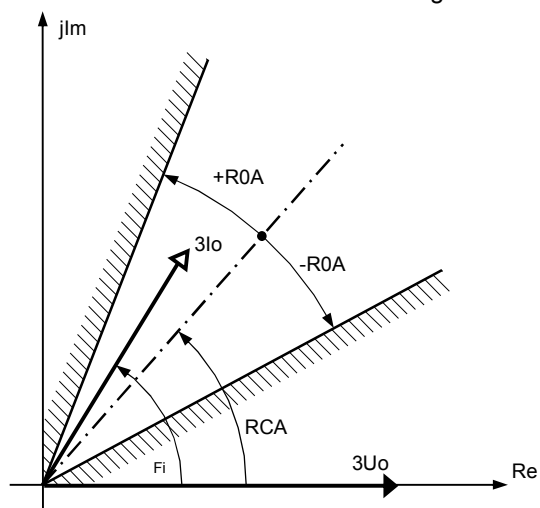

The directional decision module calculates the phase angle between the residual voltage and the residual current. The reference signal is the residual voltage according to the Figure.

The directional decision module calculates the phase angle between the residual voltage and the residual current. The reference signal is the residual voltage according to the Figure.

The output of the directional decision module is OK, namely it is TRUE if the phase angle between the residual voltage and the residual current is within the limit range defined by the preset parameter OR if non-directional operation is selected by the preset parameter (Direction=NonDir).

Technical data

| Function | Value | Accuracy |
|--------------------------------|--------------|-------------------------------------|
| Operating accuracy | | < ±2 % |
| Operate time accuracy | | ±5% or ±15 ms, whichever is greater |
| Accuracy in minimum time range | | ±35 ms |
| Reset ratio | 0,95 | |
| Reset time | Approx 50 ms | ±35 ms |
| Transient overreach | <2 % | |
| Pickup time | 25 – 30 ms | |
| Angular accuracy | | |
| $I_0 \leq 0.1 I_n$ | | < ±10° |
| $0.1 I_n < I_0 \leq 0.4 I_n$ | | < ±5° |
| $0.4 I_n < I_0$ | | < ±2° |
| Angular reset ratio | | |
| Forward and backward | 10° | |
| All other selection | 5° | |

Table 18 The technical data of the residual directional overcurrent protection function

Parameters

Enumerated parameters

| Parameter name | Title | Selection range | Default |
|---|-----------|--|---------------|
| Directionality of the function | | | |
| TOC67N_Dir_EPar_ | Direction | NonDir,Forward-Angle,Backward-Angle,Forward-I*cos(fi),Backward-I*cos(fi),Forward-I*sin(fi),Backward-I*sin(fi),Forward-I*sin(fi+45),Backward-I*sin(fi+45) | Forward-Angle |
| Operating characteristic selection of the TOC51N module | | | |
| TOC67N_Oper_EPar_ | Operation | Off,DefiniteTime,IEC Inv,IEC VeryInv,IEC ExtInv,IEC LongInv,ANSI Inv,ANSI ModInv,ANSI VeryInv,ANSI ExtInv,ANSI LongInv,ANSI LongVeryInv,ANSI LongExtInv | DefiniteTime |

Table 19 The enumerated parameters of the residual directional overcurrent protection function

Short explanation of the enumerated parameter “Direction”

| Selected value | Explanation |
|-----------------------|---|
| NonDir, | Operation according to non-directional TOC51N |
| Forward-Angle | See <i>Figure</i> , set RCA (Characteristic Angle) and ROA (Operating Angle) as required |
| Backward-Angle | $RCA_{actual} = RCA_{set} + 180^\circ$, set RCA (Characteristic Angle) and ROA (Operating Angle) as required |
| Forward-I*cos(fi) | $RCA = 0^\circ$ fix, $ROA = 85^\circ$ fix, the setting values RCA and ROA are not applied |
| Backward-I*cos(fi) | $RCA = 180^\circ$ fix, $ROA = 85^\circ$ fix, the setting values RCA and ROA are not applied |
| Forward-I*sin(fi) | $RCA = 90^\circ$ fix, $ROA = 85^\circ$ fix, the setting values RCA and ROA are not applied |
| Backward-I*sin(fi) | $RCA = -90^\circ$ fix, $ROA = 85^\circ$ fix, the setting values RCA and ROA are not applied |
| Forward-I*sin(fi+45) | $RCA = 45^\circ$ fix, $ROA = 85^\circ$ fix, the setting values RCA and ROA are not applied |
| Backward-I*sin(fi+45) | $RCA = -135^\circ$ fix, $ROA = 85^\circ$ fix, the setting values RCA and ROA are not applied |

Table 20 The short explanation of the enumerated parameters of the residual directional overcurrent protection function

Integer parameters

| Parameter name | Title | Unit | Min | Max | Step | Default |
|---|----------------------|------|------|-----|------|---------|
| The threshold value for the 3U ₀ zero sequence voltage, below which no directionality is possible. % of the rated voltage of the voltage transformer input | | | | | | |
| TOC67N_UoMin_IPar_ | URes Min | % | 1 | 10 | 1 | 2 |
| The threshold value for the 3I ₀ zero sequence current, below which no operation is possible. % of the rated current of the current transformer input | | | | | | |
| TOC67N_IoMin_IPar_ | IRes Min | % | 1 | 50 | 1 | 5 |
| Operating angle (See <i>Figure</i>) | | | | | | |
| TOC67N_ROA_IPar_ | Operating Angle | deg | 30 | 80 | 1 | 60 |
| Characteristic angle (See <i>Figure</i>) | | | | | | |
| TOC67N_RCA_IPar_ | Characteristic Angle | deg | -180 | 180 | 1 | 60 |
| Start current (TOC51N module) | | | | | | |
| TOC67N_StCurr_IPar_ | Start Current | % | 5 | 200 | 1 | 50 |

Table 21 The integer parameters of the residual directional overcurrent protection function

Float point parameter

| Parameter name | Title | Unit | Min | Step | Step | Default |
|--|-----------------|------|------|------|------|---------|
| Time multiplier of the inverse characteristics (TOC51N module) | | | | | | |
| TOC67N_Multip_FPar_ | Time Multiplier | sec | 0.05 | 999 | 0.01 | 1.0 |

Table 22 The float point parameter of the residual directional overcurrent protection function


Timer parameters

| Parameter name | Title | Unit | Min | Max | Step | Default |
|--|---------------------|------|-----|-------|------|---------|
| Minimal time delay for the inverse characteristics (TOC 51N module): | | | | | | |
| TOC67N_MinDel_TPar_ | Min Time Delay | msec | 50 | 60000 | 1 | 100 |
| Definite time delay (TOC 51N module): | | | | | | |
| TOC67N_DefDel_TPar_ | Definite Time Delay | msec | 0 | 60000 | 1 | 100 |
| Reset time delay for the inverse characteristics (TOC 51N module): | | | | | | |
| TOC67N_Reset_TPar_ | Reset Time | msec | 0 | 60000 | 1 | 100 |

Table 23 The timer parameters of the residual directional overcurrent protection function

2.1.1.6 Inrush detection function (INR68)

When an inductive element with an iron core (transformer, reactor, etc.) is energized, high current peak values can be detected. This is caused by the transient asymmetric saturation of the iron core as a nonlinear element in the power network. The sizing of the iron core is usually sufficient to keep the steady state magnetic flux values below the saturation point of the iron core, so the inrush transient slowly dies out. These current peaks depend also on random factors such as the phase angle at energizing. Depending on the shape of the magnetization curve of the iron core, the detected peaks can be several times above the rated current peaks. Additionally, in medium or high voltage networks, where losses and damping are low, the indicated high current values may be sustained at length. Figure below shows a typical example for the inrush current shapes of a three-phase transformer.

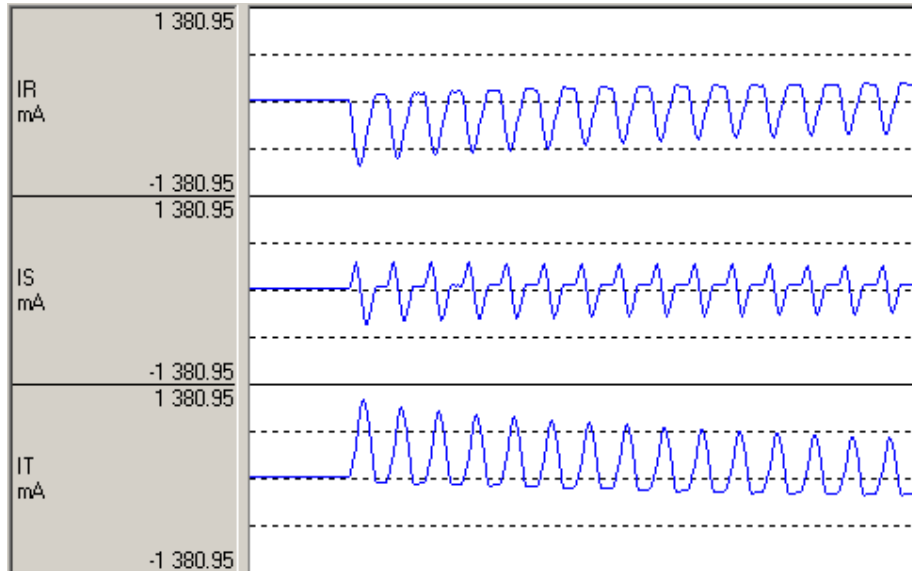

A typical inrush current

As a consequence, overcurrent relays, differential relays or distance relays may start, and because of the long duration of the high current peaks, they may generate an unwanted trip command.

The inrush current detection function can distinguish between high currents caused by overload or faults and the high currents during the inrush time.

The operating principle of the inrush current detection function is based on the special shape of the inrush current.

The typical inrush current in one or two phases is asymmetrical to the time axis. For example, in IT of the Figure above the positive peaks are high while no peaks can be detected in the negative domain.

The theory of the Fourier analysis states that even harmonic components (2nd, 4th etc.) are dominant in waves asymmetrical to the time axis. The component with the highest value is the second one.

Typical overload and fault currents do not contain high even harmonic components.

The inrush current detection function processes the Fourier basic harmonic component and the second harmonic component of the three phase currents. If the ratio of the second harmonic and the base Fourier harmonic is above the setting value of the parameter *2nd Harm Ratio*, an inrush detection signal is generated.

The signal is output only if the base harmonic component is above the level defined by the setting of the parameter *IPh Base Sens*. This prevents unwanted operation in the event that low currents contain relatively high error signals.

The function operates independently using all three phase currents individually, and additionally, a general inrush detection signal is generated if any of the phases detects inrush current.

The function can be disabled by the binary input *Disable*. This signal is the result of logic equations graphically edited by the user.

Using the inrush detection binary signals, other protection functions can be blocked during the transient period so as to avoid the unwanted trip.

Some protection functions use these signals automatically, but a stand-alone inrush detection function block is also available for application at the user's discretion.

Technical data

| Function | Range | Accuracy |
|------------------|--------------------|-----------|
| Current accuracy | 20 ... 2000% of In | ±1% of In |

Table 24 Technical data of the inrush detection function

Parameters

Enumerated parameter

| Parameter name | Title | Selection range | Default |
|---|-----------|-----------------|---------|
| Disabling or enabling the operation of the function | | | |
| INR2_Op_EPar_ | Operation | Off,On | On |

Table 25 The enumerated parameter of the inrush detection function

Integer parameters

| Parameter name | Title | Unit | Min | Max | Step | Default |
|---|----------------|------|-----|-----|------|---------|
| Ratio of the second and basic harmonic Fourier components | | | | | | |
| INR2_2HRat_IPar_ | 2nd Harm Ratio | % | 5 | 50 | 1 | 15 |
| Basic sensitivity of the function | | | | | | |
| INR2_MinCurr_IPar_ | IPh Base Sens | % | 20 | 100 | 1 | 30 |

Table 26 The integer parameter of the inrush detection function

2.1.1.7 Negative sequence overcurrent protection function (TOC46)

The negative sequence overcurrent protection function (TOC46) block operates if the negative sequence current is higher than the preset starting value.

In the negative sequence overcurrent protection function, definite-time or inverse-time characteristics are implemented, according to IEC or IEEE standards. The function evaluates a single measured current, which is the RMS value of the fundamental Fourier component of the negative sequence current. The characteristics are harmonized with IEC 60255-151, Edition 1.0, 2009-08.

The definite (independent) time characteristic has a fixed delaying time when the current is above the starting current G_s previously set as a parameter.

The standard dependent time characteristics of the negative sequence overcurrent protection function are as follows.

$$t(G) = TMS \left[\frac{k}{\left(\frac{G}{G_s}\right)^\alpha - 1} + c \right] \text{ when } G > G_s$$

where

$t(G)$ (seconds)

k, c

α

G

G_s

TMS

theoretical operate time with constant value of G ,
 constants characterizing the selected curve (in seconds),
 constant characterizing the selected curve (no dimension),
 measured value of the characteristic quantity, Fourier base harmonic
 of the negative sequence current (INFour),
 preset starting value of the characteristic quantity,
 preset time multiplier (no dimension).

| | IEC ref | | k_r | c | α |
|----|---------|------------------|--------|--------|----------|
| 1 | A | IEC Inv | 0,14 | 0 | 0,02 |
| 2 | B | IEC VeryInv | 13,5 | 0 | 1 |
| 3 | C | IEC ExtInv | 80 | 0 | 2 |
| 4 | | IEC LongInv | 120 | 0 | 1 |
| 5 | | ANSI Inv | 0,0086 | 0,0185 | 0,02 |
| 6 | D | ANSI ModInv | 0,0515 | 0,1140 | 0,02 |
| 7 | E | ANSI VeryInv | 19,61 | 0,491 | 2 |
| 8 | F | ANSI ExtInv | 28,2 | 0,1217 | 2 |
| 9 | | ANSI LongInv | 0,086 | 0,185 | 0,02 |
| 10 | | ANSI LongVeryInv | 28,55 | 0,712 | 2 |
| 11 | | ANSI LongExtInv | 64,07 | 0,250 | 2 |

Table 27 The constants of the standard dependent time characteristics

A parameter (Operation) serves for choosing overcurrent function of independent time delay or dependent one with type selection above.

Time multiplier of the inverse characteristics (TMS) is also a parameter to be preset.

The end of the effective range of the dependent time characteristics (G_D) is:

$$G_D = 20 * G_s$$

Above this value the theoretical operating time is definite. The inverse type characteristics are also combined with a minimum time delay, the value of which is set by user parameter TOC46_MinDel_TPar_ (Min. Time Delay).

The negative phase sequence components calculation is based on the Fourier components of the phase currents.

The binary output status signals of the negative sequence overcurrent protection function are the general starting and the general trip command of the function.

The negative sequence overcurrent protection function has a binary input signal, which serves the purpose of disabling the function. The conditions of disabling are defined by the user, applying the graphic equation editor.

Technical data

| Function | Value | Accuracy |
|--|-----------------------------|--|
| Operating accuracy | $10 \leq G_s [\%] \leq 200$ | < 2 % |
| Operate time accuracy | | $\pm 5\%$ or ± 15 ms, whichever is greater |
| Reset ratio | 0,95 | |
| Reset time * Dependent time charact. Definite time charact. | approx. 60 ms | <2 % or ± 35 ms, whichever is greater |
| Transient overreach | | < 2 % |
| Pickup time at $2^* G_s$ | <40 ms | |
| Overshot time Dependent time charact. Definite time charact. | 25 ms 45 ms | |
| Influence of time varying value of the input current (IEC 60255-151) | | < 4 % |

* Measured with signal contacts

Table 28 Technical data of the negative sequence overcurrent protection function

Parameters

Enumerated parameter

| Parameter name | Title | Selection range | Default |
|------------------------------|-----------|--|--------------|
| Parameter for type selection | | | |
| TOC46_Oper_EPar_ | Operation | Off, DefinitTime, IEC Inv, IEC VeryInv, IEC ExtInv, IEC LongInv, ANSI Inv, ANSI ModInv, ANSI VeryInv, ANSI ExtInv, ANSI LongInv, ANSI LongVeryInv, ANSI LongExtInv | Definit Time |

Table 29 The enumerated parameter of the negative sequence overcurrent protection function

Integer parameter

| Parameter name | Title | Unit | Min | Max | Step | Default |
|-----------------------------|---------------|------|-----|-----|------|---------|
| Starting current parameter: | | | | | | |
| TOC46_StCurr_IPar_ | Start Current | % | 5 | 200 | 1 | 50 |

Table 30 The integer parameter of the negative sequence overcurrent protection function

Timer parameters

| Parameter name | Title | Unit | Min | Max | Step | Default |
|---|-----------------------|------|-----|-------|------|---------|
| Minimal time delay for the inverse characteristics: | | | | | | |
| TOC46_MinDel_TPar_ | Min Time Delay* | msec | 0 | 60000 | 1 | 100 |
| Definite time delay: | | | | | | |
| TOC46_DefDel_TPar_ | Definite Time Delay** | msec | 0 | 60000 | 1 | 100 |
| Reset time delay for the inverse characteristics: | | | | | | |
| TOC46_Reset_TPar_ | Reset Time* | msec | 0 | 60000 | 1 | 100 |
| Time multiplier for the inverse characteristics: | | | | | | |
| TOC46_Multip_TPar_ | Time Multiplier* | msec | 100 | 60000 | 1 | 100 |

*Valid for inverse type characteristics

**Valid for definite type characteristics only

Table 31 The timer parameter of the negative sequence overcurrent protection function

2.1.1.8 Line thermal protection function (TTR49L)

Basically, line thermal protection measures the three sampled phase currents. RMS values are calculated and the temperature calculation is based on the highest RMS value of the phase currents.

The temperature calculation is based on the step-by-step solution of the thermal differential equation. This method yields “overtemperature”, meaning the temperature above the ambient temperature. Accordingly, the temperature of the protected object is the sum of the calculated “overtemperature” and the ambient temperature.

If the calculated temperature (calculated “overtemperature”+ambient temperature) is above the threshold values, alarm, trip and restart blocking status signals are generated.

For correct setting, the following values must be measured and set as parameters: rated load current is the continuous current applied for the measurement, rated temperature is the steady state temperature at rated load current, base temperature is the temperature of the environment during the measurement and the time constant is the measured heating/cooling time constant of the exponential temperature function.

When energizing the protection device, the algorithm permits the definition of the starting temperature as the initial value of the calculated temperature. The parameter Startup Term. is the initial temperature above the temperature of the environment as compared to the rated temperature above the temperature of the environment

The ambient temperature can be measured using e.g. a temperature probe generating electric analog signals proportional to the temperature. In the absence of such measurement, the temperature of the environment can be set using the dedicated parameter TTR49L_Amb_IPar_ (Ambient Temperature). The selection between parameter value and direct measurement is made by setting the binary Boolean parameter.

The problem of metal elements (the protected line) exposed to the sun is that they are overheated as compared to the „ambient” temperature even without a heating current; furthermore, they are cooled mostly by the wind and the heat transfer coefficient is highly dependent on the effects of the wind. As the overhead lines are located in different geographical environments along the tens of kilometers of the route, the effects of the sun and the wind cannot be considered in detail. The best approximation is to measure the temperature of a piece of overhead line without current but exposed to the same environmental conditions as the protected line itself.

The application of thermal protection of the overhead line is a better solution than a simple overcurrent-based overload protection because thermal protection “remembers” the preceding load states of the line and the setting of the thermal protection does not need so a high security margin between the permitted current and the permitted continuous thermal current of the line. In a broad range of load states and in a broad range of ambient temperatures this permits the better exploitation of the thermal and consequently current carrying capacity of the line.

The thermal differential equation to be solved is:

$$\frac{d\Theta}{dt} = \frac{1}{T} \left(\frac{I^2(t)R}{hA} - \Theta \right), \text{ and the definition of the heat time constant is: } T = \frac{cm}{hA}$$

In this differential equation:

| | |
|------------|---|
| I(t) (RMS) | heating current, the RMS value usually changes over time; |
| R | resistance of the line; |
| c | specific heat capacity of the conductor; |
| m | mass of the conductor; |
| θ | rise of the temperature above the temperature of the environment; |
| h | heat transfer coefficient of the surface of the conductor; |
| A | area of the surface of the conductor; |
| t | time. |

The solution of the thermal differential equation for constant current is the temperature as the function of time (the mathematical derivation of this equation is described in a separate document):

$$\Theta(t) = \frac{I^2 R}{hA} \left(1 - e^{-\frac{t}{T}} \right) + \Theta_o e^{-\frac{t}{T}}$$

where

Θ_o is the starting temperature.

Remember that the calculation of the measurable temperature is as follows:

$$\text{Temperature}(t) = \Theta(t) + \text{Temp_ambient}$$

where

Temp_ambient is the ambient temperature.

In a separate document it is proven that some more easily measurable parameters can be introduced instead of the aforementioned ones. Thus, the general form of equation above is:

$$H(t) = \frac{\Theta(t)}{\Theta_n} = \frac{I^2}{I_n^2} \left(1 - e^{-\frac{t}{T}} \right) + \frac{\Theta_o}{\Theta_n} e^{-\frac{t}{T}}$$

where:

H(t) is the „thermal level” of the heated object, this is the temperature as a percentage of the Θ_n reference temperature. (This is a dimensionless quantity but it can also be expressed in a percentage form.)

Θ_n is the reference temperature above the temperature of the environment, which can be measured in steady state, in case of a continuous I_n reference current.

I_n is the reference current (can be considered as the nominal current of the heated object). If it flows continuously, then the reference temperature can be measured in steady state.

$\frac{\Theta_o}{\Theta_n}$ is a parameter of the starting temperature related to the reference temperature

The *RMS calculations modul* calculate the RMS values of the phase currents individually. The sampling frequency of the calculations is 1 kHz; therefore, theoretically, the frequency components below 500Hz are considered correctly in the RMS values. This module is not part of the thermal overload function; it belongs to the preparatory phase.

The *Max selection module* selects the maximal value of the three RMS phase currents.

The *Thermal replica module* solves the first order thermal differential equation using a simple step-by-step method and compares the calculated temperature to the values set by parameters. The temperature sensor value proportional to the ambient temperature can be an input (this signal is optional, defined at parameter setting).

The function can be disabled by parameter, or generates a trip pulse if the calculated temperature exceeds the trip value, or generates a trip signal if the calculated temperature exceeds the trip value given by a parameter but it resets only if the temperature cools below the “Unlock temperature”.

The line thermal protection function has two binary input signals. The conditions of the input signal are defined by the user, applying the graphic equation editor. One of the signals can block the line thermal protection function, the other one can reset the accumulated heat and set the temperature to the defined value for the subsequent heating test procedure.

Technical data

| Function | Accuracy |
|--|------------------------|
| Operate time at $I > 1.2 \cdot I_{trip}$ | $< 3\%$ or $< + 20$ ms |

Table 32 Technical data of the line thermal protection function

Parameters

Enumerated parameter

| Parameter name | Title | Selection range | Default |
|---------------------------------|-----------|---------------------|---------|
| Parameter for mode of operation | | | |
| TTR49L_Oper_EPar_ | Operation | Off, Pulsed, Locked | Pulsed |

Table 33 The enumerated parameter of the line thermal protection function

The meaning of the enumerated values is as follows:

- Off the function is switched off; no output status signals are generated;
- Pulsed the function generates a trip pulse if the calculated temperature exceeds the trip value
- Locked the function generates a trip signal if the calculated temperature exceeds the trip value. It resets only if the temperature cools below the "Unlock temperature".

Integer parameters

| Parameter name | Title | Unit | Min | Max | Step | Default |
|---------------------|---------------------|------|-----|-----|------|---------|
| Alarm Temperature | | | | | | |
| TTR49L_Alm_IPar_ | Alarm Temperature | deg | 60 | 200 | 1 | 80 |
| Trip Temperature | | | | | | |
| TTR49L_Trip_IPar_ | Trip Temperature | deg | 60 | 200 | 1 | 100 |
| Rated Temperature | | | | | | |
| TTR49L_Max_IPar_ | Rated Temperature | deg | 60 | 200 | 1 | 100 |
| Base Temperature | | | | | | |
| TTR49L_Ref_IPar_ | Base Temperature | deg | 0 | 40 | 1 | 25 |
| Unlock Temperature | | | | | | |
| TTR49L_Unl_IPar_ | Unlock Temperature | deg | 20 | 200 | 1 | 60 |
| Ambient Temperature | | | | | | |
| TTR49L_Amb_IPar_ | Ambient Temperature | deg | 0 | 40 | 1 | 25 |
| Startup Term. | | | | | | |
| TTR49L_Str_IPar_ | Startup Term | % | 0 | 60 | 1 | 0 |
| Rated Load Current | | | | | | |
| TTR49L_Inom_IPar_ | Rated Load Current | % | 20 | 150 | 1 | 100 |
| Time constant | | | | | | |
| TTR49L_pT_IPar_ | Time Constant | min | 1 | 999 | 1 | 10 |

Table 34 The integer parameters of the line thermal protection function

Boolean parameter

| Boolean parameter | Signal title | Selection range | Default |
|--|--------------------|-----------------|---------|
| Parameter for ambient temperature sensor application | | | |
| TTR49L_Sens_BPar_ | Temperature Sensor | No, Yes | No |

Table 35 The boolean parameter of the line thermal protection function

2.1.1.9 Definite time overvoltage protection function (TOV59)

The definite time overvoltage protection function measures three voltages. The measured values of the characteristic quantity are the RMS values of the basic Fourier components of the phase voltages.

The Fourier calculation inputs are the sampled values of the three phase voltages (UL1, UL2, UL3), and the outputs are the basic Fourier components of the analyzed voltages (UL1Four, UL2Four, UL3Four). They are not part of the TOV59 function; they belong to the preparatory phase.

The function generates start signals for the phases individually. The general start signal is generated if the voltage in any of the three measured voltages is above the level defined by parameter setting value.

The function generates a trip command only if the definite time delay has expired and the parameter selection requires a trip command as well.

The overvoltage protection function has a binary input signal, which serves the purpose of disabling the function. The conditions of disabling are defined by the user, applying the graphic equation editor.

Technical data

| Function | Value | Accuracy |
|---------------------------|-------|-----------|
| Pick-up starting accuracy | | < ± 0,5 % |
| Blocking voltage | | < ± 1,5 % |
| Reset time | | |
| U< → Un | 60 ms | |
| U< → 0 | 50 ms | |
| Operate time accuracy | | < ± 20 ms |
| Minimum operate time | 50 ms | |

Table 36 Technical data of the definite time overvoltage protection function

Parameters

Enumerated parameter

| Parameter name | Title | Selection range | Default |
|---|-----------|-----------------|---------|
| Enabling or disabling the overvoltage protection function | | | |
| TOV59_Oper_EPar | Operation | Off, On | On |

Table 37 The enumerated parameter of the definite time overvoltage protection function

Integer parameter

| Parameter name | Title | Unit | Min | Max | Step | Default |
|---|---------------|------|-----|-----|------|---------|
| Voltage level setting. If the measured voltage is above the setting value, the function generates a start signal. | | | | | | |
| TOV59_StVol_IPar | Start Voltage | % | 30 | 130 | 1 | 63 |

Table 38 The integer parameter of the definite time overvoltage protection function

Boolean parameter

| Parameter name | Title | Default |
|-----------------------------|-------------------|---------|
| Enabling start signal only: | | |
| TOV59_StOnly_BPar | Start Signal Only | FALSE |

Table 39 The boolean parameter of the definite time overvoltage protection function

Timer parameter

| Parameter name | Title | Unit | Min | Max | Step | Default |
|--|------------|------|-----|-------|------|---------|
| Time delay of the overvoltage protection function. | | | | | | |
| TOV59_Delay_TPar | Time Delay | ms | 0 | 60000 | 1 | 100 |

Table 40 The timer parameter of the definite time overvoltage protection function

2.1.1.10 Definite time undervoltage protection function (TUV27)

The definite time undervoltage protection function measures the RMS values of the fundamental Fourier component of three phase voltages.

The Fourier calculation inputs are the sampled values of the three phase voltages (UL1, UL2, UL3), and the outputs are the basic Fourier components of the analyzed voltages (UL1Four, UL2Four, UL3Four). They are not part of the TUV27 function; they belong to the preparatory phase.

The function generates start signals for the phases individually. The general start signal is generated if the voltage is below the preset starting level parameter setting value and above the defined blocking level.

The function generates a trip command only if the definite time delay has expired and the parameter selection requires a trip command as well.

The operation mode can be chosen by the type selection parameter. The function can be disabled, and can be set to "1 out of 3", "2 out of 3", and "All".

The overvoltage protection function has a binary input signal, which serves the purpose of disabling the function. The conditions of disabling are defined by the user, applying the graphic equation editor.

Technical data

| Function | Value | Accuracy |
|---------------------------|-------|-----------|
| Pick-up starting accuracy | | < ± 0,5 % |
| Blocking voltage | | < ± 1,5 % |
| Reset time | | |
| U> → Un | 50 ms | |
| U> → 0 | 40 ms | |
| Operate time accuracy | | < ± 20 ms |
| Minimum operate time | 50 ms | |

Table 41 Technical data of the definite time undervoltage protection function

Parameters

Enumerated parameter

| Parameter name | Title | Selection range | Default |
|------------------------------|-----------|----------------------------------|------------|
| Parameter for type selection | | | |
| TUV27_Oper_EPar_ | Operation | Off, 1 out of 3, 2 out of 3, All | 1 out of 3 |

Table 42 The enumerated parameter of the definite time undervoltage protection function

Integer parameters

| Parameter name | Title | Unit | Min | Max | Step | Default |
|--------------------------------|---------------|------|-----|-----|------|---------|
| Starting voltage level setting | | | | | | |
| TUV27_StVol_IPar_ | Start Voltage | % | 30 | 130 | 1 | 52 |
| Blocking voltage level setting | | | | | | |
| TUV27_BlkVol_IPar_ | Block Voltage | % | 0 | 20 | 1 | 10 |

Table 43 The integer parameters of the definite time undervoltage protection function

Boolean parameter

| Parameter name | Title | Default |
|-----------------------------|-------------------|---------|
| Enabling start signal only: | | |
| TUV27_StOnly_BPar_ | Start Signal Only | FALSE |

Table 44 The boolean parameter of the definite time undervoltage protection function

Timer parameters

| Parameter name | Title | Unit | Min | Max | Step | Default |
|---|------------|------|-----|-------|------|---------|
| Time delay of the undervoltage protection function. | | | | | | |
| TUV27_Delay_TPar_ | Time Delay | ms | 0 | 60000 | 1 | 100 |

Table 45 The timer parameter of the definite time undervoltage protection function

2.1.1.11 Residual definite time overvoltage protection function (TOV59N)

The residual definite time overvoltage protection function operates according to definite time characteristics, using the RMS values of the fundamental Fourier component of the zero sequence voltage ($U_N=3U_0$).

The Fourier calculation inputs are the sampled values of the residual or neutral voltage ($U_N=3U_0$) and the outputs are the RMS value of the basic Fourier components of those.

The function generates start signal if the residual voltage is above the level defined by parameter setting value.

The function generates a trip command only if the definite time delay has expired and the parameter selection requires a trip command as well.

The residual overvoltage protection function has a binary input signal, which serves the purpose of disabling the function. The conditions of disabling are defined by the user, applying the graphic equation editor.

Technical data

| Function | Value | Accuracy |
|---------------------------------|---------------------|----------------------|
| Pick-up starting accuracy | 2 – 8 % 8 – 60 % | < ± 2 % < ± 1.5 % |
| Reset time U> → Un U> → 0 | 60 ms 50 ms | |
| Operate time | 50 ms | < ± 20 ms |

Table 46 Technical data of the residual definite time overvoltage protection function

Parameters

Enumerated parameter

| Parameter name | Title | Selection range | Default |
|-----------------------------------|-----------|-----------------|---------|
| Parameter for enabling/disabling: | | | |
| TOV59N_Oper_EPar_ | Operation | Off, On | On |

Table 47 The enumerated parameter of the residual definite time overvoltage protection function

Integer parameter

| Parameter name | Title | Unit | Min | Max | Step | Default |
|-----------------------------|---------------|------|-----|-----|------|---------|
| Starting voltage parameter: | | | | | | |
| TOV59N_StVol_IPar_ | Start Voltage | % | 2 | 60 | 1 | 30 |

Table 48 The integer parameter of the residual definite time overvoltage protection function

Boolean parameter

| Parameter name | Title | Default |
|-----------------------------|-------------------|---------|
| Enabling start signal only: | | |
| TOV59N_StOnly_BPar_ | Start Signal Only | FALSE |

Table 49 The boolean parameter of the residual definite time overvoltage protection function

Timer parameter

| Parameter name | Title | Unit | Min | Max | Step | Default |
|----------------------|------------|------|-----|-------|------|---------|
| Definite time delay: | | | | | | |
| TOV59N_Delay_TPar_ | Time Delay | ms | 0 | 60000 | 1 | 100 |

Table 50 The time parameter of the residual definite time overvoltage protection function

2.1.1.12 Auto-reclose protection (REC79MV)

The MV automatic reclosing function can realize up to four shots of reclosing for medium-voltage networks. The dead time can be set individually for each reclosing and separately for earth faults and for multi-phase faults. All shots are of three phase reclosing.

The starting signal of the cycles can be generated by any combination of the protection functions or external signals of the binary inputs.

The automatic reclosing function is triggered if as a consequence of a fault a protection function generates a trip command to the circuit breaker and the protection function resets because the fault current drops to zero or the circuit breaker's auxiliary contact signals open state. According to the preset parameter values, either of these two conditions starts counting the dead time, at the end of which the MV automatic reclosing function generates a close command automatically. If the fault still exists or reappears, then within the "Reclaim time" the protection functions picks up again and the subsequent cycle is started. If the fault still exists at the end of the last cycle, the MV automatic reclosing function trips and generates the signal for final trip. If no pickup is detected within this time, then the MV automatic reclosing cycle resets and a new fault will start the procedure with the first cycle again.

At the moment of generating the close command, the circuit breaker must be ready for operation, which is signaled via the binary input "CB Ready". The preset parameter value "CB Supervision time" decides how long the MV automatic reclosing function is allowed to wait at the end of the dead time for this signal. If the signal is not received during this dead time extension, then the MV automatic reclosing function terminates.

Depending on binary parameter settings, the automatic reclosing function block can accelerate trip commands of the individual reclosing cycles. This function needs user-programmed graphic equations to generate the accelerated trip command.

The duration of the close command depends on preset parameter value "Close command time", but the close command terminates if any of the protection functions issues a trip command.

The MV automatic reclosing function can control up to four reclosing cycles. Depending on the preset parameter values "EarthFaults Rec,Cycle" and "PhaseFaults Rec,Cycle", there are different modes of operation, both for earth faults and for multi-phase faults:

| | |
|------------------|---|
| Disabled | No automatic reclosing is selected, |
| 1. Enabled | Only one automatic reclosing cycle is selected, |
| 1.2. Enabled | Two automatic reclosing cycles are activated, |
| 1.2.3. Enabled | Three automatic reclosing cycles are activated, |
| 1.2.3.4. Enabled | All automatic reclosing cycles are activated. |

The function can be switched Off /On using the parameter "Operation".

The user can also block the MV automatic reclosing function applying the graphic equation editor. The binary status variable to be programmed is "Block".

Depending on the preset parameter value "Reclosing started by", the MV automatic reclosing function can be started either by resetting of the TRIP command or by the binary signal indicating the open state of the circuit breaker.

If the reset state of the TRIP command is selected to start the MV automatic reclosing function, then the conditions are defined by the user applying the graphic equation editor. The binary status variable to be programmed is "AutoReclosing Start".

If the open state of the circuit breaker is selected to start the MV automatic reclosing function, then additionally to programming the "AutoReclosing Start" signal, the conditions for detecting the open state of the CB are defined by the user applying the graphic equation editor.

For all four reclosing cycles, separate dead times can be defined for line-to-line faults and for earth faults. The dead time counter of any reclosing cycle is started by the starting signal but starting can be delayed.

Reclosing is possible only if the conditions required by the “synchro-check” function are fulfilled. The conditions are defined by the user applying the graphic equation editor. The HV automatic reclosing function waits for a pre-programmed time for this signal. This time is defined by the user. If the “SYNC Release” signal is not received during the running time of this timer, then the “synchronous switch” operation is started. If no synchronous switching is possible, then the MV automatic reclosing function resets.

In case of a manual close command which is assigned to the binary input “Manual Close” using graphic equation programming, a preset parameter value decides how long the MV automatic reclosing function should be disabled after the manual close command.

The MV automatic reclosing function can be blocked by a binary input. The conditions are defined by the user applying the graphic equation editor.

Technical data

| Function | Accuracy |
|----------------|--------------------------------|
| Operating time | ±1% of setting value or ±30 ms |

Table 51 Technical data of the auto-reclosing protection function

Parameters

Enumerated parameters

| Parameter name | Title | Selection range | Default |
|--|-------------------------|---|------------|
| Switching ON/OFF the MV automatic reclosing function | | | |
| REC79_Op_EPar_ | Operation | Off, On | On |
| Selection of the number of reclosing sequences in case of earth faults | | | |
| REC79_EFCycEn_EPar_ | EarthFault RecCycle | Disabled, 1. Enabled, 1.2. Enabled, 1.2.3. Enabled, 1.2.3.4. Enabled | 1. Enabled |
| Selection of the number of reclosing sequences in case of line-to-line faults | | | |
| REC79_PhFCycEn_EPar_ | PhaseFault RecCycle | Disabled, 1. Enabled, 1.2. Enabled, 1.2.3. Enabled, 1.2.3.4. Enabled | 1. Enabled |
| Selection of triggering the dead time counter (trip signal reset or circuit breaker open position) | | | |
| REC79_St_EPar_ | Reclosing Started by | Trip reset, CB open | Trip reset |

Table 52 The enumerated parameters of the auto-reclosing protection function

Timer parameters

| Parameter name | Title | Unit | Min | Max | Step | Default |
|--|-----------------------|------|-----|--------|------|---------|
| Dead time setting for the first reclosing cycle for line-to-line fault | | | | | | |
| REC79_PhDT1_TPar_ | 1. Dead Time Ph | msec | 0 | 100000 | 10 | 500 |
| Dead time setting for the second reclosing cycle for line-to-line fault | | | | | | |
| REC79_PhDT2_TPar_ | 2. Dead Time Ph | msec | 10 | 100000 | 10 | 600 |
| Dead time setting for the third reclosing cycle for line-to-line fault | | | | | | |
| REC79_PhDT3_TPar_ | 3. Dead Time Ph | msec | 10 | 100000 | 10 | 700 |
| Dead time setting for the fourth reclosing cycle for line-to-line fault | | | | | | |
| REC79_PhDT4_TPar_ | 4. Dead Time Ph | msec | 10 | 100000 | 10 | 800 |
| Dead time setting for the first reclosing cycle for earth fault | | | | | | |
| REC79_EFDT1_TPar_ | 1. Dead Time EF | msec | 0 | 100000 | 10 | 1000 |
| Dead time setting for the second reclosing cycle for earth fault | | | | | | |
| REC79_EFDT2_TPar_ | 2. Dead Time EF | msec | 10 | 100000 | 10 | 2000 |
| Dead time setting for the third reclosing cycle for earth fault | | | | | | |
| REC79_EFDT3_TPar_ | 3. Dead Time EF | msec | 10 | 100000 | 10 | 3000 |
| Dead time setting for the fourth reclosing cycle for earth fault | | | | | | |
| REC79_EFDT4_TPar_ | 4. Dead Time EF | msec | 10 | 100000 | 10 | 4000 |
| Reclaim time setting | | | | | | |
| REC79_Rec_TPar_ | Reclaim Time | msec | 100 | 100000 | 10 | 2000 |
| Impulse duration setting for the CLOSE command | | | | | | |
| REC79_Close_TPar_ | Close Command Time | msec | 10 | 10000 | 10 | 100 |
| Setting of the dynamic blocking time | | | | | | |
| REC79_DynBlk_TPar_ | Dynamic Blocking Time | msec | 10 | 100000 | 10 | 1500 |
| Setting of the blocking time after manual close command | | | | | | |
| REC79_MC_TPar_ | Block after Man Close | msec | 0 | 100000 | 10 | 1000 |
| Setting of the action time (max. allowable duration between protection start and trip) | | | | | | |
| REC79_Act_TPar_ | Action Time | msec | 0 | 20000 | 10 | 1000 |
| Limitation of the starting signal (trip command is too long or the CB open signal received too late) | | | | | | |
| REC79_MaxSt_TPar_ | Start Signal Max Time | msec | 0 | 10000 | 10 | 1000 |
| Max. delaying the start of the dead-time counter | | | | | | |
| REC79_DtDel_TPar_ | DeadTime Max Delay | msec | 0 | 100000 | 10 | 3000 |
| Waiting time for circuit breaker ready to close signal | | | | | | |
| REC79_CBTO_TPar_ | CB Supervision Time | msec | 10 | 100000 | 10 | 1000 |
| Waiting time for synchronous state signal | | | | | | |
| REC79_SYN1_TPar_ | SynCheck Max Time | msec | 500 | 100000 | 10 | 10000 |
| Waiting time for synchronous switching signal | | | | | | |
| REC79_SYN2_TPar_ | SynSW Max Time | msec | 500 | 100000 | 10 | 10000 |

Table 53 The timer parameters of the auto-reclosing protection function

Boolean parameters

| Parameter name | Title | Default | Explanation |
|---------------------|---------------------|---------|--|
| REC79_CBState_BPar_ | CB State Monitoring | 0 | Enable CB state monitoring for "Not Ready" state |
| REC79_Acc1_BPar_ | Accelerate 1.Trip | 0 | Accelerate trip command at starting cycle 1 |
| REC79_Acc2_BPar_ | Accelerate 2.Trip | 0 | Accelerate trip command at starting cycle 2 |
| REC79_Acc3_BPar_ | Accelerate 3.Trip | 0 | Accelerate trip command at starting cycle 3 |
| REC79_Acc4_BPar_ | Accelerate 4.Trip | 0 | Accelerate trip command at starting cycle 4 |
| REC79_Acc5_BPar_ | Accelerate FinTrip | 0 | Accelerate final trip command |

Table 54 The boolean parameters of the auto-reclosing protection function

2.1.1.13 Current unbalance function (VCB60)

The current unbalance protection function (VCB60) can be applied to detect unexpected asymmetry in current measurement.

The applied method selects maximum and minimum phase currents (RMS value of the fundamental Fourier components). If the difference between them is above the setting limit, the function generates a start signal. It is a necessary precondition of start signal generation that the maximum of the currents be above 10 % of the rated current and below 150% of the rated current.

The Fourier calculation modules calculate the RMS value of the basic Fourier current components of the phase currents individually. They are not part of the VCB60 function; they belong to the preparatory phase.

The analog signal processing module processes the RMS value of the basic Fourier current components of the phase currents to prepare the signals for the decision. It calculates the maximum and the minimum value of the RMS values and the difference between the maximum and minimum of the RMS values of the fundamental Fourier components of the phase currents as a percentage of the maximum of these values (ΔI). If the maximum of the currents is above 10 % of the rated current and below 150% of the rated current and the ΔI value is above the limit defined by the preset parameter (Start Current Diff) an output is generated to the decision module.

The decision logic module combines the status signals to generate the starting signal and the trip command of the function.

The trip command is generated after the defined time delay if trip command is enabled by the Boolean parameter setting.

The function can be disabled by parameter setting, and by an input signal programmed by the user with the graphic programming tool.

Technical data

| Function | Value | Accuracy |
|---------------------------------|-------|----------|
| Pick-up starting accuracy at In | | < 2 % |
| Reset ratio | 0.95 | |
| Operate time | 70 ms | |

Table 55 Technical data of the current unbalance function

Parameters

Enumerated parameter

| Parameter name | Title | Selection range | Default |
|---------------------------------|-----------|-----------------|---------|
| Selection of the operating mode | | | |
| VCB60_Oper_EPar_ | Operation | Off, On | On |

Table 56 The enumerated parameter of the current unbalance function

Boolean parameter

| Parameter name | Title | Explanation | Default |
|----------------------------|-------------------|----------------------------|---------|
| Selection for trip command | | | |
| VCB60_StOnly_BPar_ | Start Signal Only | 0 to generate trip command | 0 |

Table 57 The boolean parameter of the current unbalance function

Integer parameter

| Parameter name | Title | Unit | Min | Max | Step | Default |
|----------------------------------|--------------------|------|-----|-----|------|---------|
| Phase difference current setting | | | | | | |
| VCB60_StCurr_IPar_ | Start Current Diff | % | 10 | 90 | 1 | 50 |

Table 58 The integer parameter of the current unbalance function

Timer parameter

| Parameter name | Title | Unit | Min | Max | Step | Default |
|-----------------|------------|------|-----|-------|------|---------|
| Time delay | | | | | | |
| VCB60_Del_TPar_ | Time Delay | msec | 100 | 60000 | 100 | 1000 |

Table 59 The timer parameter of the current unbalance function

2.1.1.14 Breaker failure protection function (BRF50)

After a protection function generates a trip command, it is expected that the circuit breaker opens and the fault current drops below the pre-defined normal level.

If not, then an additional trip command must be generated for all backup circuit breakers to clear the fault. At the same time, if required, a repeated trip command can be generated to the circuit breakers which are a priori expected to open.

The breaker failure protection function can be applied to perform this task.

The starting signal of the breaker failure protection function is usually the trip command of any other protection function assigned to the protected object. The user has the task to define these starting signals using the graphic equation editor, or if the operation of the individual phases is needed, then the start signals for the phases individually.

Two dedicated timers start at the rising edge of the start signals at the same time, one for the backup trip command and one for the repeated trip command, separately for operation in the individual phases. During the running time of the timers the function optionally monitors the currents, the closed state of the circuit breakers or both, according to the user's choice. The selection is made using an enumerated parameter.

If current supervision is selected by the user then the current limit values must be set correctly. The binary inputs indicating the status of the circuit breaker poles have no meaning.

If contact supervision is selected by the user then the current limit values have no meaning. The binary inputs indicating the status of the circuit breaker poles must be programmed correctly using the graphic equation editor.

If the parameter selection is "Current/Contact", the current parameters and the status signals must be set correctly. The breaker failure protection function resets only if all conditions for faultless state are fulfilled.

If at the end of the running time of the backup timer the currents do not drop below the pre-defined level, and/or the monitored circuit breaker is still in closed position, then a backup trip command is generated.

If repeated trip command is to be generated for the circuit breakers that are expected to open, then the enumerated parameter Retrip must be set to "On". In this case, at the end of the retrip timer(s) a repeated trip command is also generated in the phase(s) where the retrip timer(s) run off.

The pulse duration of the trip command is not shorter than the time defined by setting the parameter Pulse length.

The breaker failure protection function can be disabled by setting the enabling parameter to "Off".

Dynamic blocking (inhibition) is possible using the binary input Block. The conditions are to be programmed by the user, using the graphic equation editor.

Technical data

| Function | Effective range | Accuracy |
|--------------------|-----------------|----------|
| Current accuracy | | <2 % |
| Retrip time | approx. 15 ms | |
| BF time accuracy | | ± 5 ms |
| Current reset time | 20 ms | |

Table 60 Technical data of the breaker failure protection function

Parameters

Enumerated parameters

| Parameter name | Title | Selection range | Default |
|--|-----------|--|---------|
| Selection of the operating mode | | | |
| BRF50_Oper_EPar_ | Operation | Off, Current, Contact, Current/Contact | Current |
| Switching on or off of the repeated trip command | | | |
| BRF50_ReTr_EPar_ | Retrip | Off, On | On |

Table 61 The enumerated parameters of the breaker failure protection function

Integer parameters

| Parameter name | Title | Unit | Min | Max | Step | Default |
|-------------------------|-------------------|------|-----|-----|------|---------|
| Phase current setting | | | | | | |
| BRF50_StCurrPh_IPar_ | Start Ph Current | % | 20 | 200 | 1 | 30 |
| Neutral current setting | | | | | | |
| BRF50_StCurrN_IPar_ | Start Res Current | % | 10 | 200 | 1 | 20 |

Table 62 The integer parameters of the breaker failure protection function

Timer parameters

| Parameter name | Title | Unit | Min | Max | Step | Default |
|--|-------------------|------|-----|-------|------|---------|
| Time delay for repeated trip command generation | | | | | | |
| BRF50_TrDel_TPar_ | Retrip Time Delay | msec | 0 | 10000 | 1 | 200 |
| Time delay for trip command generation for the backup circuit breaker(s) | | | | | | |
| BRF50_BUDeI_TPar_ | Backup Time Delay | msec | 60 | 10000 | 1 | 300 |
| Trip command impulse duration | | | | | | |
| BRF50_Pulse_TPar_ | Pulse Duration | msec | 0 | 60000 | 1 | 100 |

Table 63 The timer parameters of the breaker failure protection function

2.1.1.15 Directional over-power protection function (DOP32)

The directional over-power protection function can be applied to protect any elements of the electric power system mainly generators if the active and/or reactive power has to be limited.

Technical data

| Function | Effective range | Accuracy |
|-----------------|-----------------|----------|
| P,Q measurement | >5% In | <3% |

Table 64 Technical data of the directional over-power protection function

Parameters

Enumerated parameter

| Parameter name | Title | Selection range | Default |
|----------------------------------|-----------|-----------------|---------|
| Switching on/off of the function | | | |
| DOP32_Oper_EPar_ | Operation | Off,On | On |

Table 65 The enumerated parameter of the directional over-power protection function

Boolean parameter

| Parameter name | Title | Default |
|--|-------------------|---------|
| Selection: start signal only or both start signal and trip command | | |
| DOP32_StOnly_BPar_ | Start Signal Only | 0 |

Table 66 The Boolean parameter of the directional over-power protection function

Integer parameter

| Parameter name | Title | Unit | Min | Max | Step | Default |
|-----------------|-----------------|------|------|-----|------|---------|
| Direction angle | | | | | | |
| DOP32_RCA_IPar_ | Direction Angle | deg | -179 | 180 | 1 | 0 |

Table 67 Integer parameter of the directional over-power protection function

Float parameter

| Parameter name | Title | Unit | Min | Max | Step | Default |
|-----------------------|-------------|------|-----|-----|------|---------|
| Minimum power setting | | | | | | |
| DOP32_StPow_FPar_ | Start Power | % | 1 | 200 | 0.1 | 10 |

Table 68 Float parameter of the directional over-power protection function

Timer parameters

| Parameter name | Title | Unit | Min | Max | Step | Default |
|---|------------|------|-----|-------|------|---------|
| Definite time delay of the trip command | | | | | | |
| DOP32_Delay_TPar_ | Time Delay | msec | 0 | 60000 | 1 | 100 |

Table 69 Timer parameter of the directional over-power protection function

2.1.1.16 Directional under-power protection function (DUP32)

The directional under-power protection function can be applied mainly to protect any elements of the electric power system, mainly generators, if the active and/or reactive power has to be limited in respect of the allowed minimum power.

Technical data

| Function | Effective range | Accuracy |
|-----------------|-----------------|----------|
| P,Q measurement | $I > 5\% I_n$ | $< 3\%$ |

Table 70 Technical data of the directional under-power protection function

Parameters

Enumerated parameter

| Parameter name | Title | Selection range | Default |
|----------------------------------|-----------|-----------------|---------|
| Switching on/off of the function | | | |
| DUP32_Oper_EPar_ | Operation | Off, On | On |

Table 71 The enumerated parameter of the directional under-power protection function

Boolean parameter

| Parameter name | Title | Default |
|--|-------------------|---------|
| Selection: start signal only or both start signal and trip command | | |
| DUP32_StOnly_BPar_ | Start Signal Only | 0 |

Table 72 The Boolean parameter of the directional under-power protection function

Integer parameter

| Parameter name | Title | Unit | Min | Max | Step | Default |
|-----------------|-----------------|------|------|-----|------|---------|
| Direction angle | | | | | | |
| DUP32_RCA_IPar_ | Direction Angle | deg | -179 | 180 | 1 | 0 |

Table 73 Integer parameter of the directional under-power protection function

Float parameter

| Parameter name | Title | Unit | Min | Max | Step | Default |
|-----------------------|-------------|------|-----|-----|------|---------|
| Minimum power setting | | | | | | |
| DUP32_StPow_FPar_ | Start Power | % | 1 | 200 | 0,1 | 10 |

Table 74 Float parameter of the directional under-power protection function

Timer parameter

| Parameter name | Title | Unit | Min | Max | Step | Default |
|---|------------|------|-----|-------|------|---------|
| Definite time delay of the trip command | | | | | | |
| DUP32_Delay_TPar_ | Time Delay | msec | 0 | 60000 | 1 | 100 |

Table 75 Timer parameter of the directional under-power protection function

2.1.1.17 Trip logic (TRC94)

The simple trip logic function operates according to the functionality required by the IEC 61850 standard for the “Trip logic logical node”. This simplified software module can be applied if only three-phase trip commands are required, that is, phase selectivity is not applied.

The function receives the trip requirements of the protective functions implemented in the device and combines the binary signals and parameters to the outputs of the device.

The trip requirements are programmed by the user, using the graphic equation editor. The aim of the decision logic is

- to define a minimal impulse duration even if the protection functions detect a very short-time fault.
-

Technical data

| Function | | Accuracy |
|-----------------------|---------------|----------|
| Impulse time duration | Setting value | <3 ms |

Table 76 Technical data of the simple trip logic function

Parameters

Enumerated parameter

| Parameter name | Title | Selection range | Default |
|---------------------------------|-----------|-----------------|---------|
| Selection of the operating mode | | | |
| TRC94_Oper_EPar_ | Operation | Off, On | On |

Tables 77 The enumerated parameter of the decision logic

Timer parameter

| Parameter name | Title | Unit | Min | Max | Step | Default |
|---|--------------------|------|-----|-------|------|---------|
| Minimum duration of the generated impulse | | | | | | |
| TRC94_TrPu_TPar_ | Min Pulse Duration | msec | 50 | 60000 | 1 | 150 |

Table 78 Timer parameter of the decision logic

2.1.1.18 Dead line detection function (DLD)

The “Dead Line Detection” (DLD) function generates a signal indicating the dead or live state of the line. Additional signals are generated to indicate if the phase voltages and phase currents are above the pre-defined limits.

The task of the “Dead Line Detection” (DLD) function is to decide the Dead line/Live line state.

Criteria of “Dead line” state: all three phase voltages are below the voltage setting value AND all three currents are below the current setting value.

Criteria of “Live line” state: all three phase voltages are above the voltage setting value.

The details are described in the document ***Dead line detection protection function block description.***

Technical data

| Function | Value | Accuracy |
|-----------------|-------|----------|
| Pick-up voltage | | 1% |
| Operation time | <20ms | |
| Reset ratio | 0.95 | |

Table 79 Technical data of the dead line detection function

Parameters

Integer parameters

| Parameter name | Title | Unit | Min | Max | Step | Default |
|--|----------------------|------|-----|-----|------|---------|
| Integer parameters of the dead line detection function | | | | | | |
| DLD_ULev_IPar_ | Min. Operate Voltage | % | 10 | 100 | 1 | 60 |
| DLD_ILev_IPar_ | Min. Operate Current | % | 2 | 100 | 1 | 10 |

Table 80 The integer parameters of the dead line detection function

2.1.1.19 Current input function (CT4)

If the factory configuration includes a current transformer hardware module, the current input function block is automatically configured among the software function blocks. Separate current input function blocks are assigned to each current transformer hardware module.

A current transformer hardware module is equipped with four special intermediate current transformers. (See Chapter 5 of the EuroProt+ hardware description document.) As usual, the first three current inputs receive the three phase currents (IL1, IL2, IL3), the fourth input is reserved for zero sequence current, for the zero sequence current of the parallel line or for any additional current. Accordingly, the first three inputs have common parameters while the fourth current input needs individual setting.

The role of the current input function block is to

- set the required parameters associated to the current inputs,
- deliver the sampled current values for disturbance recording,
- perform the basic calculations
 - Fourier basic harmonic magnitude and angle,
 - True RMS value;
- provide the pre-calculated current values to the subsequent software modules,
- deliver the basic calculated values for on-line displaying.

Operation of the current input algorithm

The current input function block receives the sampled current values from the internal operating system. The scaling (even hardware scaling) depends on parameter setting. See parameters CT4_Ch13Nom_EPar_ (Rated Secondary I1-3) and CT4_Ch4Nom_EPar_ (Rated Secondary I4). The options to choose from are 1A or 5A (in special applications, 0.2A or 1A). This parameter influences the internal number format and, naturally, accuracy. (A small current is processed with finer resolution if 1A is selected.)

If needed, the phase currents can be inverted by setting the parameter CT4_Ch13Dir_EPar_ (Starpoint I1-3). This selection applies to each of the channels IL1, IL2 and IL3. The fourth current channel can be inverted by setting the parameter CT4_Ch4Dir_EPar_ (Direction I4). This inversion may be needed in protection functions such as distance protection, differential protection or for any functions with directional decision.

These sampled values are available for further processing and for disturbance recording.

The performed basic calculation results the Fourier basic harmonic magnitude and angle and the true RMS value. These results are processed by subsequent protection function blocks and they are available for on-line displaying as well.

The function block also provides parameters for setting the primary rated currents of the main current transformer. This function block does not need that parameter setting. These values are passed on to function blocks such as displaying primary measured values, primary power calculation, etc.

Technical data

| Function | Range | Accuracy |
|------------------|------------------|-----------|
| Current accuracy | 20 – 2000% of In | ±1% of In |

Table 81 Technical data of the current input

Parameters

Enumerated parameters

| Parameter name | Title | Selection range | Default |
|---|----------------------|-----------------------|---------|
| Rated secondary current of the first three input channels. 1A or 5A is selected by parameter setting, no hardware modification is needed. | | | |
| CT4_Ch13Nom_EPar_ | Rated Secondary I1-3 | 1A,5A | 1A |
| Rated secondary current of the fourth input channel. 1A or 5A is selected by parameter setting, no hardware modification is needed. | | | |
| CT4_Ch4Nom_EPar_ | Rated Secondary I4 | 1A,5A (0.2A or 1A) | 1A |
| Definition of the positive direction of the first three currents, given by location of the secondary star connection point | | | |
| CT4_Ch13Dir_EPar_ | Starpoint I1-3 | Line,Bus | Line |
| Definition of the positive direction of the fourth current, given as normal or inverted | | | |
| CT4_Ch4Dir_EPar_ | Direction I4 | Normal,Inverted | Normal |

Table 82 The enumerated parameters of the current input function

Floating point parameters

| Parameter name | Title | Dim. | Min | Max | Default |
|-----------------------------------|------------------|------|-----|------|---------|
| Rated primary current of channel1 | | | | | |
| CT4_PrI1_FPar_ | Rated Primary I1 | A | 100 | 4000 | 1000 |
| Rated primary current of channel2 | | | | | |
| CT4_PrI2_FPar | Rated Primary I2 | A | 100 | 4000 | 1000 |
| Rated primary current of channel3 | | | | | |
| CT4_PrI3_FPar_ | Rated Primary I3 | A | 100 | 4000 | 1000 |
| Rated primary current of channel4 | | | | | |
| CT4_PrI4_FPar_ | Rated Primary I4 | A | 100 | 4000 | 1000 |

Table 83 The floating point parameters of the current input function

NOTE: The rated primary current of the channels is not needed for the current input function block itself. These values are passed on to the subsequent function blocks.

The **measured values** of the current input function block.

| Measured value | Dim. | Explanation |
|-----------------|--------------|---|
| Current Ch - I1 | A(secondary) | Fourier basic component of the current in channel IL1 |
| Angle Ch - I1 | degree | Vector position of the current in channel IL1 |
| Current Ch – I2 | A(secondary) | Fourier basic component of the current in channel IL2 |
| Angle Ch – I2 | degree | Vector position of the current in channel IL2 |
| Current Ch – I3 | A(secondary) | Fourier basic component of the current in channel IL3 |
| Angle Ch – I3 | degree | Vector position of the current in channel IL3 |
| Current Ch – I4 | A(secondary) | Fourier basic component of the current in channel I4 |
| Angle Ch – I4 | degree | Vector position of the current in channel I4 |

Table 84 The measured analogue values of the current input function

NOTE1: The scaling of the Fourier basic component is such that if pure sinusoid 1A RMS of the rated frequency is injected, the displayed value is 1A. (The displayed value does not depend on the parameter setting values "Rated Secondary".)

NOTE2: The reference of the vector position depends on the device configuration. If a voltage input module is included, then the reference vector (vector with angle 0 degree) is the vector calculated for the first voltage input channel of the first applied voltage input module. If no voltage input module is configured, then the reference vector (vector with angle 0 degree)

is the vector calculated for the first current input channel of the first applied current input module.

Figure 4 shows an example of how the calculated Fourier components are displayed in the on-line block. (See the document "EuroProt+ Remote user interface description".)

| [-] CT4 module | | |
|-----------------|-----------------------------------|------------|
| Current Ch - I1 | <input type="text" value="0.84"/> | A |
| Angle Ch - I1 | <input type="text" value="-9"/> | deg |
| Current Ch - I2 | <input type="text" value="0.84"/> | A |
| Angle Ch - I2 | <input type="text" value="-129"/> | deg |
| Current Ch - I3 | <input type="text" value="0.85"/> | A |
| Angle Ch - I3 | <input type="text" value="111"/> | deg |
| Current Ch - I4 | <input type="text" value="0.00"/> | A |
| Angle Ch - I4 | <input type="text" value="0"/> | deg |

Figure 4 Example: On-line displayed values for the current input module

2.1.1.20 Voltage input function (VT4)

If the factory configuration includes a voltage transformer hardware module, the voltage input function block is automatically configured among the software function blocks. Separate voltage input function blocks are assigned to each voltage transformer hardware module.

A voltage transformer hardware module is equipped with four special intermediate voltage transformers. (See Chapter 6 of the EuroProt+ hardware description document.) As usual, the first three voltage inputs receive the three phase voltages (UL1, UL2, UL3), the fourth input is reserved for zero sequence voltage or for a voltage from the other side of the circuit breaker for synchron switching. All inputs have a common parameter for type selection: 100V or 200V.

Additionally, there is a correction factor available if the rated secondary voltage of the main voltage transformer (e.g. 110V) does not match the rated input of the device.

The role of the voltage input function block is to

- set the required parameters associated to the voltage inputs,
- deliver the sampled voltage values for disturbance recording,
- perform the basic calculations
 - Fourier basic harmonic magnitude and angle,
 - True RMS value;
- provide the pre-calculated voltage values to the subsequent software modules,
- deliver the basic calculated values for on-line displaying.

Operation of the voltage input algorithm

The voltage input function block receives the sampled voltage values from the internal operating system. The scaling (even hardware scaling) depends on parameter setting. See the parameter VT4_Type_EPar_ (Range). The options to choose from are 100V or 200V. This parameter influences the internal number format and, naturally, accuracy. (A small voltage is processed with finer resolution if 100V is selected.)

The connection of the first three VT secondary winding must be set to reflect actual physical connection. The associated parameter is VT4_Ch13Nom_EPar_ (Connection U1-3). The selection can be: Ph-N, Ph-Ph or Ph-N-Isolated.

The Ph-N option is applied in solidly grounded networks, where the measured phase voltage is never above $1.5 \cdot U_n$. In this case the primary rated voltage of the VT must be the value of the rated PHASE-TO-NEUTRAL voltage.

The Ph-N option is applied in compensated or isolated networks, where the measured phase voltage can be above $1.5 \cdot U_n$ even in normal operation. In this case the primary rated voltage of the VT must be the value of the rated PHASE-TO-PHASE voltage.

If phase-to-phase voltage is connected to the VT input of the device, then the Ph-Ph option is to be selected. Here, the primary rated voltage of the VT must be the value of the rated PHASE-TO-PHASE voltage. This option must not be selected if the distance protection function is supplied from the VT input.

The fourth input is reserved for zero sequence voltage or for a voltage from the other side of the circuit breaker for synchron switching. Accordingly, the connected voltage must be identified with parameter setting VT4_Ch4Nom_EPar_ (Connection U4). Here, phase-to-neutral or phase-to-phase voltage can be selected: Ph-N, Ph-Ph

If needed, the phase voltages can be inverted by setting the parameter VT4_Ch13Dir_EPar_ (Direction U1-3). This selection applies to each of the channels UL1, UL2 and UL3. The fourth voltage channel can be inverted by setting the parameter VT4_Ch4Dir_EPar_ (Direction U4). This inversion may be needed in protection functions such as distance protection, differential protection or for any functions with directional decision, or for checking the voltage vector positions.

Additionally, there is a correction factor available if the rated secondary voltage of the main voltage transformer (e.g. 110V) does not match the rated input of the device. The related parameter is VT4_CorrFact_IPar_ (VT correction). As an example: if the rated secondary voltage of the main voltage transformer is 110V, then select Type 100 for the parameter "Range" and the required value to set here is 110%.

These sampled values are available for further processing and for disturbance recording.

The performed basic calculation results the Fourier basic harmonic magnitude and angle and the true RMS value of the voltages. These results are processed by subsequent protection function blocks and they are available for on-line displaying as well.

The function block also provides parameters for setting the primary rated voltages of the main voltage transformer. This function block does not need that parameter setting. These values are passed on to function blocks such as displaying primary measured values, primary power calculation, etc. Concerning the rated voltage, see the instructions related to the parameter for the connection of the first three VT secondary winding.

Parameters

Enumerated parameters

| Parameter name | Title | Selection range | Default |
|--|-----------------|----------------------------|----------|
| Rated secondary voltage of the input channels. 100 V or 200V is selected by parameter setting, no hardware modification is needed. | | | |
| VT4_Type_EPar_ | Range | Type 100,Type 200 | Type 100 |
| Connection of the first three voltage inputs (main VT secondary) | | | |
| VT4_Ch13Nom_EPar_ | Connection U1-3 | Ph-N, Ph-Ph, Ph-N-Isolated | Ph-N |
| Selection of the fourth channel input: phase-to-neutral or phase-to-phase voltage | | | |
| VT4_Ch4Nom_EPar_ | Connection U4 | Ph-N,Ph-Ph | Ph-Ph |
| Definition of the positive direction of the first three input channels, given as normal or inverted | | | |
| VT4_Ch13Dir_EPar_ | Direction U1-3 | Normal,Inverted | Normal |
| Definition of the positive direction of the fourth voltage, given as normal or inverted | | | |
| VT4_Ch4Dir_EPar_ | Direction U4 | Normal,Inverted | Normal |

Table 85 The enumerated parameters of the voltage input function

Integer parameter

| Parameter name | Title | Unit | Min | Max | Step | Default |
|--------------------|---------------|------|-----|-----|------|---------|
| Voltage correction | | | | | | |
| VT4_CorrFact_IPar_ | VT correction | % | 100 | 115 | 1 | 100 |

Table 86 The integer parameter of the voltage input function

Floating point parameters

| Parameter name | Title | Dim. | Min | Max | Default |
|-----------------------------------|------------------|------|-----|------|---------|
| Rated primary voltage of channel1 | | | | | |
| VT4_PriU1_FPar | Rated Primary U1 | kV | 1 | 1000 | 100 |
| Rated primary voltage of channel2 | | | | | |
| VT4_PriU2_FPar | Rated Primary U2 | kV | 1 | 1000 | 100 |
| Rated primary voltage of channel3 | | | | | |
| VT4_PriU3_FPar | Rated Primary U3 | kV | 1 | 1000 | 100 |
| Rated primary voltage of channel4 | | | | | |
| VT4_PriU4_FPar | Rated Primary U4 | kV | 1 | 1000 | 100 |

Table 87 The floating point parameters of the voltage input function

NOTE: The rated primary voltage of the channels is not needed for the voltage input function block itself. These values are passed on to the subsequent function blocks.

| Function | Range | Accuracy |
|------------------|--------------|----------|
| Voltage accuracy | 30% ... 130% | < 0.5 % |

Table 88 Technical data of the voltage input

Measured values

| Measured value | Dim. | Explanation |
|-----------------|--------------|---|
| Voltage Ch - U1 | V(secondary) | Fourier basic component of the voltage in channel UL1 |
| Angle Ch - U1 | degree | Vector position of the voltage in channel UL1 |
| Voltage Ch - U2 | V(secondary) | Fourier basic component of the voltage in channel UL2 |
| Angle Ch - U2 | degree | Vector position of the voltage in channel UL2 |
| Voltage Ch - U3 | V(secondary) | Fourier basic component of the voltage in channel UL3 |
| Angle Ch - U3 | degree | Vector position of the voltage in channel UL3 |
| Voltage Ch - U4 | V(secondary) | Fourier basic component of the voltage in channel U4 |
| Angle Ch - U4 | degree | Vector position of the voltage in channel U4 |

Table 89 The measured analogue values of the voltage input function

NOTE1: The scaling of the Fourier basic component is such if pure sinusoid 57V RMS of the rated frequency is injected, the displayed value is 57V. (The displayed value does not depend on the parameter setting values "Rated Secondary".)

NOTE2: The reference vector (vector with angle 0 degree) is the vector calculated for the first voltage input channel of the first applied voltage input module.

The figure below shows an example of how the calculated Fourier components are displayed in the on-line block. (See the document EuroProt+ "Remote user interface description".)

| [-] VT4 module | | |
|-----------------|-------|-----|
| Voltage Ch - U1 | 56.75 | V |
| Angle Ch - U1 | 0 | deg |
| Voltage Ch - U2 | 51.46 | V |
| Angle Ch - U2 | -112 | deg |
| Voltage Ch - U3 | 60.54 | V |
| Angle Ch - U3 | 128 | deg |
| Voltage Ch - U4 | 0.00 | V |
| Angle Ch - U4 | 0 | deg |

Figure 5 Example: On-line displayed values for the voltage input module

2.1.1.21 Circuit breaker control function block (CB1Pol)

The Circuit breaker control function block can be used to integrate the circuit breaker control of the EuroProt+ device into the station control system and to apply active scheme screens of the local LCD of the device.

The Circuit breaker control function block receives remote commands from the SCADA system and local commands from the local LCD of the device, performs the prescribed checking and transmits the commands to the circuit breaker. It processes the status signals received from the circuit breaker and offers them to the status display of the local LCD and to the SCADA system.

Main features:

- Local (LCD of the device) and Remote (SCADA) operation modes can be enabled or disabled individually.
- The signals and commands of the synchro check / synchro switch function block can be integrated into the operation of the function block.
- Interlocking functions can be programmed by the user applying the inputs “EnaOff” (enabled trip command) and “EnaOn” (enabled close command), using the graphic equation editor.
- Programmed conditions can be used to temporarily disable the operation of the function block using the graphic equation editor.
- The function block supports the control models prescribed by the IEC 61850 standard.
- All necessary timing tasks are performed within the function block:
 - Time limitation to execute a command
 - Command pulse duration
 - Filtering the intermediate state of the circuit breaker
 - Checking the synchro check and synchro switch times
 - Controlling the individual steps of the manual commands
- Sending trip and close commands to the circuit breaker (to be combined with the trip commands of the protection functions and with the close command of the automatic reclosing function; the protection functions and the automatic reclosing function directly gives commands to the CB). The combination is made graphically using the graphic equation editor
- Operation counter
- Event reporting

The Circuit breaker control function block has binary input signals. The conditions are defined by the user applying the graphic equation editor. The signals of the circuit breaker control are seen in the binary input status list.

Technical data

| Function | Accuracy |
|-----------------------|-------------------------------------|
| Operate time accuracy | ±5% or ±15 ms, whichever is greater |

Table 90 Technical data of the circuit breaker control function

Parameters

Enumerated parameter

| Parameter name | Title | Selection range | Default |
|---|---------------|--|---------------|
| The control model of the circuit breaker node according to the IEC 61850 standard | | | |
| CB1Pol_ctlMod_EPar_ | ControlModel* | Direct normal, Direct enhanced, SBO enhanced | Direct normal |

*ControlModel

- Direct normal: only command transmission
- Direct enhanced: command transmission with status check and command supervision
- SBO enhanced: Select Before Operate mode with status check and command supervision

Table 91 Enumerated parameter of the circuit breaker control function

Boolean parameter

| Boolean parameter | Title | Explanation |
|-----------------------|--------------|---|
| CB1Pol_DisOverR_BPar_ | Forced check | If true, then the check function cannot be neglected by the check attribute defined by the IEC 61850 standard |

Table 92 Boolean parameter of the circuit breaker control function

Timer parameters

| Parameter name | Title | Unit | Min | Max | Step | Default |
|---|-----------------------|------|------|-------|------|---------|
| Timeout for signaling failed operation | | | | | | |
| CB1Pol_TimOut_TPar_ | Max.Operating time | msec | 10 | 1000 | 1 | 200 |
| Duration of the generated On and Off impulse | | | | | | |
| CB1Pol_Pulse_TPar_ | Pulse length | msec | 50 | 500 | 1 | 100 |
| Waiting time, at expiry intermediate state of the CB is reported | | | | | | |
| CB1Pol_MidPos_TPar_ | Max.Intermediate time | msec | 20 | 30000 | 1 | 100 |
| Length of the time period to wait for the conditions of the synchron state. After expiry of this time, the synchro switch procedure is initiated (see synchro check/ synchro switch function block description) | | | | | | |
| CB1Pol_SynTimOut_TPar_ | Max.SynChk time | msec | 10 | 5000 | 1 | 1000 |
| Length of the time period to wait for the synchro switch impulse (see synchro check/ synchro switch function block description). After this time the function resets, no switching is performed | | | | | | |
| CB1Pol_SynSWTimOut_TPar_ | Max.SynSW time* | msec | 0 | 60000 | 1 | 0 |
| Duration of the waiting time between object selection and command selection. At timeout no command is performed | | | | | | |
| CB1Pol_SBOTimeout_TPar_ | SBO Timeout | msec | 1000 | 20000 | 1 | 5000 |

* If this parameter is set to 0, then the “StartSW” output is not activated

Table 93 Timer parameters of the circuit breaker control function

Available internal status variable and command channel

To generate an active scheme on the local LCD, there is an internal status variable indicating the state of the circuit breaker. Different graphic symbols can be assigned to the values. (See Chapter 3.2 of the document “EuroCAP configuration tool for EuroProt+ devices”).

| Status variable | Title | Explanation |
|-------------------|--------|---|
| CB1Pol_stVal Ist_ | Status | Can be: 0: Intermediate 1: Off 2: On 3: Bad |

The available control channel to be selected is:

| Command channel | Title | Explanation |
|------------------|-----------|----------------------|
| CB1Pol_Oper_Con_ | Operation | Can be: On Off |

Using this channel, the pushbuttons on the front panel of the device can be assigned to close or open the circuit breaker. These are the “Local commands”.

2.1.1.22 Disconnecter control function (DisConn)

The Disconnecter control function block can be used to integrate the disconnecter control of the EuroProt+ device into the station control system and to apply active scheme screens of the local LCD of the device.

The Disconnecter control function block receives remote commands from the SCADA system and local commands from the local LCD of the device, performs the prescribed checking and transmits the commands to the disconnecter. It processes the status signals received from the disconnecter and offers them to the status display of the local LCD and to the SCADA system.

Main features:

- Local (LCD of the device) and Remote (SCADA) operation modes can be enabled or disabled individually.
- Interlocking functions can be programmed by the user applying the inputs “EnaOff” (enabled trip command) and “EnaOn” (enabled close command), using the graphic equation editor.
- Programmed conditions can be used to temporarily disable the operation of the function block using the graphic equation editor.
- The function block supports the control models prescribed by the IEC 61850 standard.
- All necessary timing tasks are performed within the function block:
 - Time limitation to execute a command
 - Command pulse duration
 - Filtering the intermediate state of the disconnecter
 - Controlling the individual steps of the manual commands
- Sending trip and close commands to the disconnecter
- Operation counter
- Event reporting

The Disconnecter control function block has binary input signals. The conditions are defined by the user applying the graphic equation editor. The signals of the disconnecter control are seen in the binary input status list.

Technical data

| Function | Accuracy |
|-----------------------|-------------------------------------|
| Operate time accuracy | ±5% or ±15 ms, whichever is greater |

Table 94 Technical data of the disconnecter control function

Parameters

Enumerated parameters

| Parameter name | Title | Selection range | Default |
|--|----------------|--|---------------|
| The control model of the disconnecter node according to the IEC 61850 standard | | | |
| DisConn_ctlMod_EPar_ | ControlModel* | Direct normal, Direct enhanced, SBO enhanced | Direct normal |
| Type of switch | | | |
| DisConn_SwTyp_EPar_ | Type of Switch | N/A, Load break, Disconnecter, Earthing Switch, HS Earthing Switch | Disconnecter |

*ControlModel

- Direct normal: only command transmission
- Direct enhanced: command transmission with status check and command supervision
- SBO enhanced: Select Before Operate mode with status check and command supervision

Table 95 Enumerated parameters of the disconnecter control function

Boolean parameter

| Boolean parameter | Title | Explanation |
|------------------------|--------------|---|
| DisConn_DisOverR_BPar_ | Forced check | If true, then the check function cannot be neglected by the check attribute defined by the IEC 61850 standard |

Table 96 Boolean parameter of the disconnector control function

Timer parameters

| Parameter name | Title | Unit | Min | Max | Step | Default |
|---|-----------------------|------|------|-------|------|---------|
| Timeout for signaling failed operation | | | | | | |
| DisConn_TimOut_TPar_ | Max.Operating time | msec | 10 | 20000 | 1 | 1000 |
| Duration of the generated On and Off impulse | | | | | | |
| DisConn_Pulse_TPar_ | Pulse length | msec | 50 | 30000 | 1 | 100 |
| Waiting time, at expiry intermediate state of the disconnector is reported | | | | | | |
| DisConn_MidPos_TPar_ | Max.Intermediate time | msec | 20 | 30000 | 1 | 100 |
| Duration of the waiting time between object selection and command selection. At timeout no command is performed | | | | | | |
| DisConn_SBOTimeout_TPar_ | SBO Timeout | msec | 1000 | 20000 | 1 | 5000 |

Table 97 Timer parameters of the disconnector control function

Available internal status variable and command channel

To generate an active scheme on the local LCD, there is an internal status variable indicating the state of the disconnector. Different graphic symbols can be assigned to the values. (See Chapter 3.2 of the document "EuroCAP configuration tool for EuroProt+ devices").

| Status variable | Title | Explanation |
|----------------------|--------|--|
| DisConn_l_stVal_1st_ | Status | Can be: 0: Intermediate 1: Off 2: On 3:Bad |

The available control channel to be selected is:

| Command channel | Title | Explanation |
|-------------------|-----------|----------------------|
| DisConn_Oper_Con_ | Operation | Can be: On Off |

Using this channel, the pushbuttons on the front panel of the device can be assigned to close or open the disconnector. These are the "Local commands".

2.1.1.23 Line measurement function (MXU)

The input values of the EuroProt+ devices are the secondary signals of the voltage transformers and those of the current transformers.

These signals are pre-processed by the “Voltage transformer input” function block and by the “Current transformer input” function block. These function blocks are described in separate documents. The pre-processed values include the Fourier basic harmonic components of the voltages and currents and the true RMS values. Additionally, it is in these functions that parameters are set concerning the voltage ratio of the primary voltage transformers and current ratio of the current transformers.

Based on the pre-processed values and the measured transformer parameters, the “Line measurement” function block calculates – depending on the hardware and software configuration – the primary RMS values of the voltages and currents and some additional values such as active and reactive power, symmetrical components of voltages and currents. These values are available as primary quantities and they can be displayed on the on-line screen of the device or on the remote user interface of the computers connected to the communication network and they are available for the SCADA system using the configured communication system.

It is usual for the SCADA systems that they sample the measured and calculated values in regular time periods and additionally they receive the changed values as reports at the moment when any significant change is detected in the primary system. The “Line measurement” function block is able to perform such reporting for the SCADA system.

The inputs of the line measurement function are

- the Fourier components and true RMS values of the measured voltages and currents,
- frequency measurement,
- parameters.

The outputs of the line measurement function are

- displayed measured values,
- reports to the SCADA system.

NOTE: the scaling values are entered as parameter setting for the “Voltage input” function block and for the “Current input” function block.

The measured values of the line measurement function depend on the hardware configuration.

The available quantities are described in the relevant configuration description documents.

As an example, the Figure below shows the list of the measured values available in a configuration for compensated networks.

| [-] Line measurement | | |
|----------------------|----------|------|
| Active Power - P | 17967.19 | kW |
| Reactive Power - Q | 10414.57 | kVAr |
| Current L1 | 97 | A |
| Current L2 | 97 | A |
| Current L3 | 97 | A |
| Voltage L12 | 120.0 | kV |
| Voltage L23 | 120.0 | kV |
| Voltage L31 | 120.0 | kV |
| Residual Voltage | 0.0 | kV |
| Frequency | 50.00 | Hz |

For reporting to the SCADA, additional information is needed, which is defined in parameter setting. As an example in a configuration for solidly grounded the following parameters are available:

Parameters

Enumerated parameters


| Parameter name | Title | Selection range | Default |
|--|-----------------------|----------------------------|-----------|
| Selection of the reporting mode for active power measurement | | | |
| MXU_PRepMode_EPar_ | Operation ActivePower | Off, Amplitude, Integrated | Amplitude |
| Selection of the reporting mode for current measurement | | | |
| MXU_IRepMode_EPar_ | Operation Current | Off, Amplitude, Integrated | Amplitude |

Table 98 Enumerated parameters of the line measurement function

Floating point parameters


| Parameter name | Title | Dim. | Min | Max | Step | Default |
|-------------------------------------|--------------------|------|-----|--------|------|---------|
| Deadband value for the active power | | | | | | |
| MXU_PDeadB_FPar_ | Deadband value - P | MW | 0.1 | 100000 | 0.01 | 10 |
| Range value for the active power | | | | | | |
| MXU_PRange_FPar_ | Range value - P | MW | 1 | 100000 | 0.01 | 500 |
| Deadband value for the current | | | | | | |
| MXU_IDeadB_FPar_ | Deadband value - I | A | 1 | 2000 | 1 | 10 |
| Range value for the current | | | | | | |
| MXU_IRange_FPar_ | Range value - I | A | 1 | 5000 | 1 | 500 |

Table 99 Floating point parameters of the line measurement function

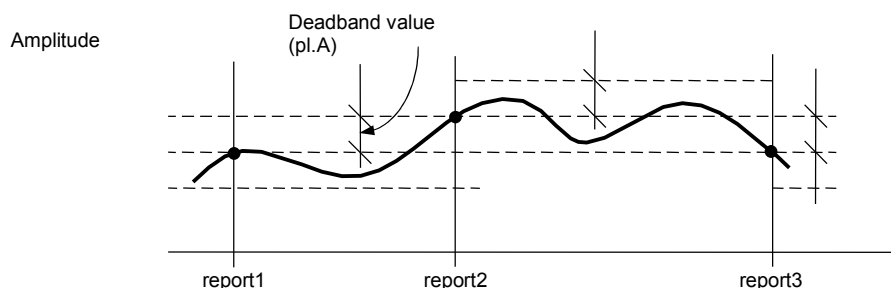

If the “Amplitude” mode is selected for reporting, a report is generated if the measured value leaves the deadband around the previously reported value. As an example, Figure above shows that the current becomes higher than the value reported in “report1” plus the deadband value, this results “report2”, etc.

The “Range” parameters in Table above are needed to evaluate a measurement as “out-of-range”.

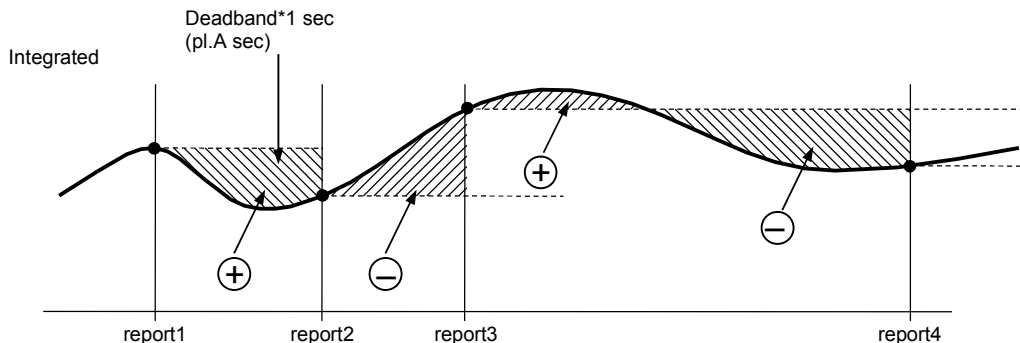

If the “Integrated” mode is selected for reporting, a report is generated if the time integral of the measured value since the last report becomes larger, in the positive or negative direction, then the [deadband*1sec] area. As an example, Figure above shows that the integral of the current in time becomes higher than the Deadband value multiplied by 1sec, this results “report2”, etc.

Periodic reporting is generated independently of the changes of the measured values when the defined time period elapses. As an example, the required parameter setting is shown in Table below.

Integer parameters

| Parameter name | Title | Unit | Min | Max | Step | Default |
|--|-----------------|------|-----|------|------|---------|
| Reporting time period for the active power | | | | | | |
| MXU_PIntPer_IPar_ | Report period P | sec | 0 | 3600 | 1 | 0 |
| Reporting time period for the current | | | | | | |
| MXU_IIntPer_IPar_ | Report period I | sec | 0 | 3600 | 1 | 0 |

Table 100 Integer parameters of the line measurement function

If the reporting time period is set to 0, then no periodic reporting is performed for this quantity.

All reports can be disabled for a quantity if the reporting mode is set to “Off” by the Selection parameter.

Technical data

| Function | Range | Accuracy |
|---------------------------------|-------------------------|-----------------------|
| Current accuracy | | |
| with CT/5151 or CT/5102 modules | 0,2 In – 0,5 In | ±2%, ±1 digit |
| | 0,5 In – 20 In | ±1%, ±1 digit |
| with CT/1500 module | 0,03 In – 2 In | ±0,5%, ±1 digit |
| Voltage accuracy | 5 – 150% of Un | ±0.5% of Un, ±1 digit |
| Power accuracy | I>5% In | ±3%, ±1 digit |
| Frequency accuracy | U>3.5%Un 45Hz – 55Hz | 2mHz |

Table 101 Technical data of the line measurement function

2.1.2 Monitoring functions

2.1.2.1 Disturbance recorder function

The E2-Feeder configuration contains a disturbance recorder function. The details are described in the document shown in Table 102.

| Name | Title | Document |
|------|-----------------|---|
| DRE | Disturbance Rec | <i>Disturbance recorder function block description</i> |

Table 102 Implemented disturbance recorder function

The recorded analog channels:

| Recorded analog signal | Explanation |
|------------------------|---|
| IL1 | Measured current for all overcurrent protection functions in line 1 |
| IL2 | Measured current for all overcurrent protection functions in line 2 |
| IL3 | Measured current for all overcurrent protection functions in line 3 |
| I4 | Measured current of the fourth current input channel (Io) |
| UL1 | Measured voltage of line 1 |
| UL2 | Measured voltage of line 2 |
| UL3 | Measured voltage of line 3 |
| U4 | Measured voltage of the fourth voltage input channel (Uo) |

Table 103 Disturbance recorder, recorded analog channels

The recorded binary channels:

| Recorded binary signal | Explanation |
|------------------------|--|
| General Trip | Trip command of the overcurrent functions or capacitor protection function |
| I> Start1 | Low setting stage start signal of the 3ph time OC prot. function |
| I> Trip1 | Low setting stage trip command of the 3ph time OC prot. function |
| I> Start2 | High setting stage start signal of the 3ph time OC prot. function |
| I> Trip2 | High setting stage trip command of the 3ph time OC prot. function |
| Io> Start1 | Low setting stage start signal of the Res. time OC prot. function |
| Io> Trip1 | Low setting stage trip command of the Res. time OC prot. function |
| Io> Start2 | High setting stage start signal of the Res. time OC prot. function |
| Io> Trip2 | High setting stage trip command of the Res. time OC prot. function |
| CB Open | Binary input signal of Circuit Breaker open state |
| CB Close | Binary input signal of Circuit Breaker closed state |
| Rec Blocked | Blocked state of auto reclosing function |
| Close | Close command of auto reclosing function |
| Final Trip | Final trip of auto reclosing function |

Table 104 Disturbance recorder, recorded binary channels

Enumerated parameter

| Parameter name | Title | Selection range | Default |
|--------------------------|-----------|-----------------|---------|
| Parameter for activation | | | |
| DRE_Oper_EPar_ | Operation | Off, On | Off |

Table 105 The enumerated parameter of the disturbance recorder function

Timer parameters

| Parameter name | Title | Unit | Min | Max | Step | Default |
|---------------------------|-----------|------|-----|------|------|---------|
| Pre-fault time: | | | | | | |
| DRE_PreFault_TPar_ | PreFault | msec | 50 | 500 | 1 | 200 |
| Post-fault time: | | | | | | |
| DRE_PostFault_TPar_ | PostFault | msec | 50 | 1000 | 1 | 200 |
| Overall-fault time limit: | | | | | | |
| DRE_MaxFault_TPar_ | MaxFault | msec | 200 | 5000 | 1 | 1000 |

Table 106 The timer parameters of the disturbance recorder function

2.1.2.2 Event recorder

The events of the device and those of the protection functions are recorded with a time stamp of 1 ms time resolution. This information with indication of the generating function can be checked on the touch-screen of the device in the “Events” page, or using an Internet browser of a connected computer.

| Event | Explanation |
|---|--|
| Three-phase instantaneous overcurrent protection function (IOC50) | |
| Low Trip L1 | Low setting stage of Instantaneous overcurrent protection: trip command in phase L1 |
| Low Trip L2 | Low setting stage of Instantaneous overcurrent protection: trip command in phase L2 |
| Low Trip L3 | Low setting stage of Instantaneous overcurrent protection: trip command in phase L3 |
| Low General Trip | Low setting stage of Instantaneous overcurrent protection: general trip |
| High Trip L1 | High setting stage of Instantaneous overcurrent protection: trip command in phase L1 |
| High Trip L2 | High setting stage of Instantaneous overcurrent protection: trip command in phase L2 |
| High Trip L3 | High setting stage of Instantaneous overcurrent protection: trip command in phase L3 |
| High General Trip | High setting stage of Instantaneous overcurrent protection: general trip |
| Three-phase overcurrent protection function (TOC51) | |
| Low Start L1 | Low setting stage start signal in phase L1 |
| Low Start L2 | Low setting stage start signal in phase L2 |
| Low Start L3 | Low setting stage start signal in phase L3 |
| Low General Start | Low setting stage general start signal |
| Low General Trip | Low setting stage general trip command |
| High Start L1 | High setting stage start signal in phase L1 |
| High Start L2 | High setting stage start signal in phase L2 |
| High Start L3 | High setting stage start signal in phase L3 |
| High General Start | High setting stage general start signal |
| High General Trip | High setting stage general trip command |
| Residual instantaneous overcurrent protection function (IOC50N) | |
| Low General Trip | Low setting stage general trip command |
| High General Trip | High setting stage general trip command |
| Residual overcurrent protection function (TOC51N) | |
| Low General Start | Low setting stage general start signal |
| Low General Trip | Low setting stage general trip command |
| High General Start | High setting stage general start signal |
| High General Trip | High setting stage general trip command |

| | |
|--|--|
| Directional residual overcurrent protection function (TOC67N) | |
| Low Start | Low setting stage general start signal |
| Low Trip | Low setting stage general trip command |
| High Start | High setting stage general start signal |
| High Trip | High setting stage general trip command |
| Negative sequence overcurrent protection (TOC46) | |
| General Start | General start signal |
| General Trip | General trip command |
| Line thermal protection (TTR49L) | |
| Alarm | Differential protection alarm signal |
| General Trip | General trip command |
| Definite time overvoltage protection function (TOV59) | |
| Start L1 | Start signal in phase L1 |
| Start L2 | Start signal in phase L2 |
| Start L3 | Start signal in phase L3 |
| General Start | General start signal |
| General Trip | General trip command |
| Definite time undervoltage protection function (TUV27) | |
| Start L1 | Start signal in phase L1 |
| Start L2 | Start signal in phase L2 |
| Start L3 | Start signal in phase L3 |
| General Start | General start signal |
| General Trip | General trip command |
| Definite time zero sequence overvoltage protection function (TOV59N) | |
| General Start | General start signal |
| General Trip | General trip command |
| Automatic reclosing function (REC79) | |
| Blocked | Blocked state of the automatic reclosing function |
| Close Command | Close command of the automatic reclosing function |
| Status | State of the automatic reclosing function |
| Actual cycle | Running cycle of the automatic reclosing function |
| Final Trip | Definite trip command at the end of the automatic reclosing cycles |
| Breaker failure protection function (BRF50MV) | |
| Backup Trip | Repeated trip command |
| CB Wear function | |
| Alarm | Alarm signal of the CB wear function |
| Measurement function (MXU) | |
| Current L1 | Current violation in phase L1 |
| Current L2 | Current violation in phase L2 |
| Current L3 | Current violation in phase L3 |
| Voltage L12 | Voltage violation in loop L1-L2 |
| Voltage L23 | Voltage violation in loop L2-L3 |
| Voltage L31 | Voltage violation in loop L3-L1 |
| Residual Voltage | |
| Active Power – P | Active Power – P violation |
| Reactive Power – Q | Reactive Power – Q violation |
| Apparent Power – S | Apparent Power – S violation |
| Power factor | |
| Frequency | Frequency violation |
| Circuit breaker (CB1Pol) | |
| Status | State of the circuit breaker function |
| Enable Close | Close command is enabled |
| Enable Open | Open command is enabled |
| Local | Local mode of operation |
| Operation counter | Operation counter |

| | |
|--|--|
| Disconnecter_1 | |
| Status | Status of the bus disconnector |
| Enable Close | Close command is enabled |
| Enable Open | Open command is enabled |
| Local | Local mode of operation |
| Operation counter | Operation counter |
| Disconnecter_2 | |
| Status | Status of the bus disconnector |
| Enable Close | Close command is enabled |
| Enable Open | Open command is enabled |
| Local | Local mode of operation |
| Operation counter | Operation counter |
| Current unbalance function (VCB60) | |
| General Start | Low setting stage general start signal |
| General Trip | Low setting stage general trip command |
| General Start | High setting stage general start signal |
| General Trip | High setting stage general trip command |
| Directional overpower protection function (DOP32) | |
| General Start | General start signal |
| General Trip | General trip command |
| Directional underpower protection function (DUP32) | |
| General Start | General start signal |
| General Trip | General trip command |
| Trip logic (TRC94) | |
| General Trip | General trip command |
| (Con4Ch) | |
| Status Ch1 | Control status in channel 1 |
| Status Ch2 | Control status in channel 2 |
| Status Ch3 | Control status in channel 3 |
| Status Ch4 | Control status in channel 4 |
| GGIO8 | |
| Input 01 | Event channel, free programmable by the user |
| Input 02 | Event channel, free programmable by the user |
| Input 03 | Event channel, free programmable by the user |
| Input 04 | Event channel, free programmable by the user |
| Input 05 | Event channel, free programmable by the user |
| Input 06 | Event channel, free programmable by the user |
| Input 07 | Event channel, free programmable by the user |
| Input 08 | Event channel, free programmable by the user |

Table 107 List of the possible events

2.1.2.3 Measured values

The measured values can be checked on the touch-screen of the device in the “On-line functions” page, or using an Internet browser of a connected computer. The displayed values are secondary voltages and currents, except the block “Line measurement”. This specific block displays the measured values in primary units, using CT primary value settings.

| Analog value | Explanation |
|-------------------------|--|
| CT4 module | |
| Current Ch - I1 | RMS value of the Fourier fundamental harmonic current component in phase L1 |
| Angle Ch - I1 | Phase angle of the Fourier fundamental harmonic current component in phase L1* |
| Current Ch - I2 | RMS value of the Fourier fundamental harmonic current component in phase L2 |
| Angle Ch - I2 | Phase angle of the Fourier fundamental harmonic current component in phase L2* |
| Current Ch - I3 | RMS value of the Fourier fundamental harmonic current component in phase L3 |
| Angle Ch - I3 | Phase angle of the Fourier fundamental harmonic current component in phase L3* |
| Current Ch - I4 | RMS value of the Fourier fundamental harmonic current component in Channel I4 |
| Angle Ch - I4 | Phase angle of the Fourier fundamental harmonic current component in Channel I4* |
| VT4 module | |
| Voltage Ch – U1 | RMS value of the Fourier fundamental harmonic voltage component in phase L1 |
| Angle Ch – U1 | Phase angle of the Fourier fundamental harmonic voltage component in phase L1* |
| Voltage Ch – U2 | RMS value of the Fourier fundamental harmonic voltage component in phase L2 |
| Angle Ch – U2 | Phase angle of the Fourier fundamental harmonic voltage component in phase L2* |
| Voltage Ch – U3 | RMS value of the Fourier fundamental harmonic voltage component in phase L3 |
| Angle Ch – U3 | Phase angle of the Fourier fundamental harmonic voltage component in phase L3* |
| Voltage Ch – U4 | RMS value of the Fourier fundamental harmonic voltage component in Channel U4 |
| Angle Ch – U4 | Phase angle of the Fourier fundamental harmonic voltage component in Channel U4* |
| Line thermal protection | |
| Calc. Temperature | Calculated line temperature |

* The reference angle is the phase angle of “Voltage Ch - U1”

Table 108 Measured analog values

2.1.3 TRIP contact assignment

The outputs of the “phase selective trip logic function” are connected directly to the contacts of the trip module (TRIP+/1101 module in position “O”).

| Binary status signal | Title | Connected to the contact |
|----------------------|--------------|-----------------------------------|
| TRC94_GenTr_Grl_ | General Trip | TRIP+/1101 module in position “O” |
| | | Trip |

Table 109 The connected signals of the phase-selective trip logic function

To the inputs of the “phase-selective trip logic function” some signals are assigned during factory configuration, some signals however depend on the programming by the user. **The conditions are defined by the user applying the graphic equation editor.** The factory defined inputs and the user defined inputs are in “OR” relationship.

The factory defined signals are listed in Table 110.

| Input | Binary status signal | Explanation |
|--------------|------------------------|--|
| Gen. Trip | IOC50_GenTr_Grl_ | Instantaneous overcurrent protection function: trip command |
| | OR IOC50N_GenTr_Grl | OR Residual instantaneous overcurrent protection function: trip command |
| Block | n.a. | Blocking the outputs of the trip logic function |
| Ext Open | n.a. | External open command |

Table 110 The factory defined binary input signals of the trip logic function

The user defined signals are listed in Table 111.

| Input | Binary status signal | Explanation |
|--------------|-----------------------|---|
| Gen. Trip | TRC94_Tr_GrO_ | Request for three-phase trip command |
| Block | TRC94_Blk_GrO_ | Blocking the outputs of the phase-selective trip logic function |
| Ext Open | External open command | Local or remote open command from CB1Pol function block |

Table 111 The user defined binary input signals of the trip logic function

2.1.4 LED assignment


On the front panel of the device there are “User LED”-s with the “Changeable LED description label” (See the document “**Quick start guide to the devices of the EuroProt+ product line**”). Some LED-s are factory assigned, some are free to be defined by the user.

| LED | Explanation |
|--------------|--|
| General Trip | Trip command generated by the TRC94 function |
| I> Trip | Trip command all of the three-phase OC protection functions |
| Io> Trip | Trip command all of the residual OC protection functions |
| Voltage Trip | Trip command all of the voltage protection functions |
| Therm Trip | Trip command of the thermal protection function |
| P< Trip | Trip command of the directional underpower protection function |
| P> Trip | Trip command of the directional overpower protection function |
| Local | Local operation enabled |
| Rec Blocked | Blocked state of auto reclosing function |
| LED10 | Free LED |
| LED11 | Free LED |
| LED12 | Free LED |
| LED13 | Free LED |
| LED14 | Free LED |
| LED15 | Free LED |
| LED16 | Free LED |

Table 112 LED assignment

3 External Connections

3.1 The 42 inch rack of EuroProt+ without Cable Type

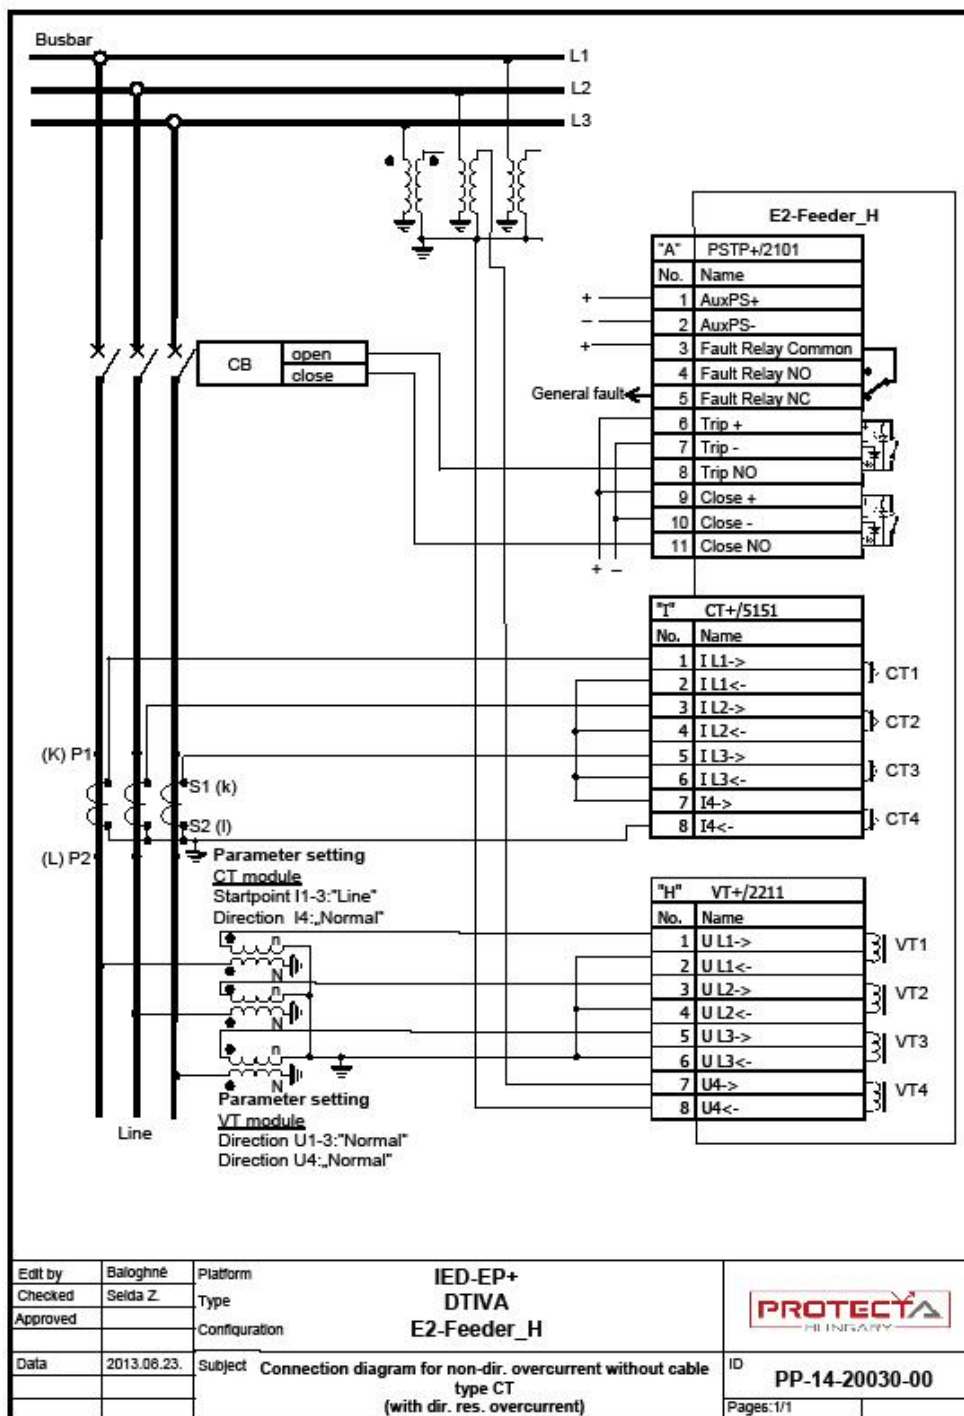

3.2 The 42 inch rack of EuroProt+ with Cable Type

